







“3301”

versionsnummer: 13.09.2023




Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

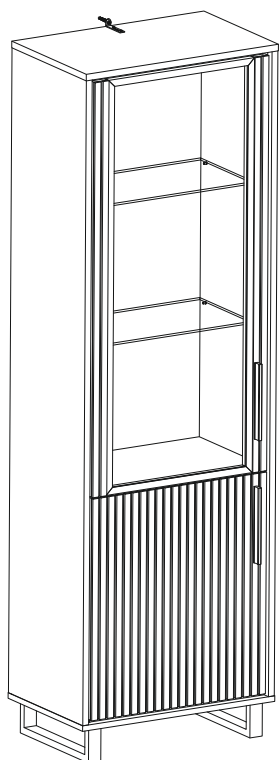






φ8

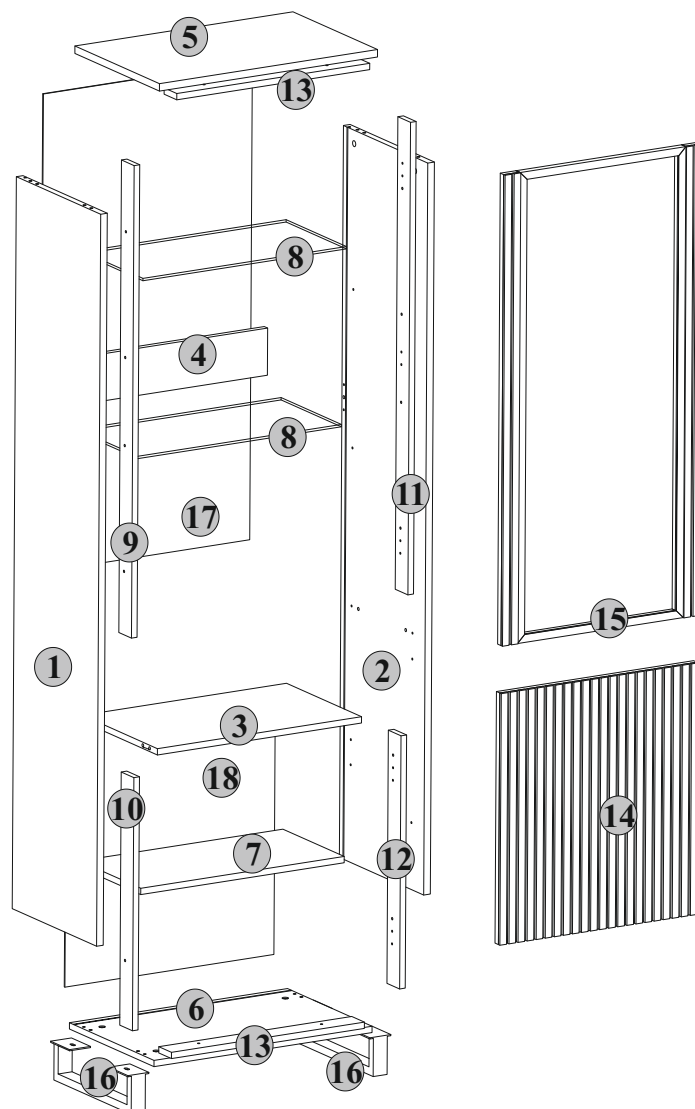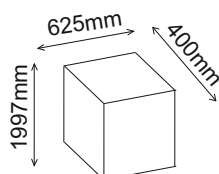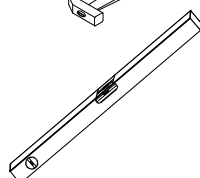








B5








B1





B2




B3




B4



1





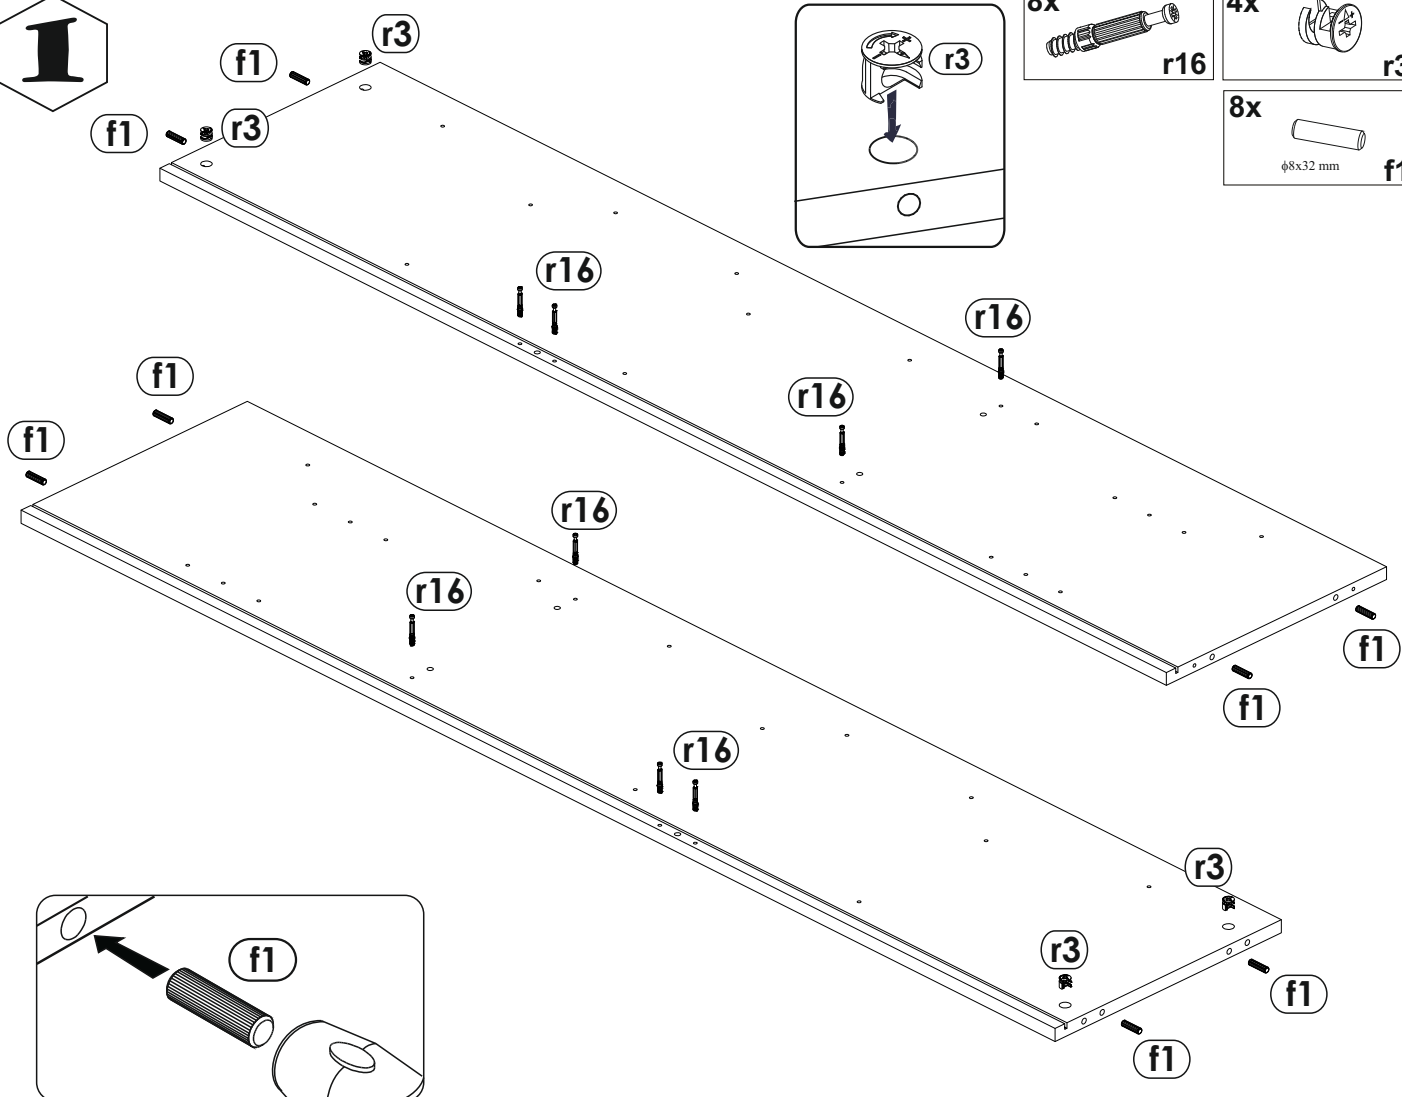


2






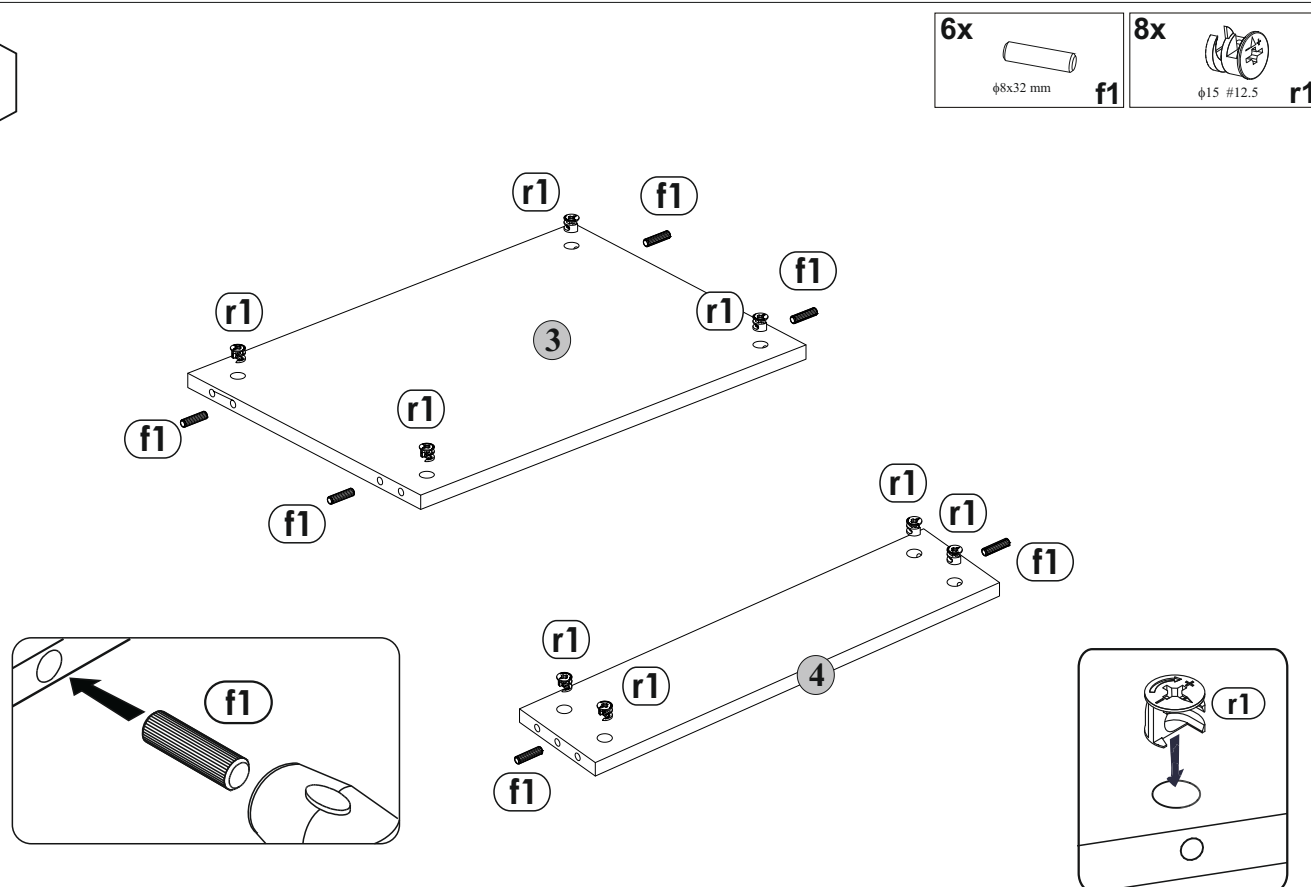


2

3

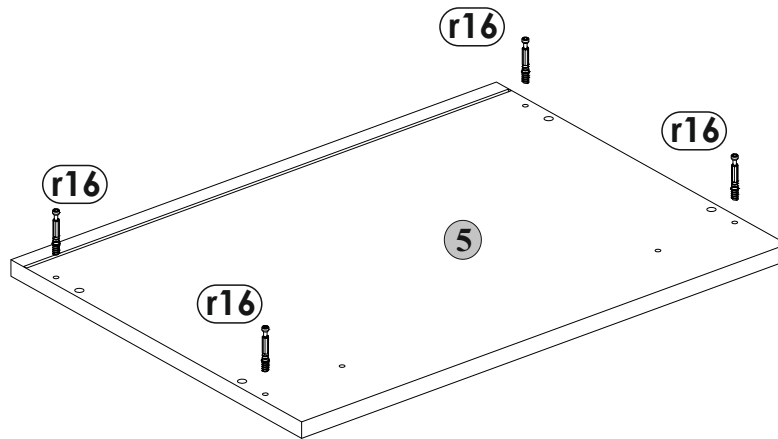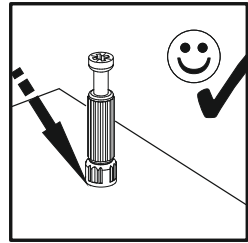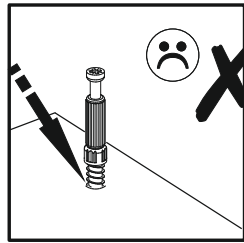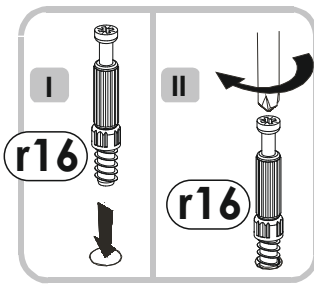

4

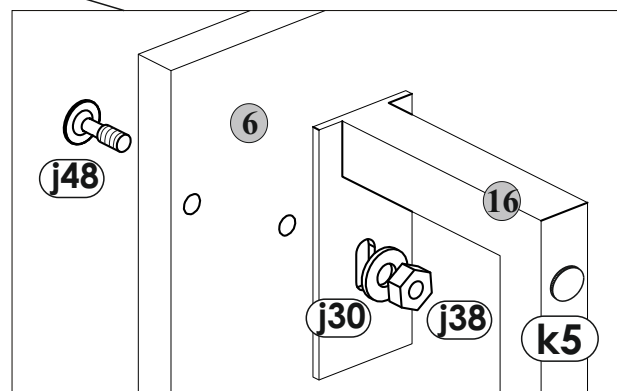


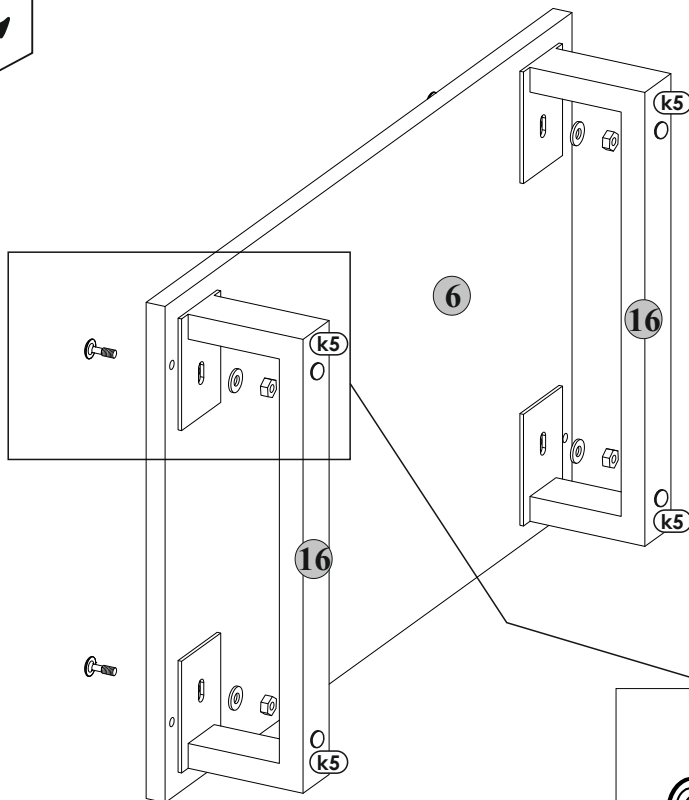


3



5

5x
a2

10x
p1
φ3.5x16 mm

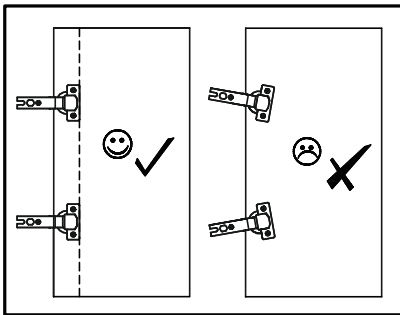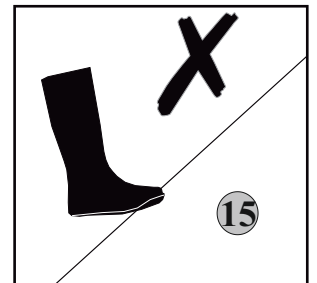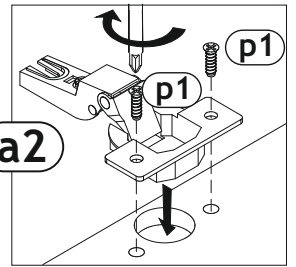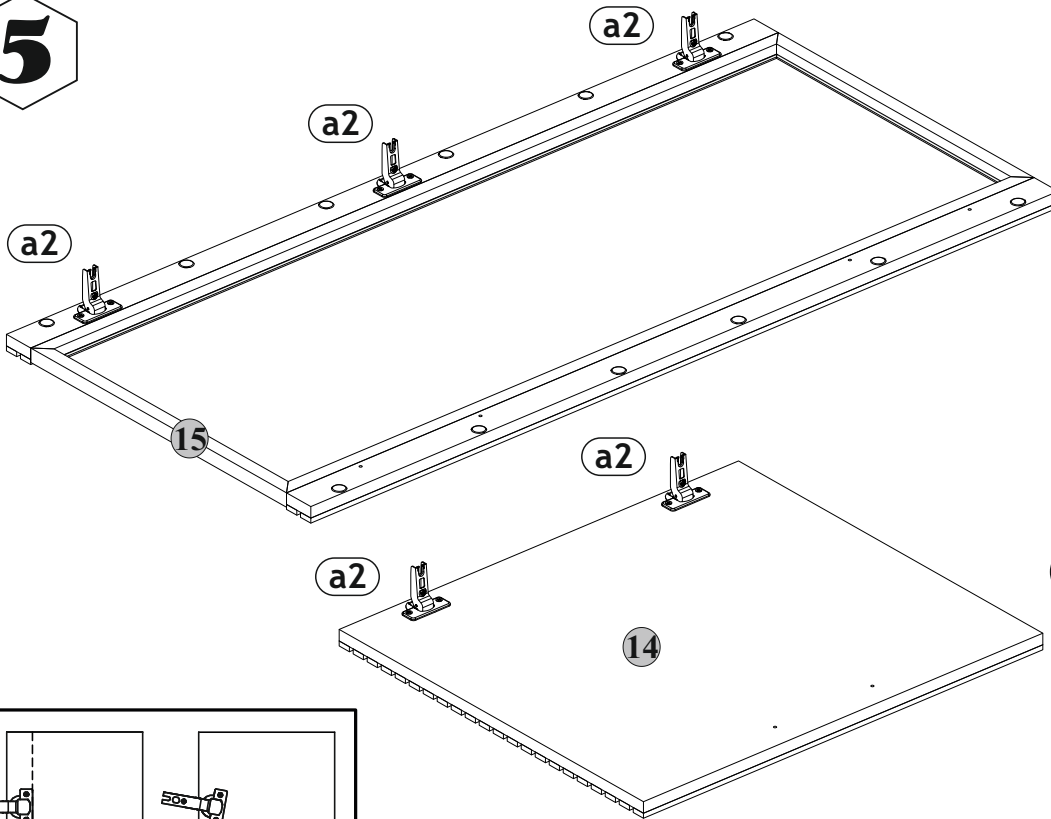


6

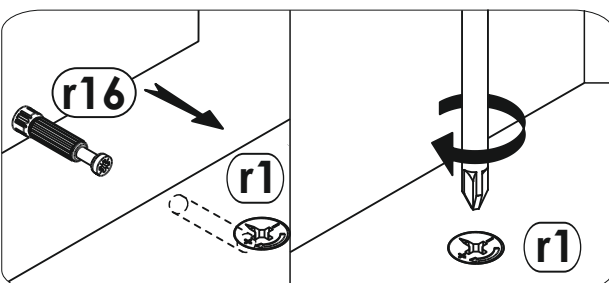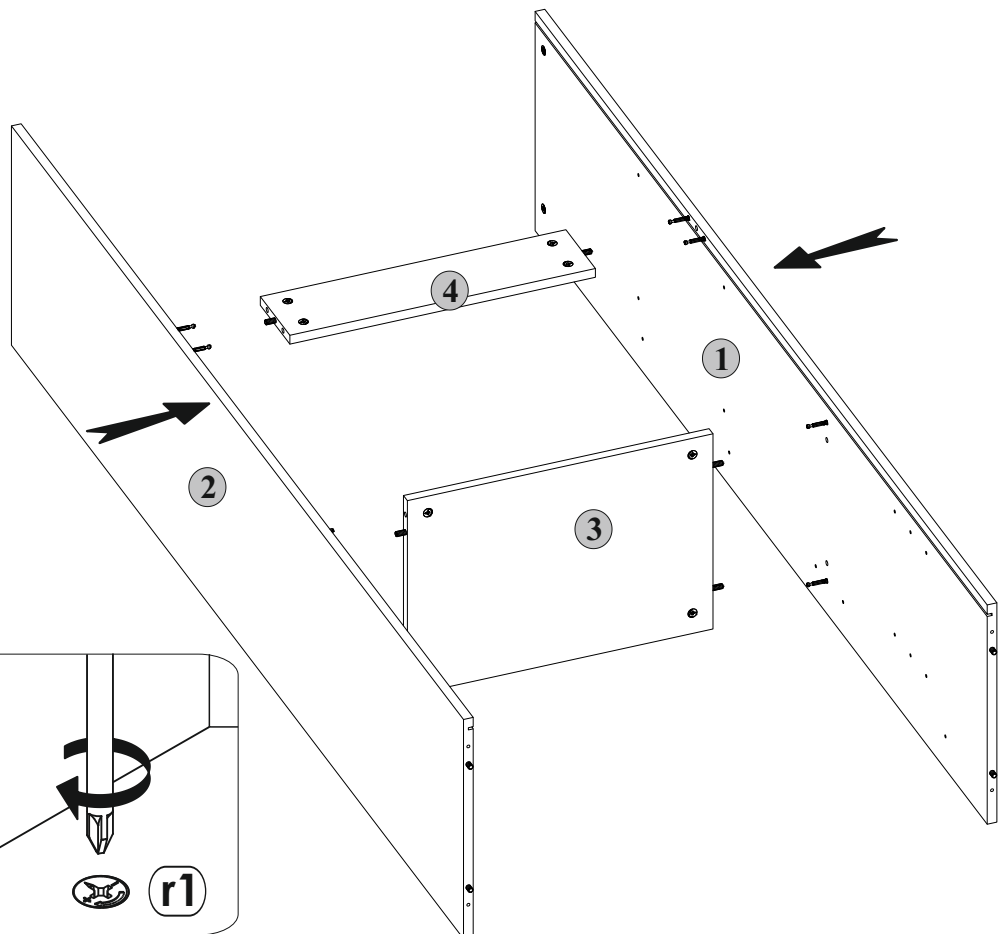


4

7



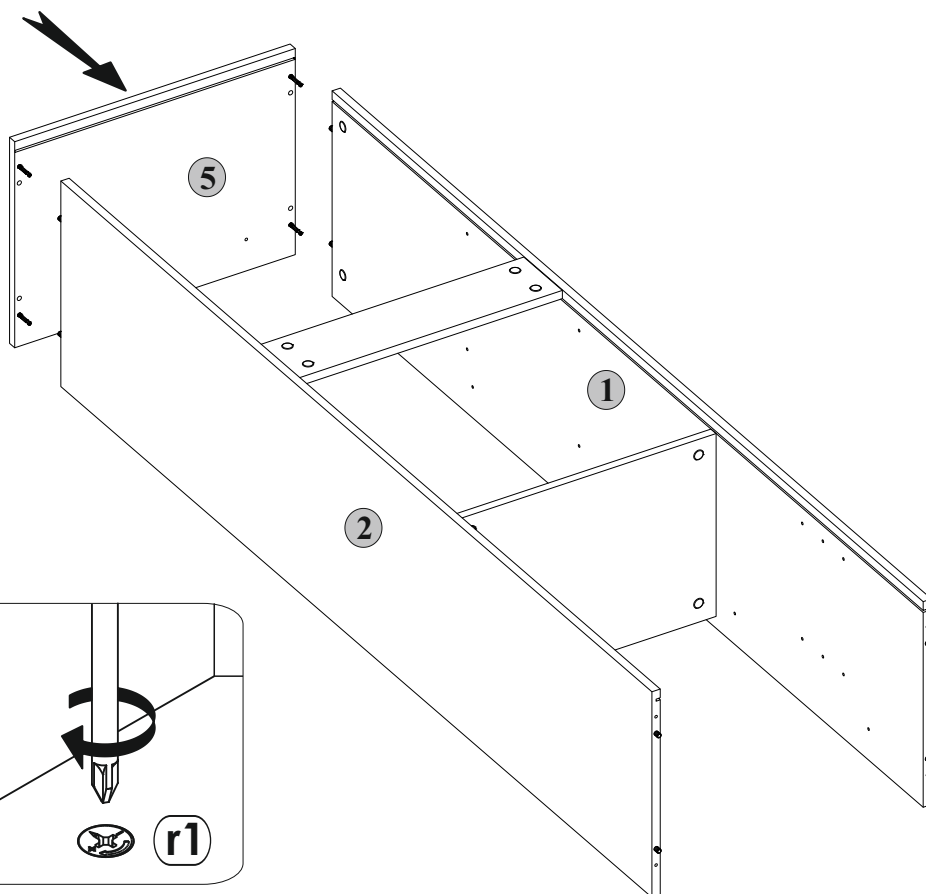


8

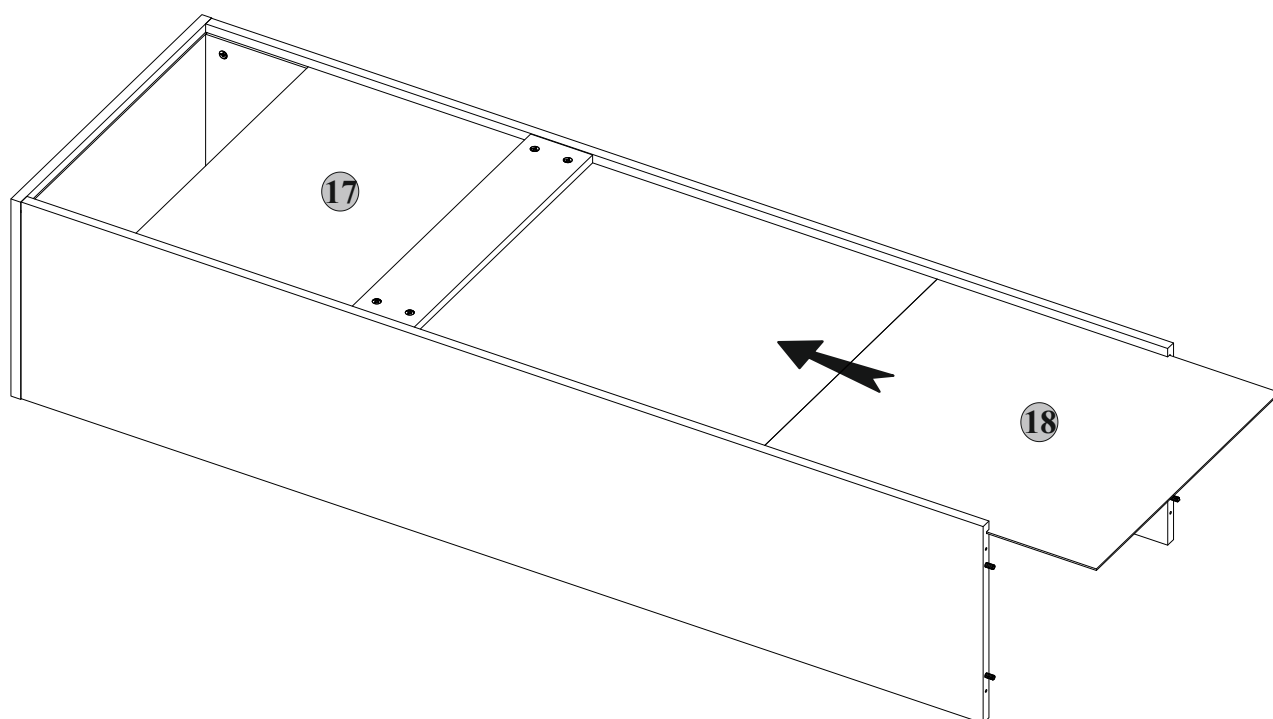






9

- 4x  e1
- 4x  s1
- 1x  z1

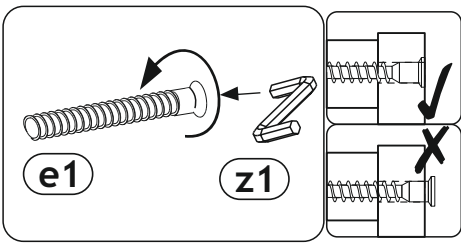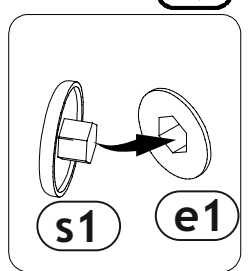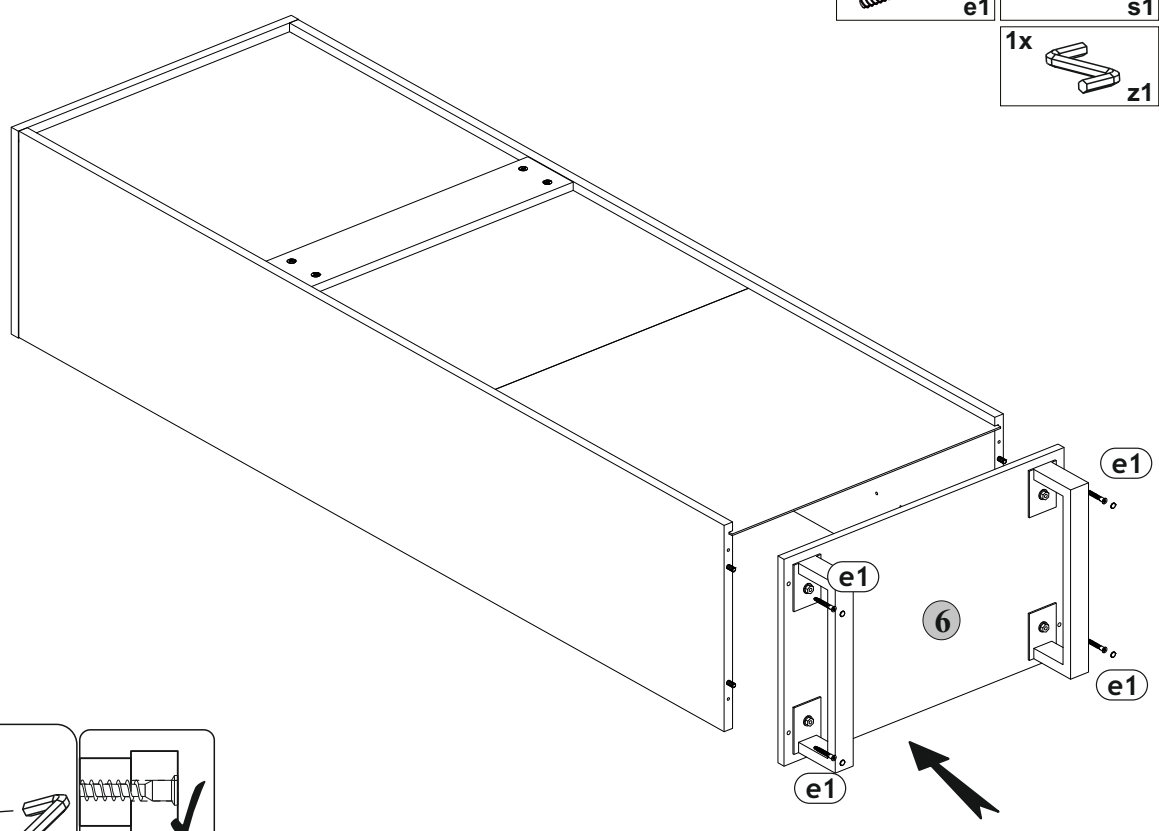


10

- 14x  l2
- 2x  i9
- 2x  p4 $\phi 3.5 \times 16 \text{ mm}$

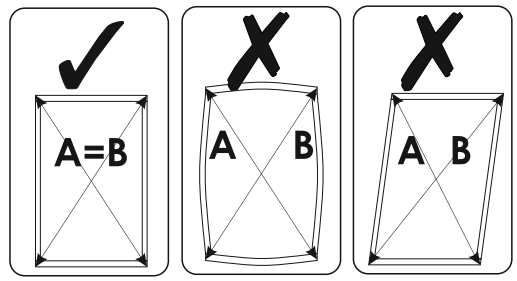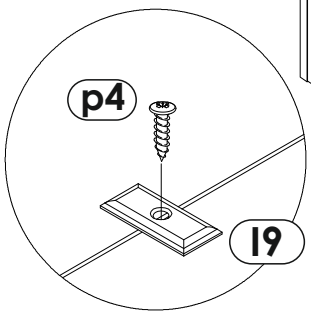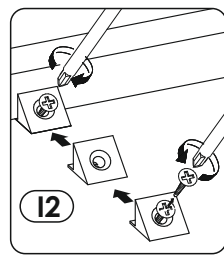
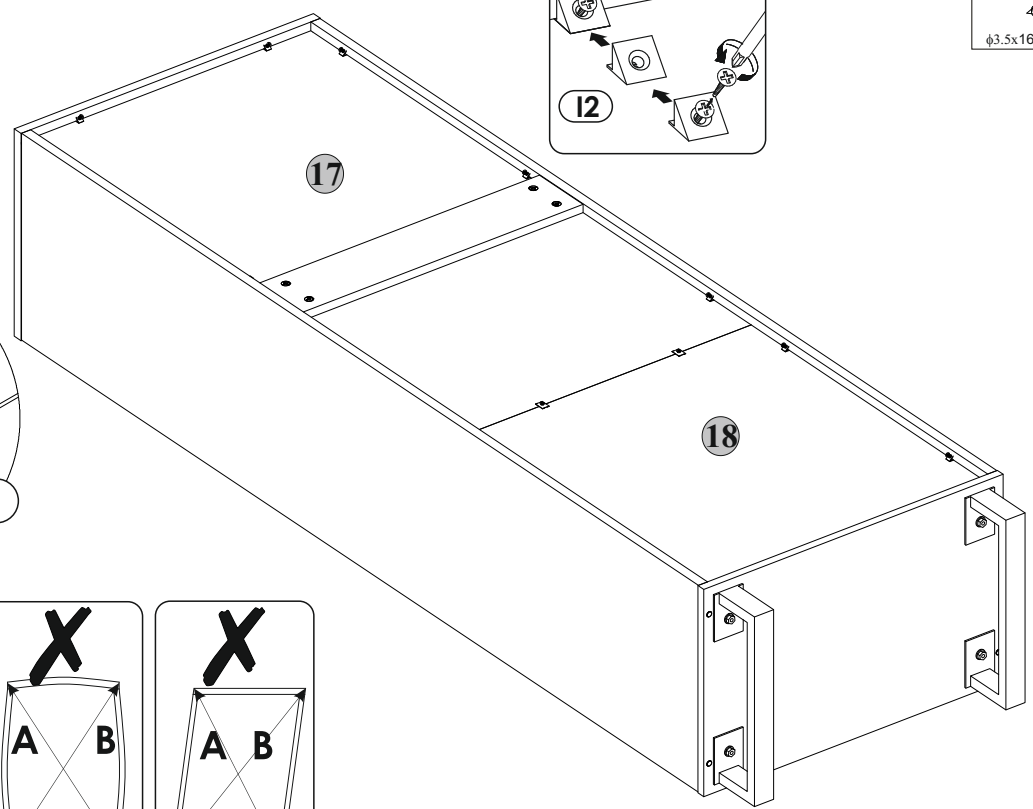


6

11

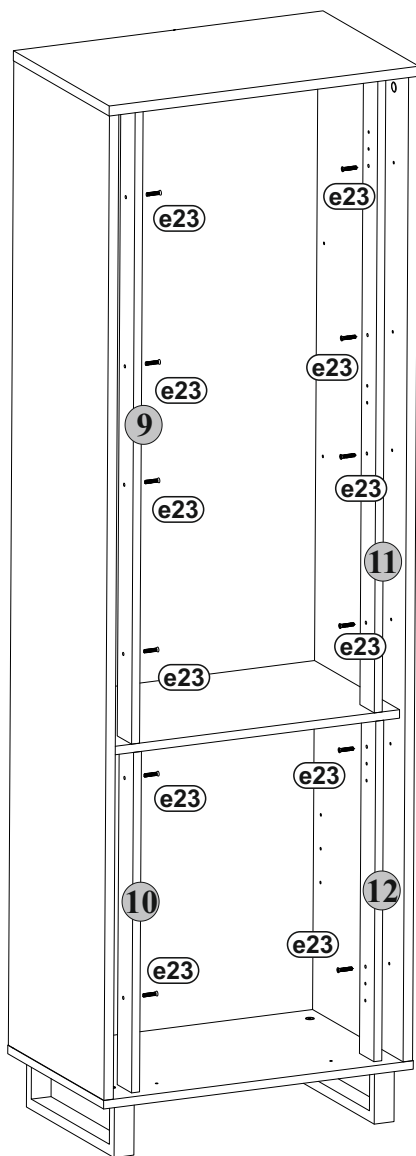


16x
φ6x20 mm
e23




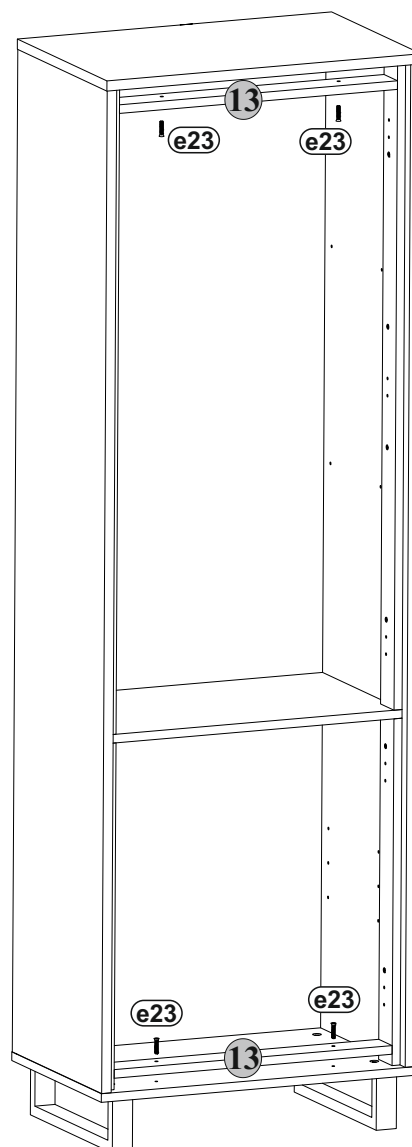
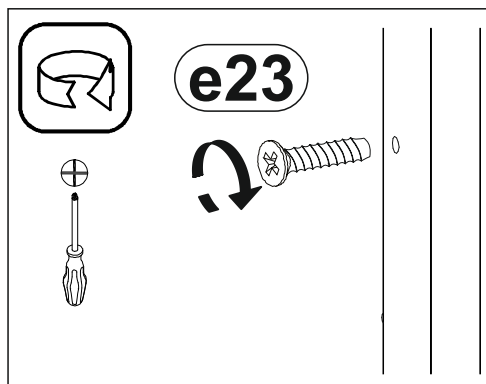


12

Version L

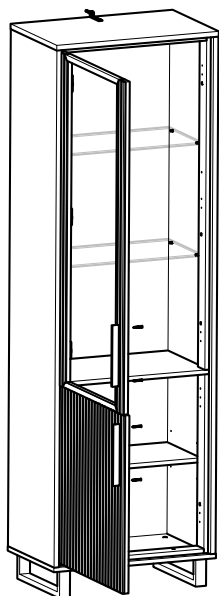

Version R

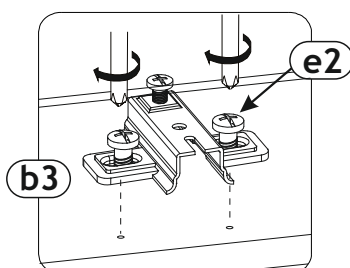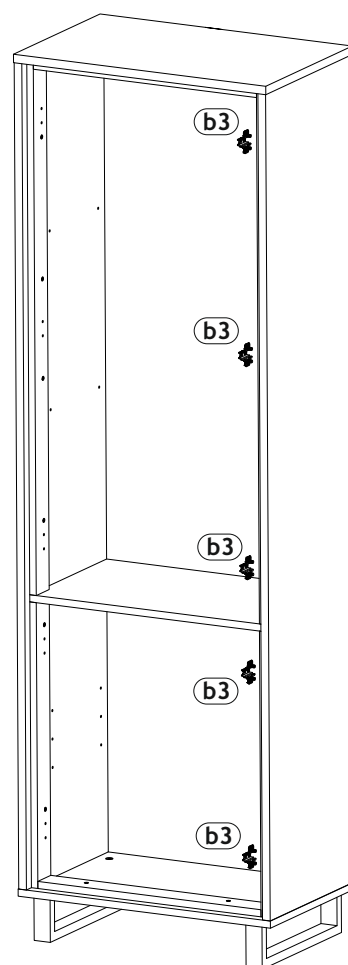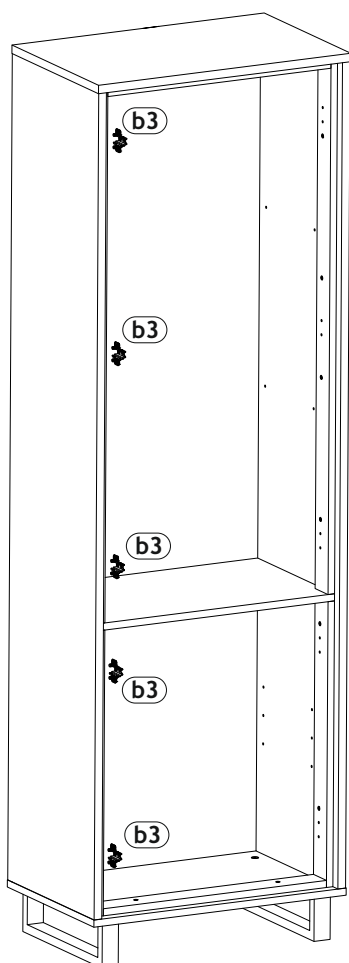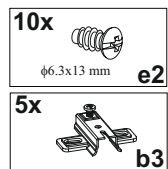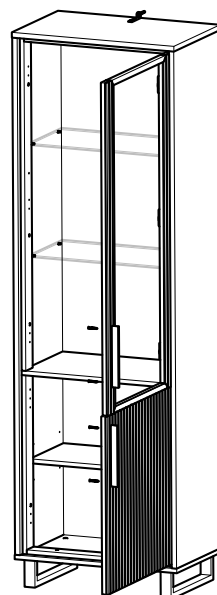



4x  p42

2x















c105

1x  **t17**

1x  n14

2x  $\phi 3.5 \times 16 \text{ mm}$ **p1**

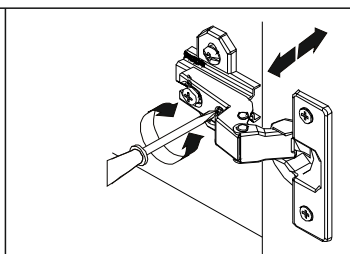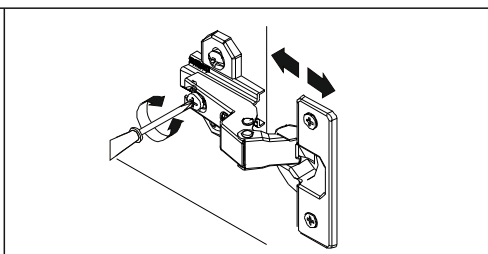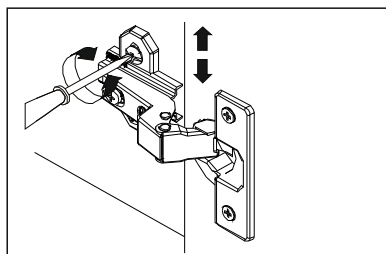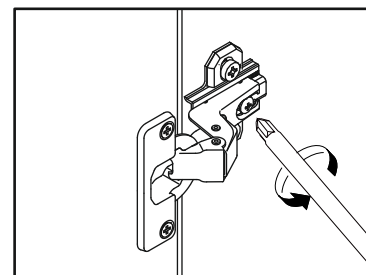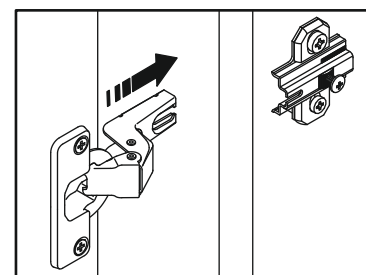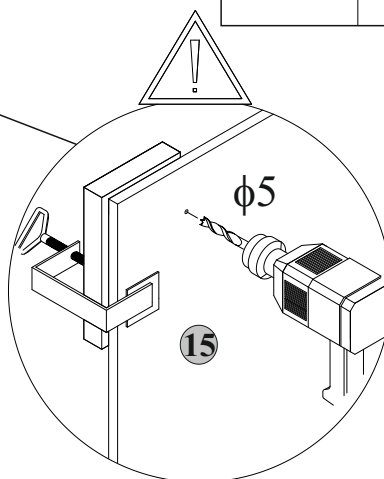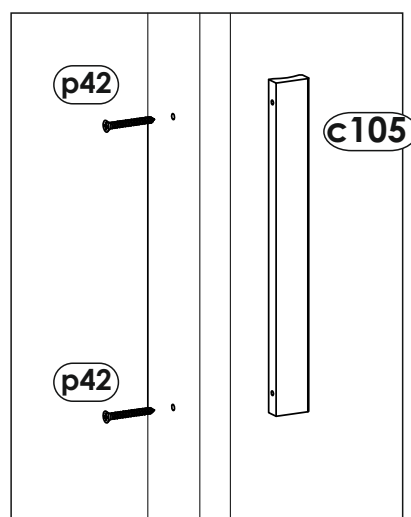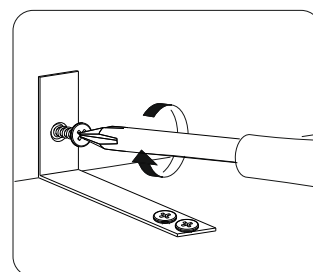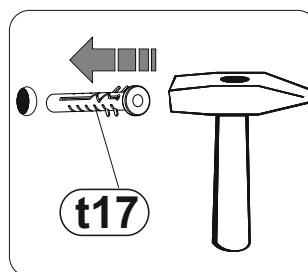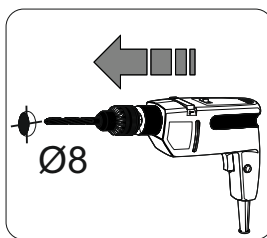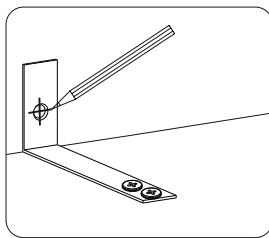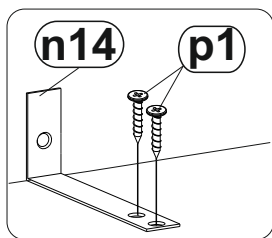

9

