
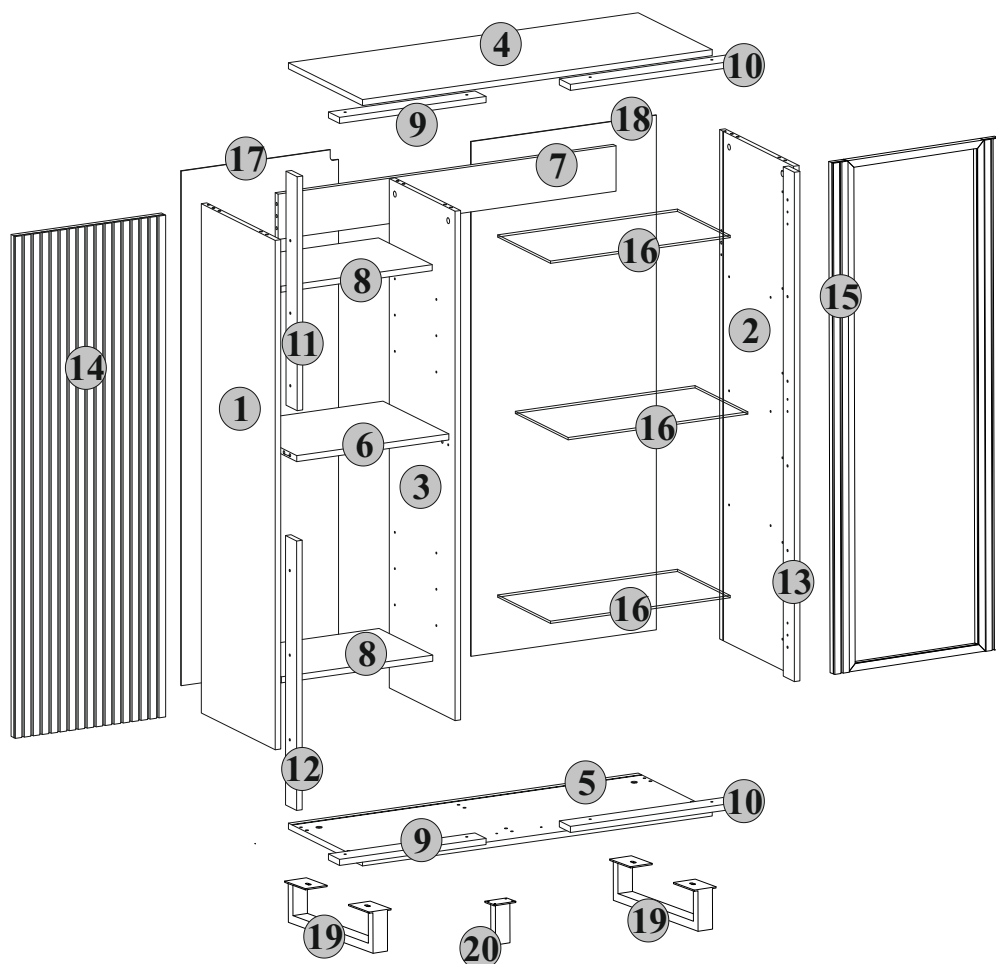
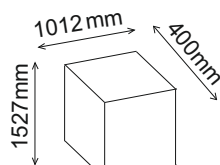




“3303”

versionsnummer: 13.09.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

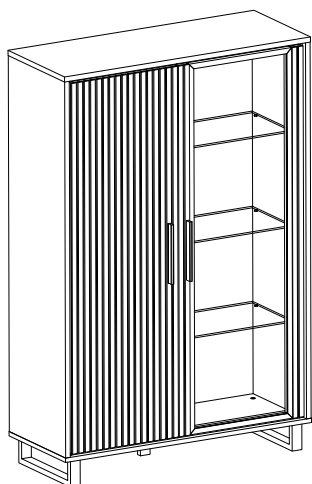


B5

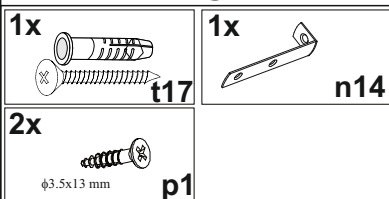


B1

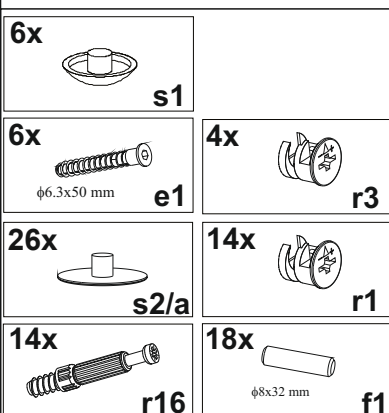


B2

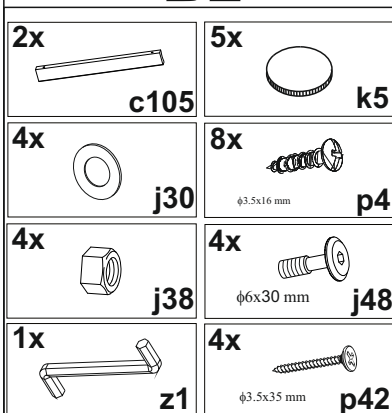










B3

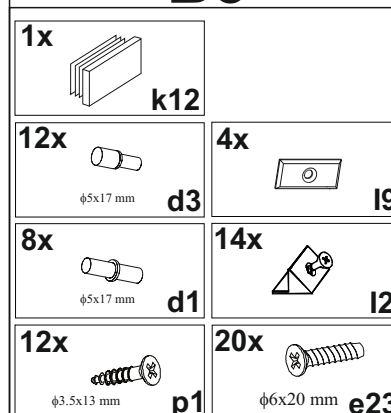









B4

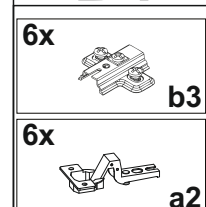

I

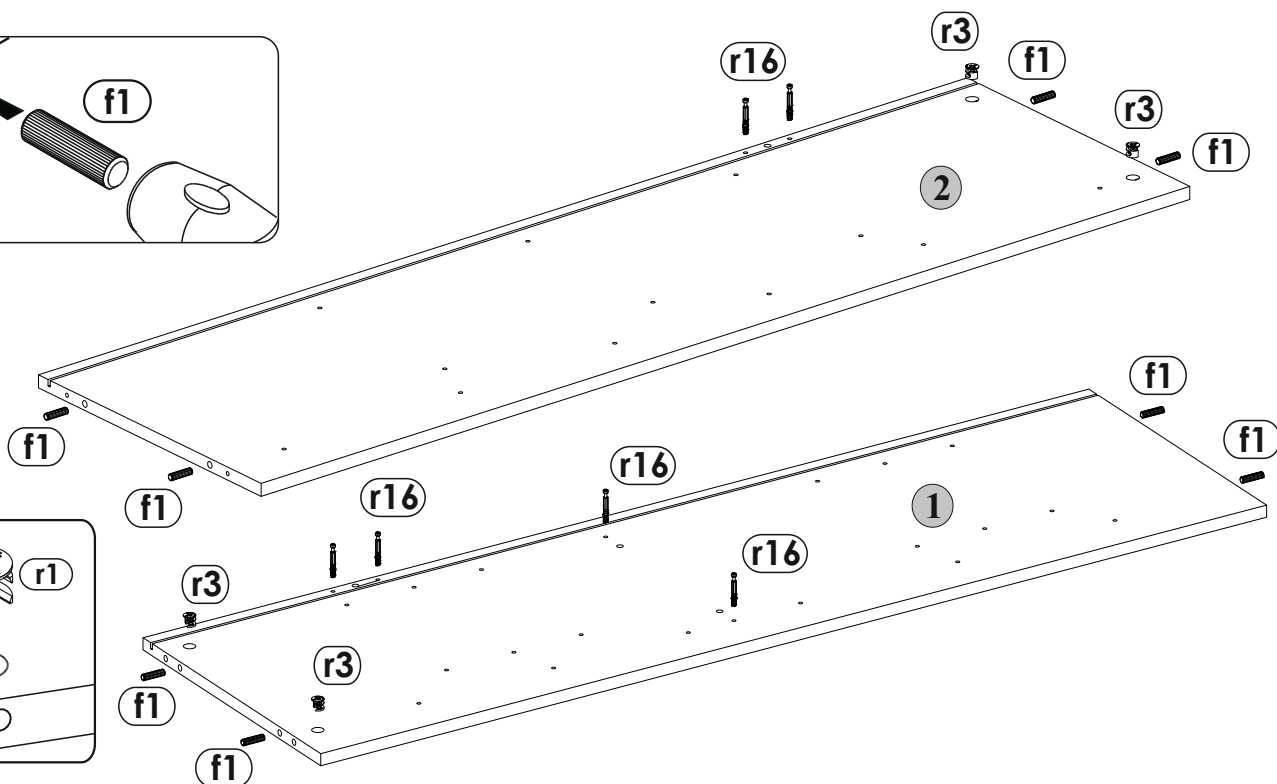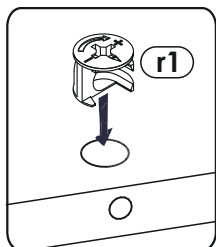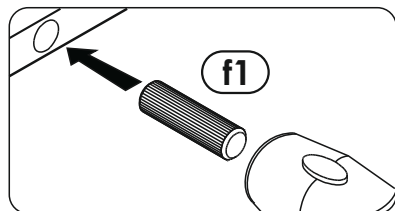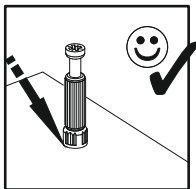
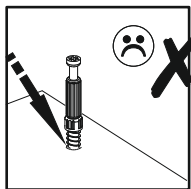
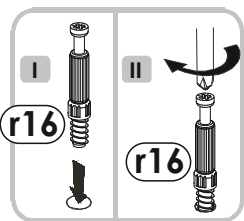


2

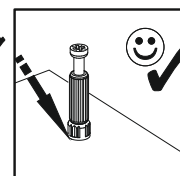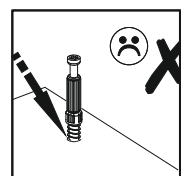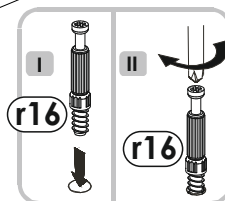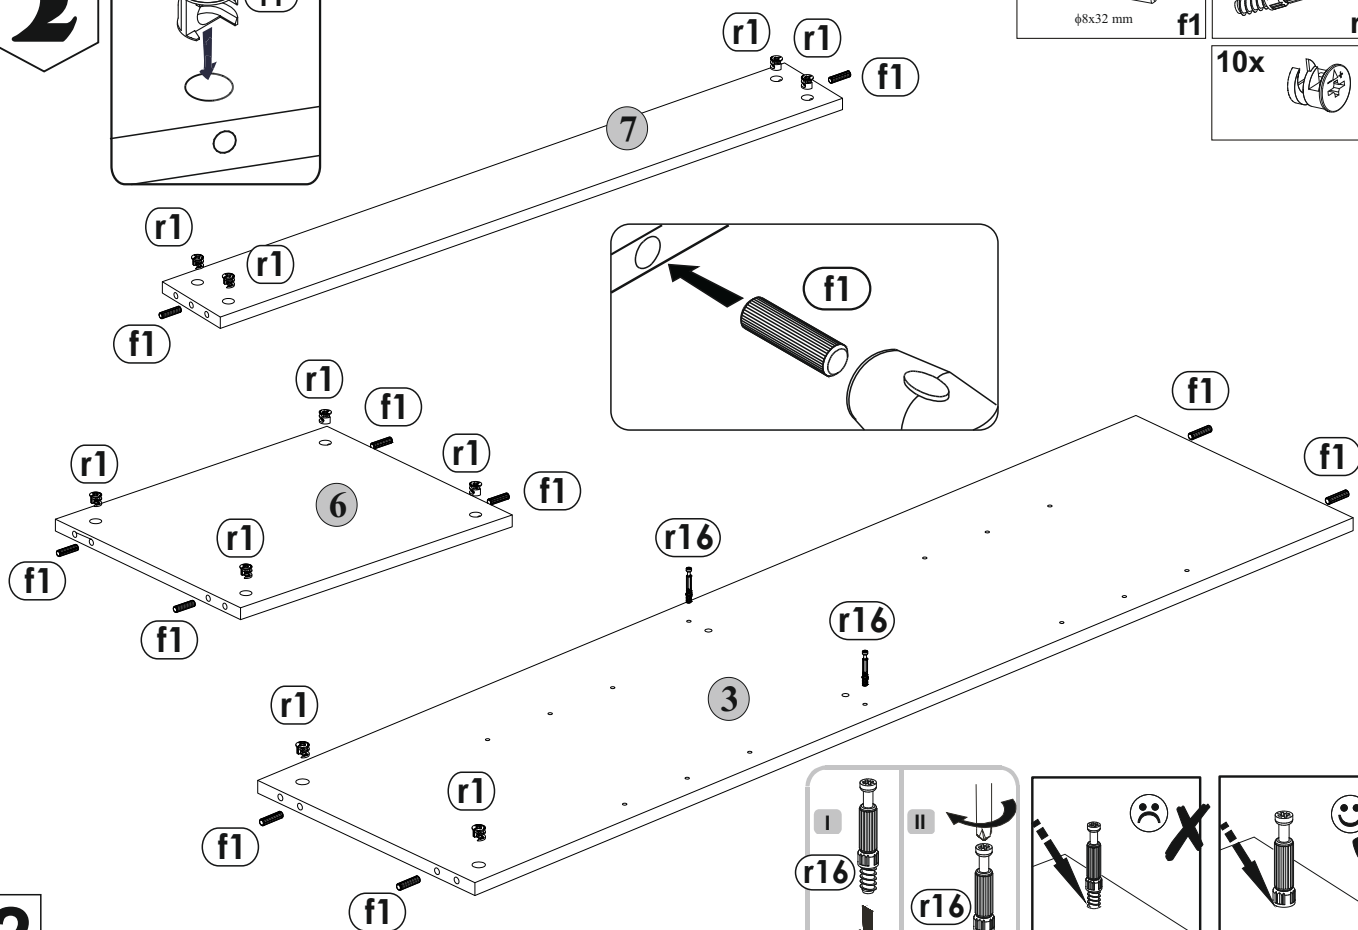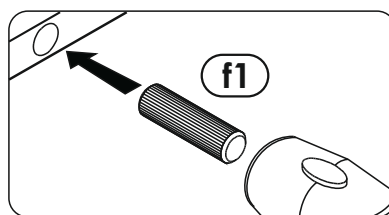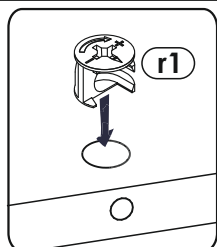


2









3

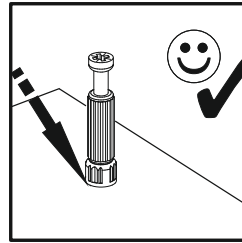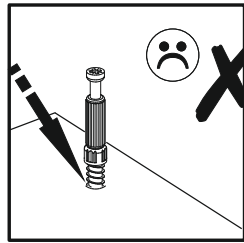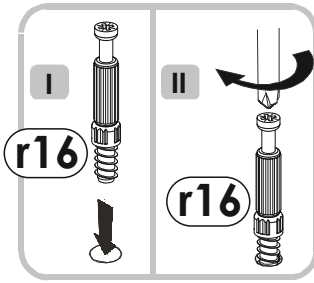

6x
r16

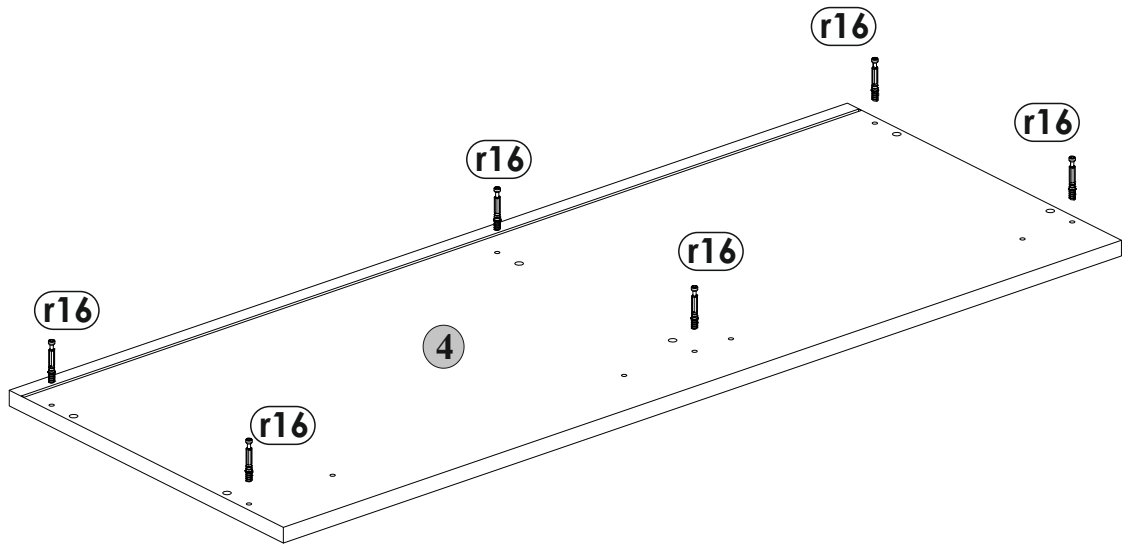


4

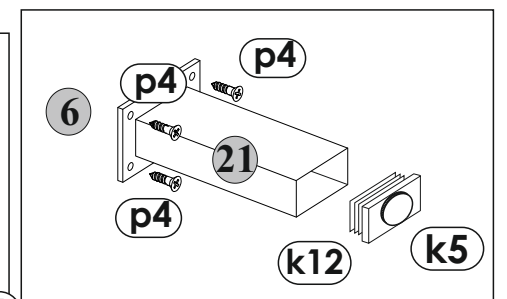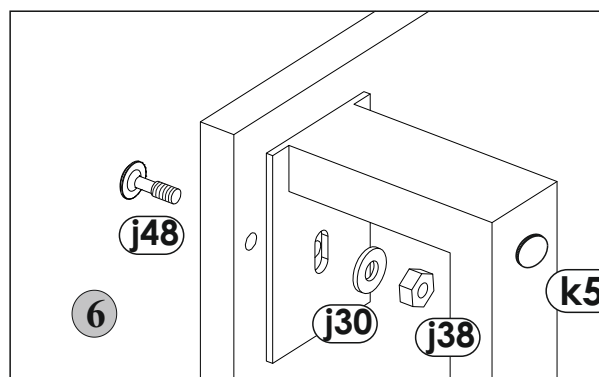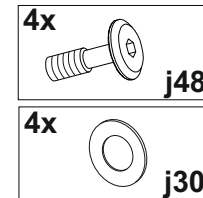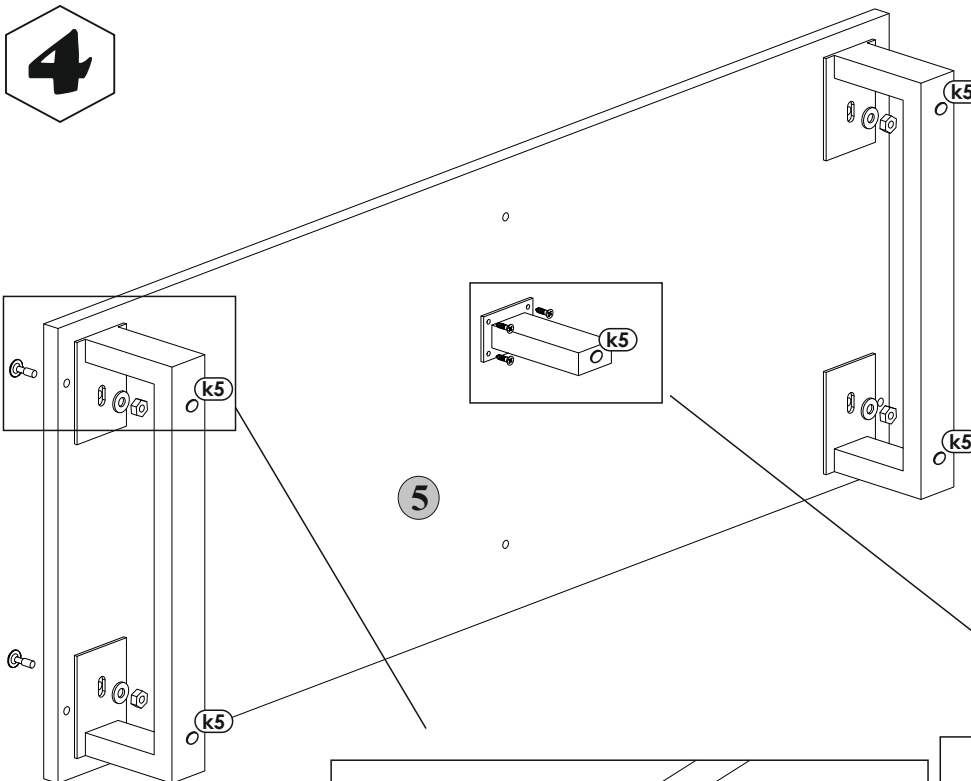


3

5


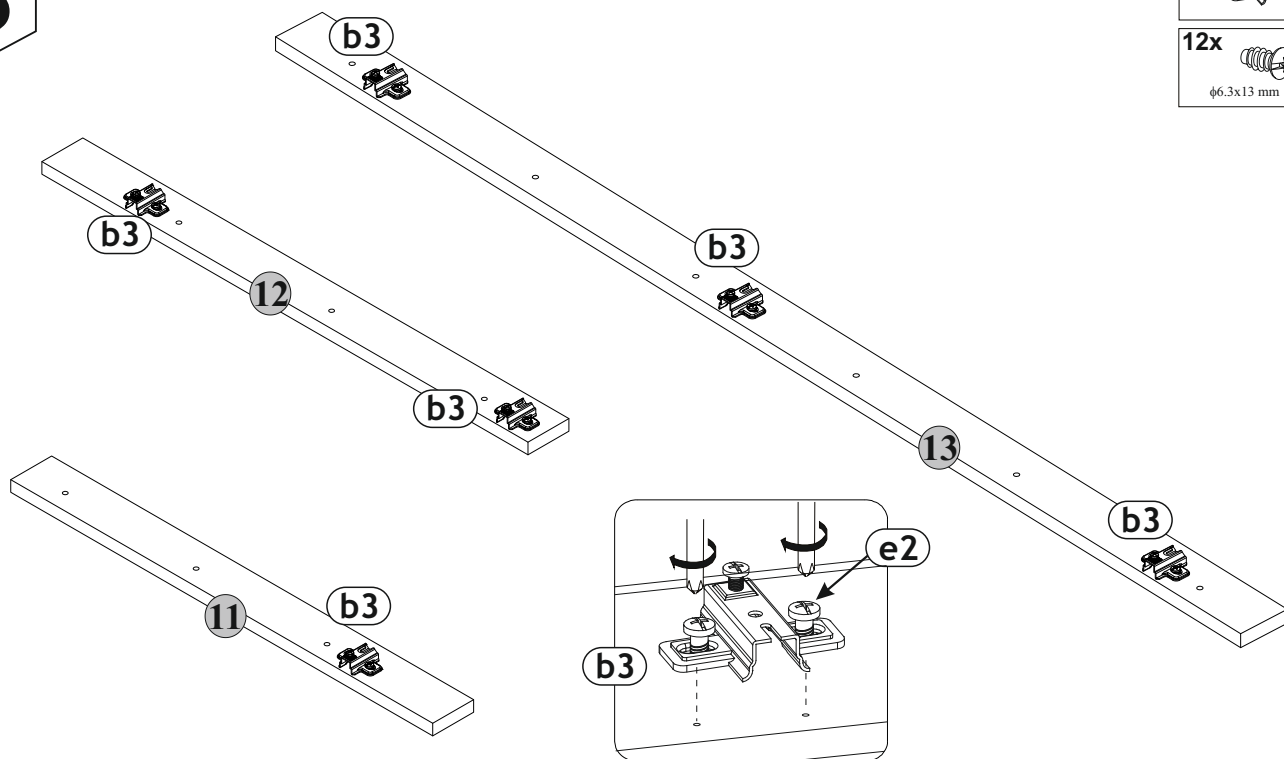


- 6x b3
- 12x e2
φ6.3x13 mm

6

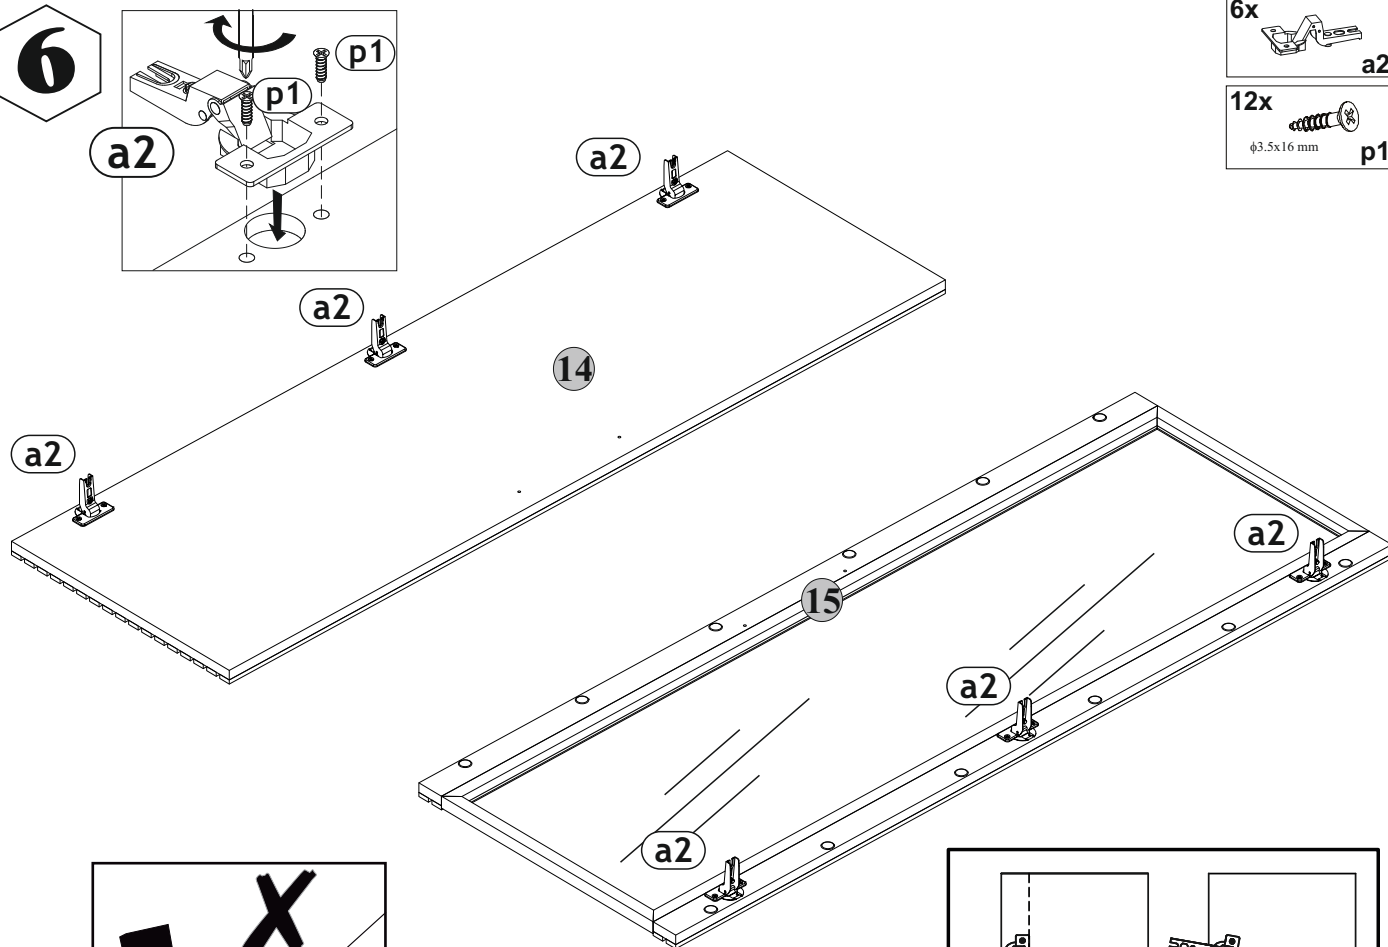


- 6x a2
- 12x p1
φ3.5x16 mm

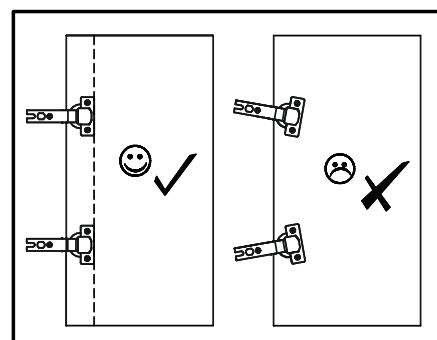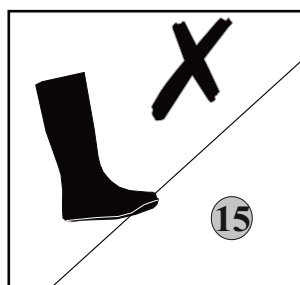


4


7

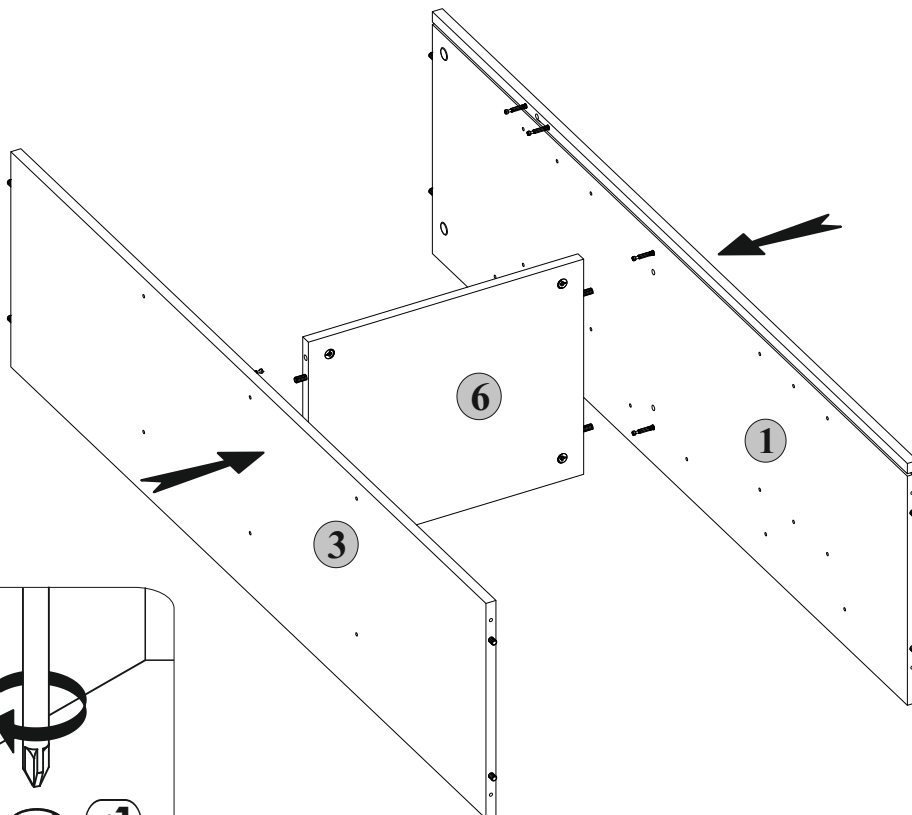


8

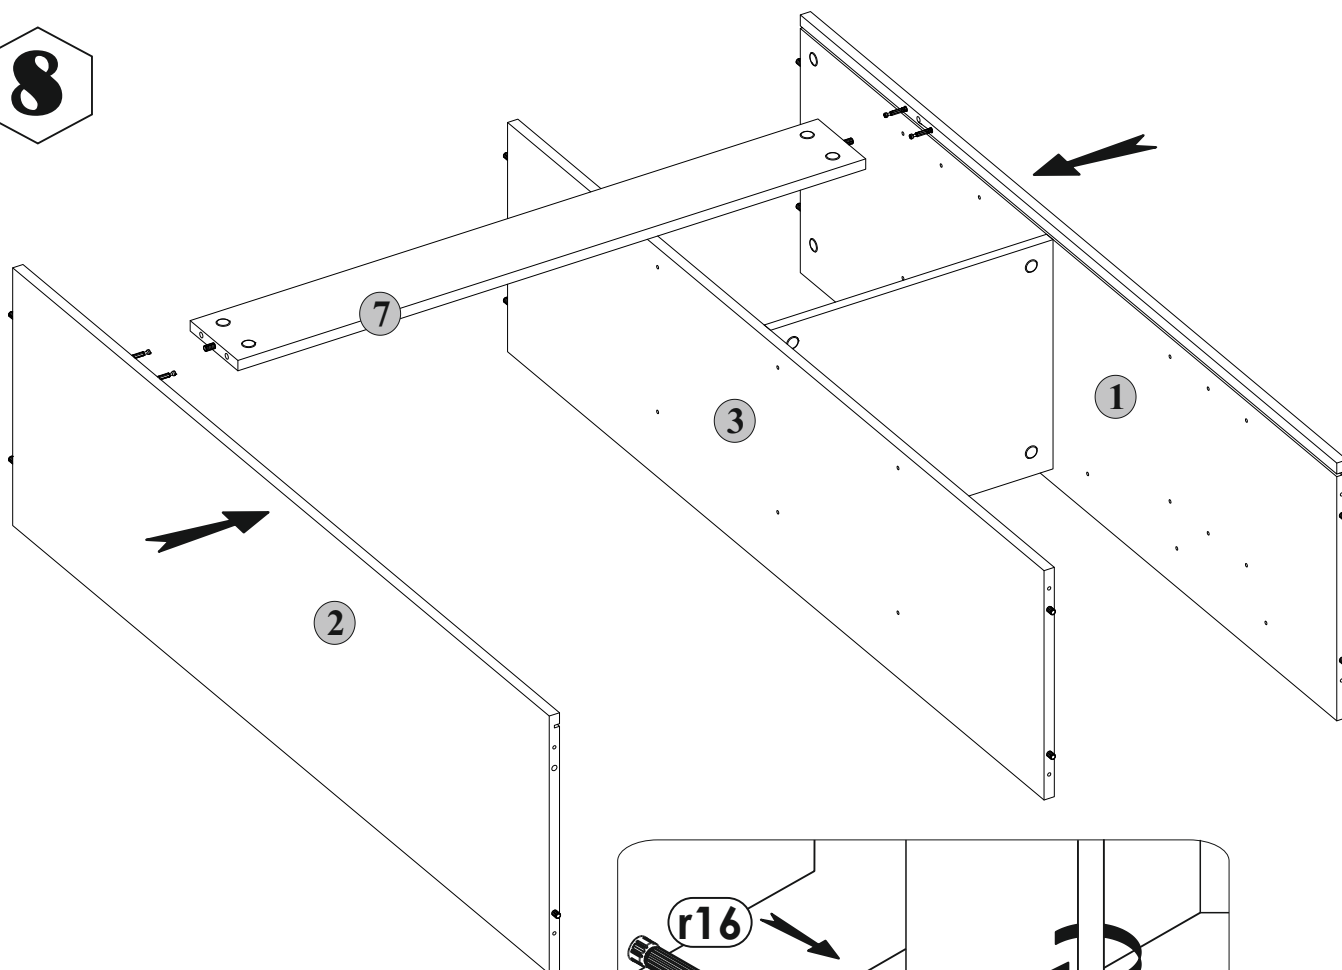

9

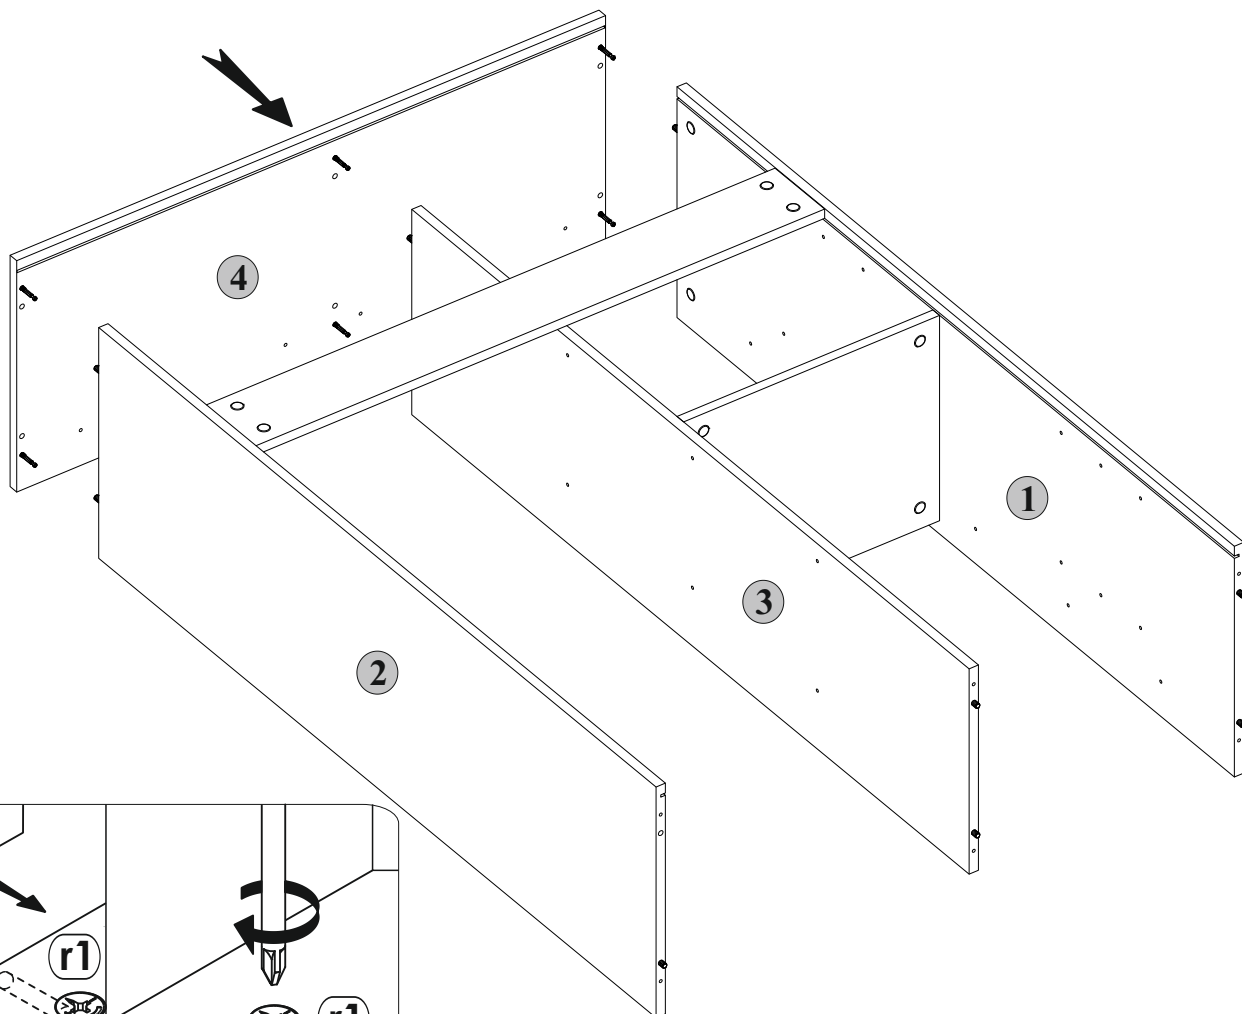



10

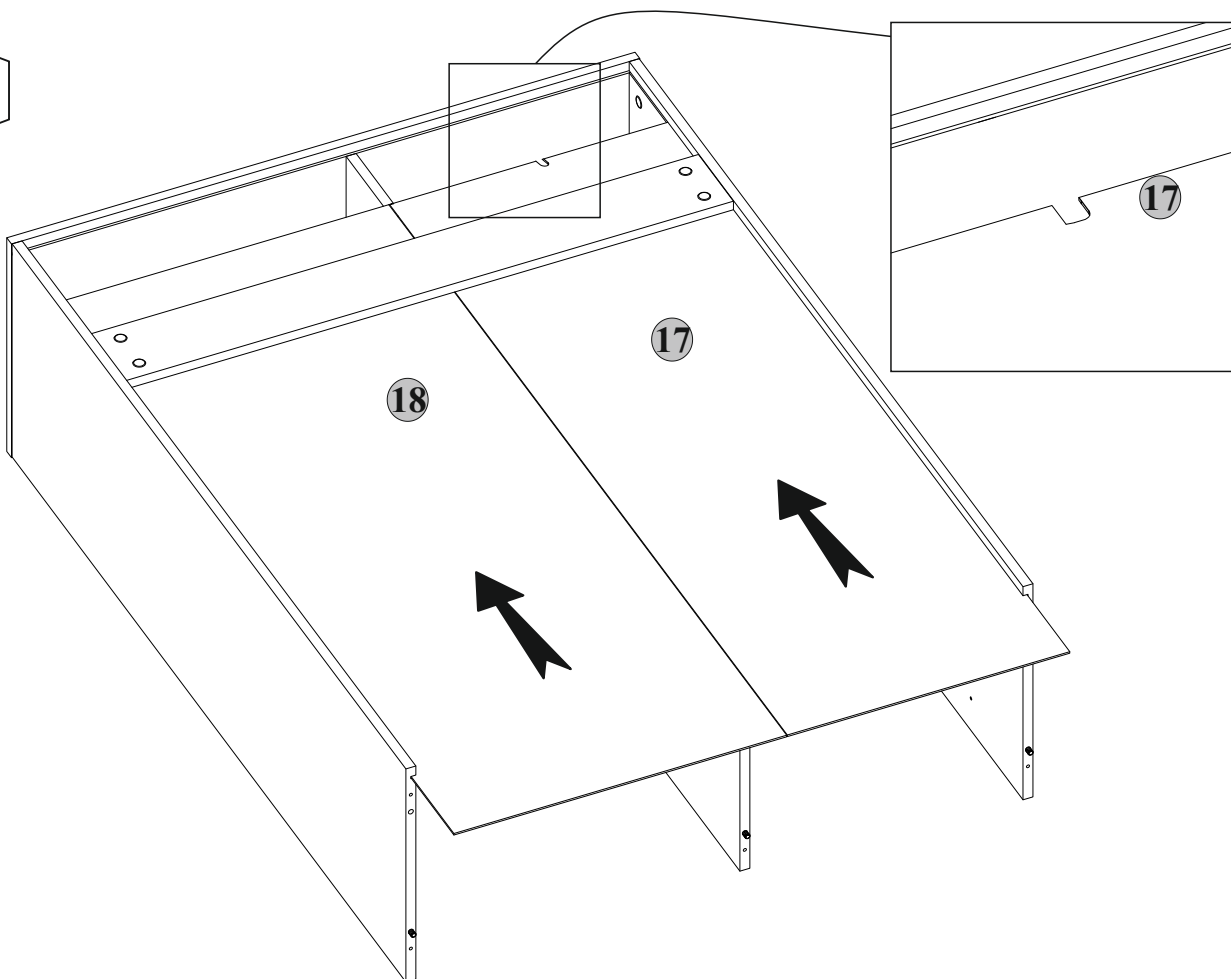


6





11

- 6x  e1
- 6x  s1
- 1x  z1

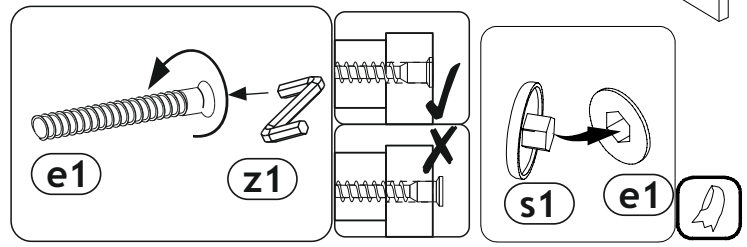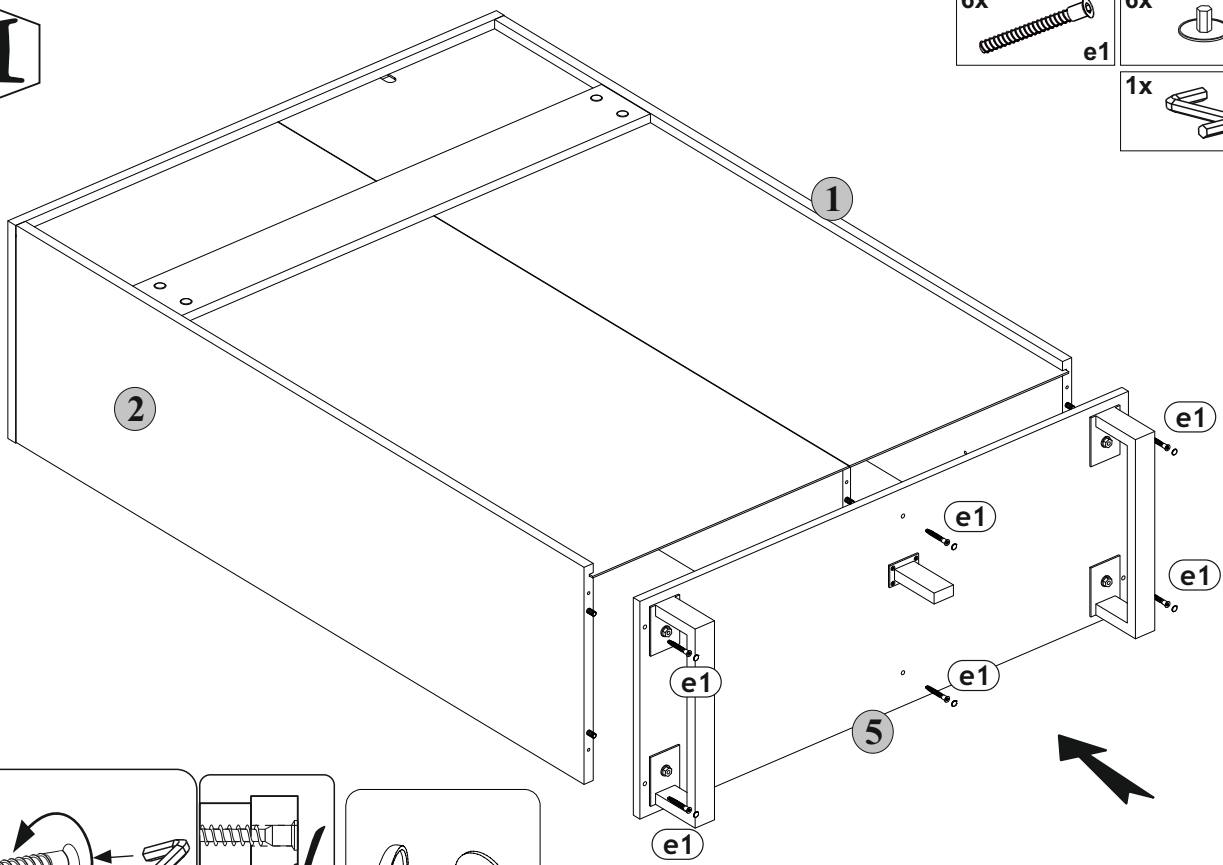

12




- 14x  I2
- 4x  I9
- 4x  p4 $\phi 3.5 \times 16 \text{ mm}$

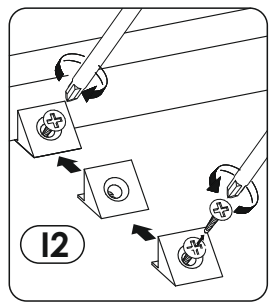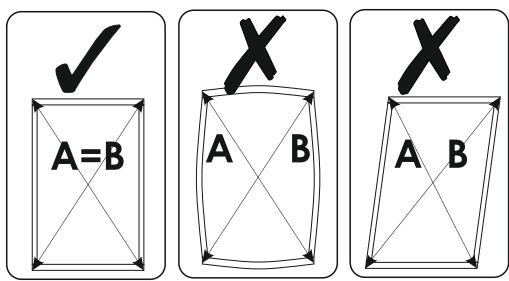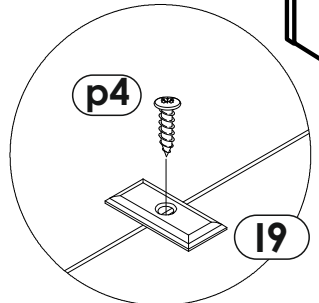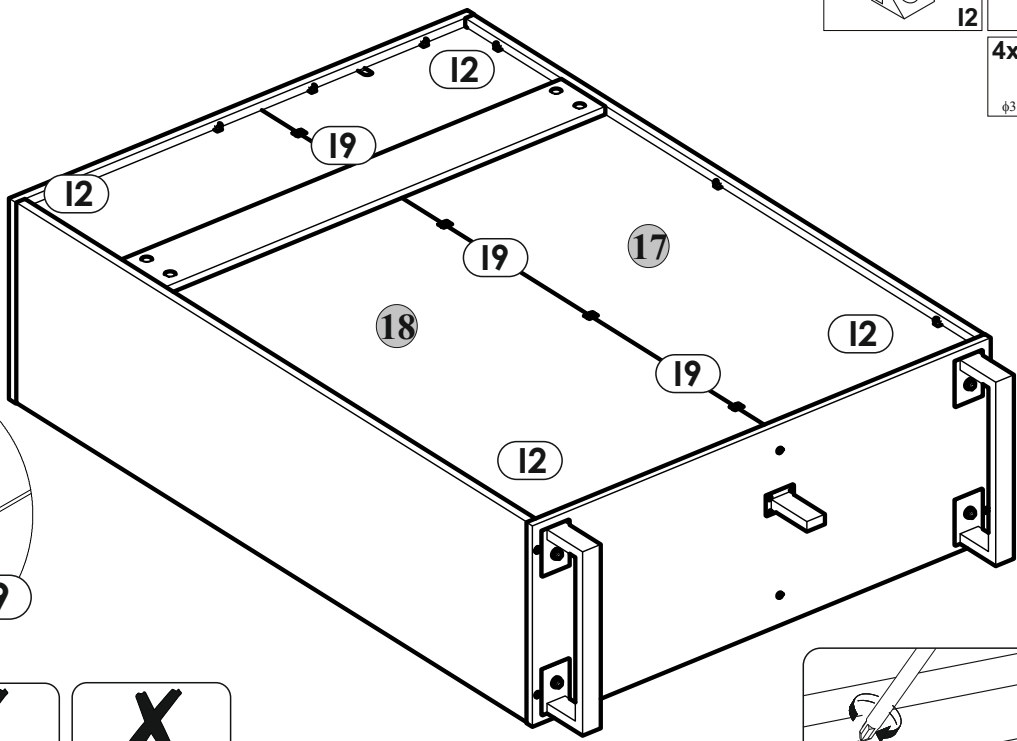

7

13

20x
e23
φ6x20 mm

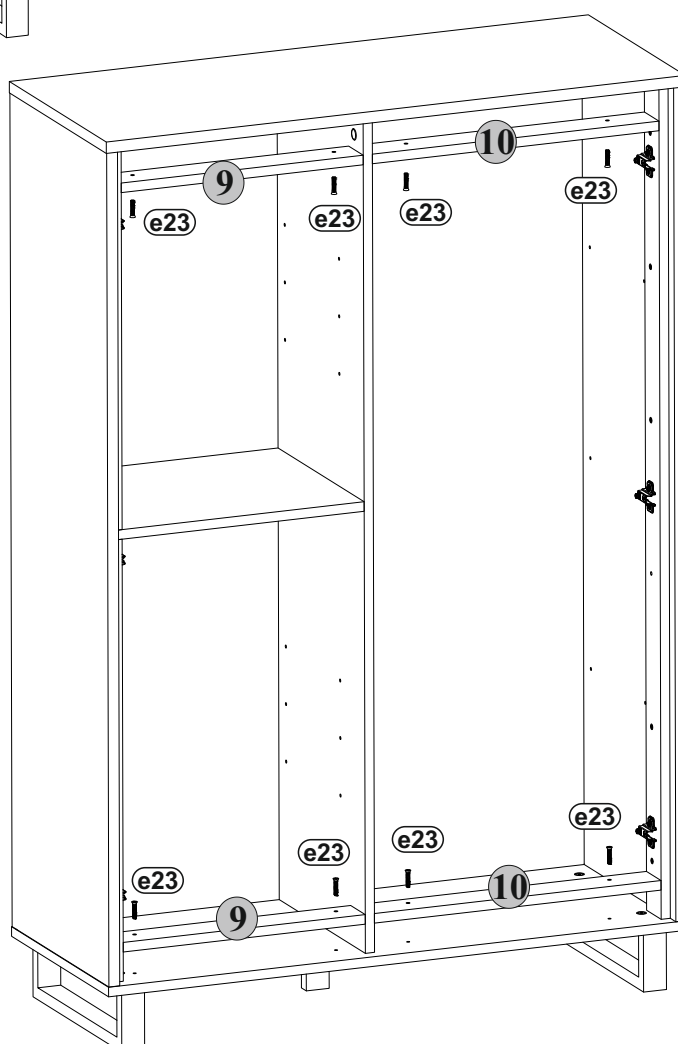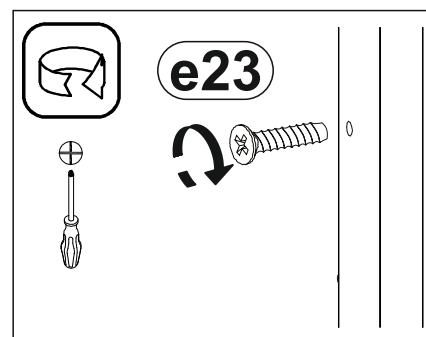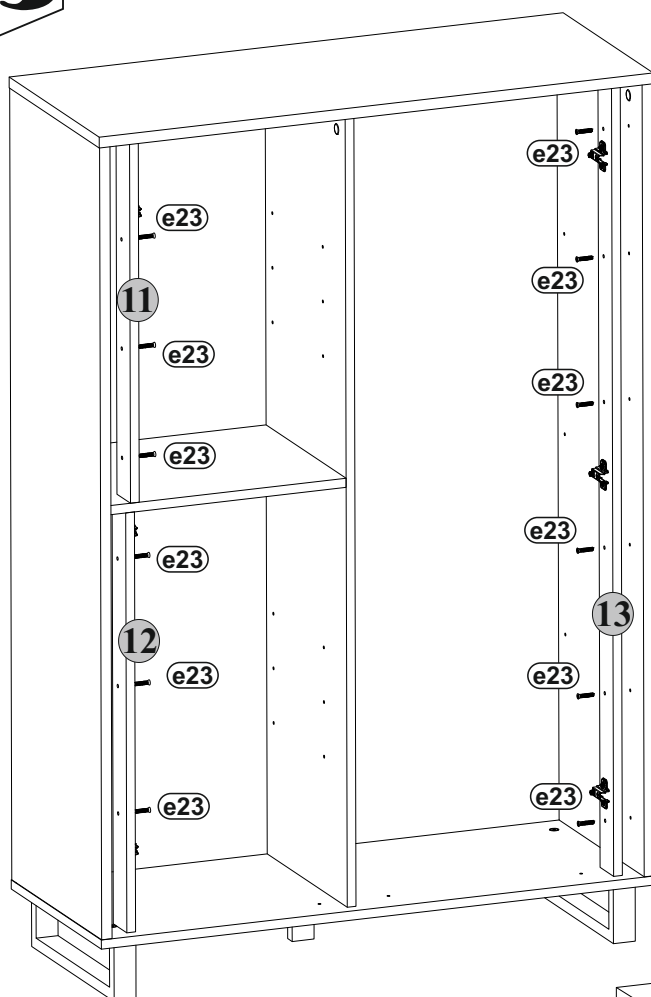

8

I4










4x
p42

2x
c105

1x
t17

1x
n14

2x
p1
φ3.5x16 mm

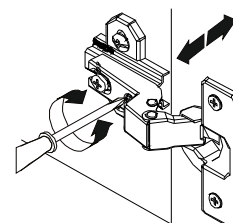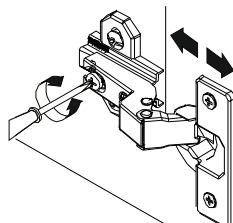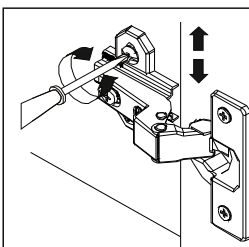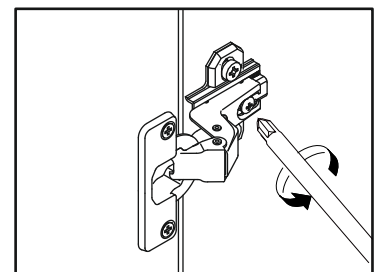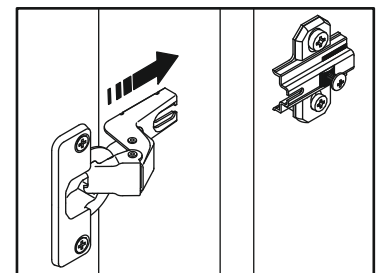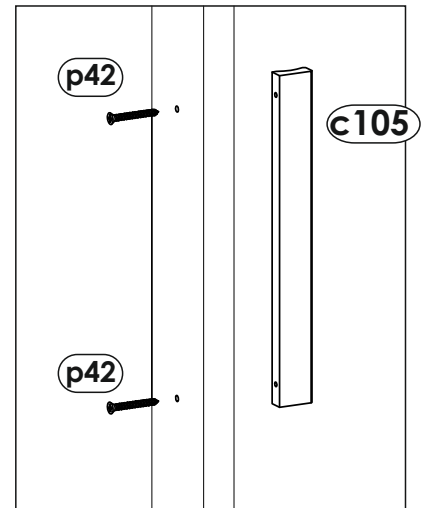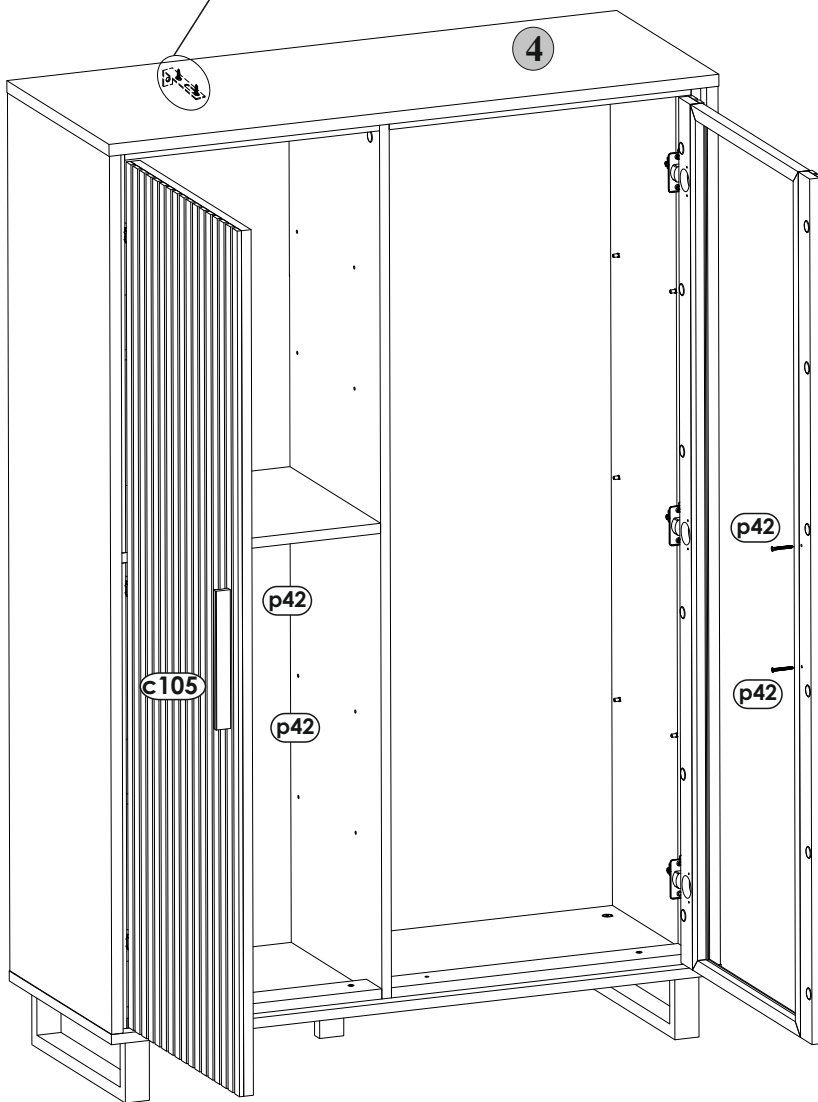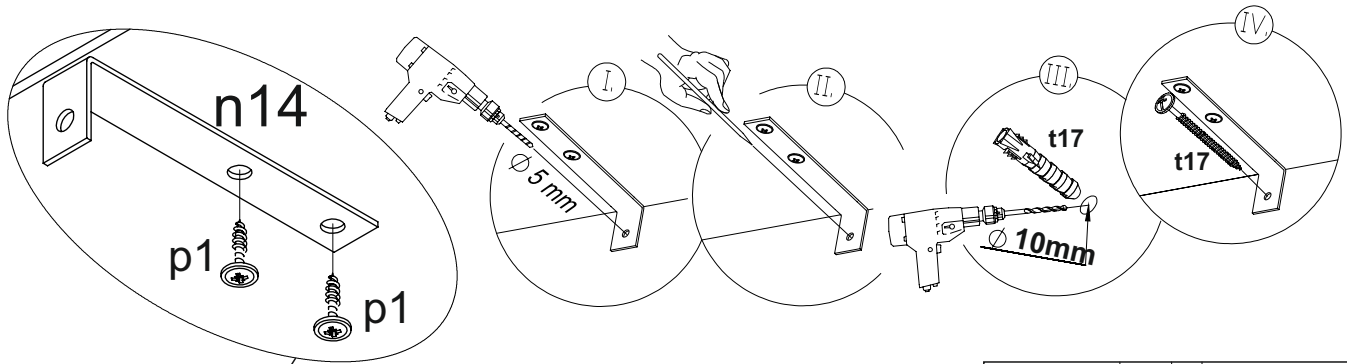




9

15

12x 
φ5x17 mm **d3**

8x 
φ5x17 mm **d1**

26x 
s2/a

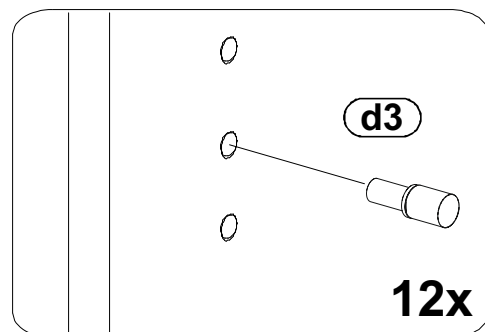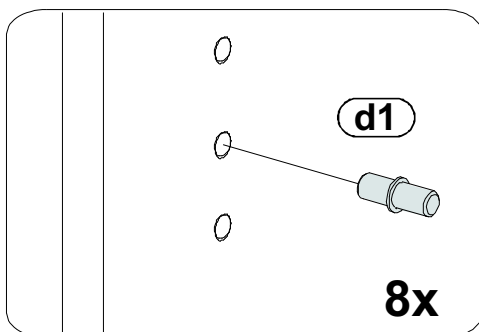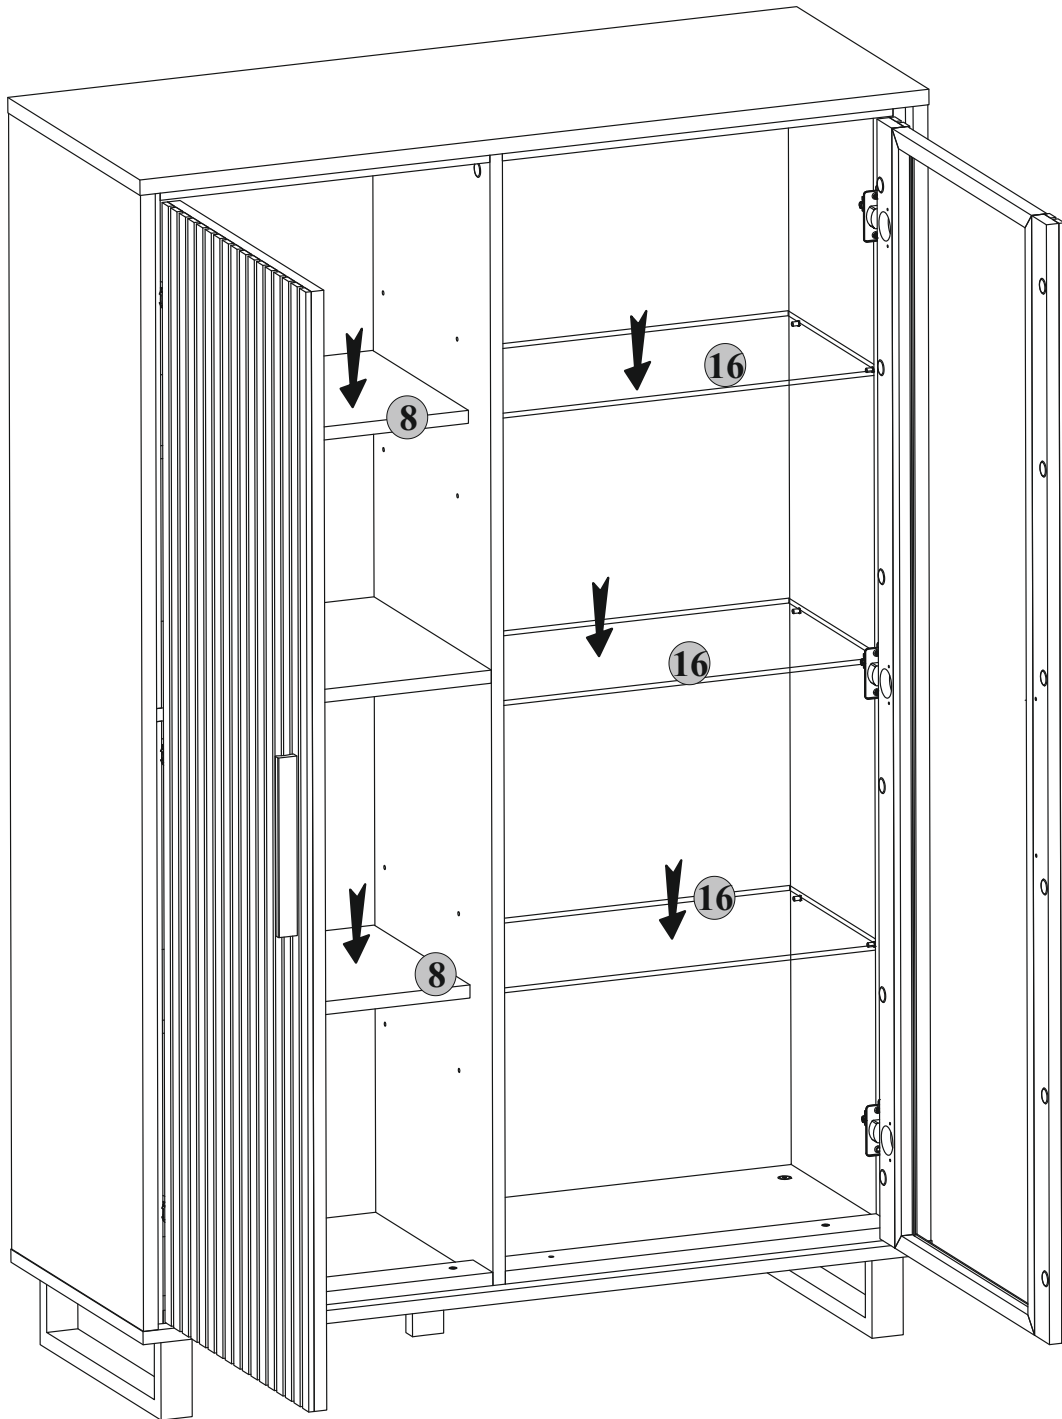

10