
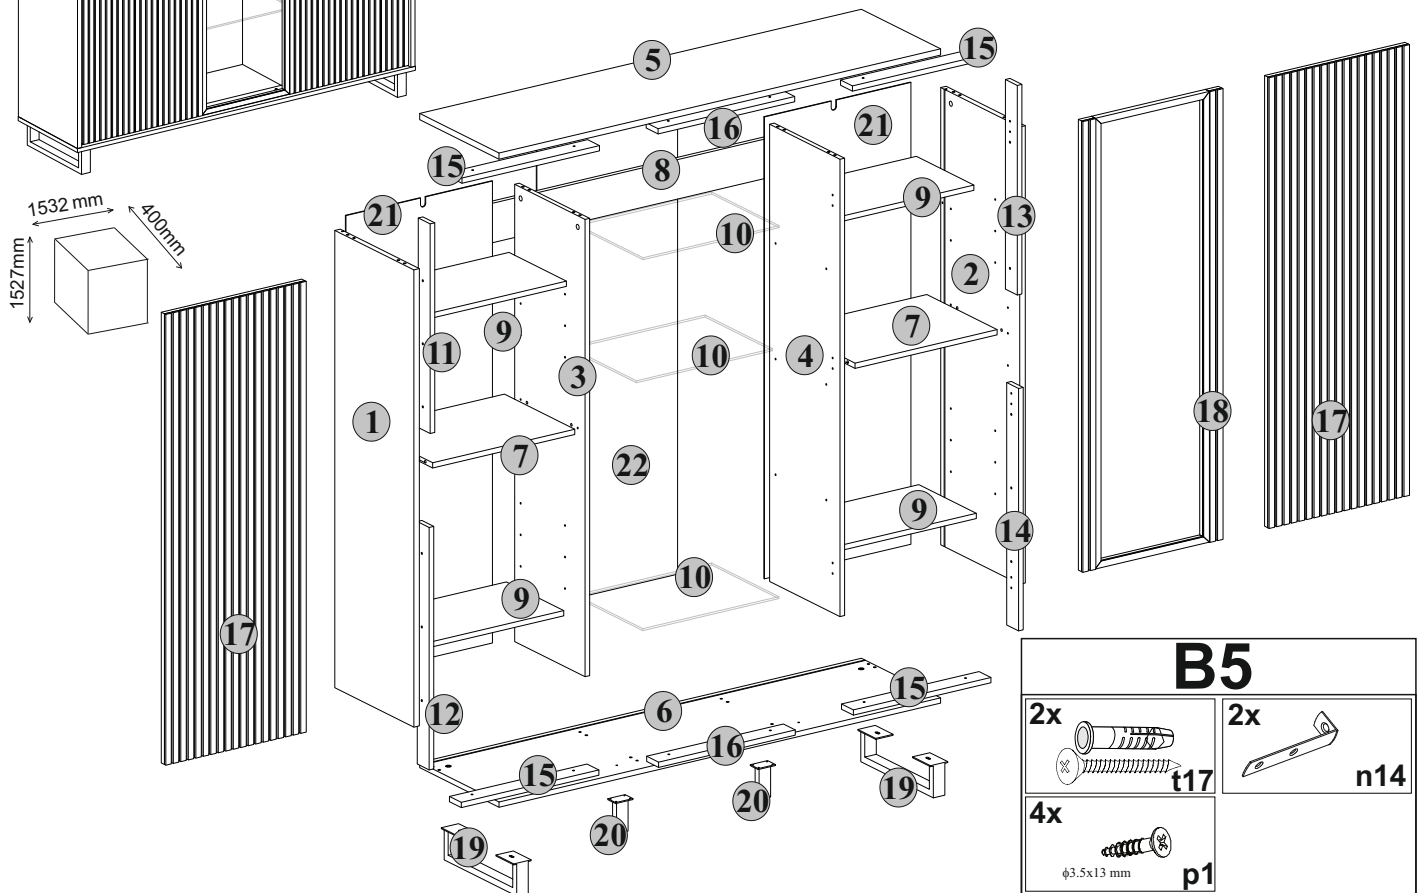





“3304”

versionsnummer: 13.09.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

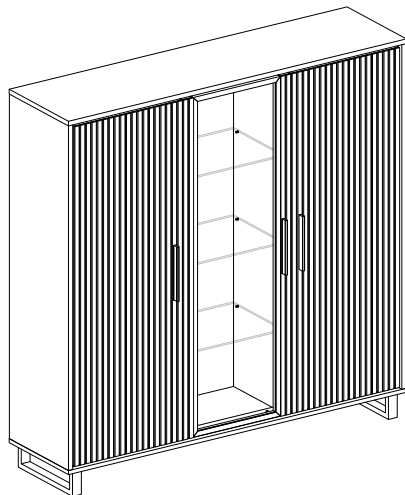


B5

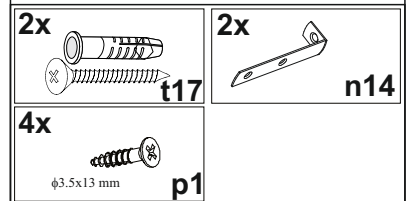


B1

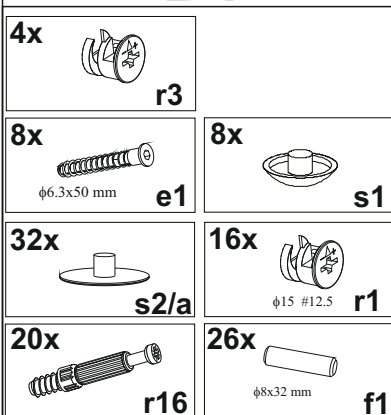


B2

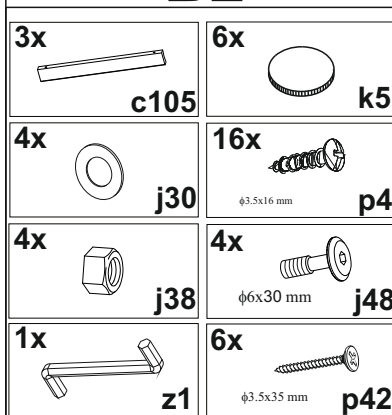


B3

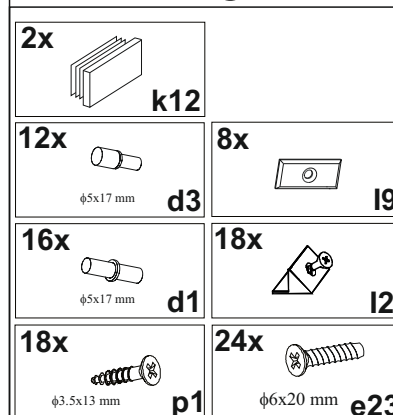

B4

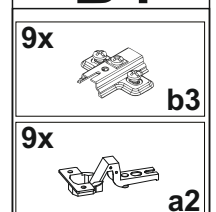




1

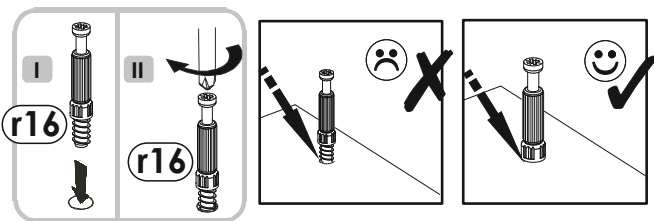

8x
r16

4x
r3

8x
φ8x32 mm
f1




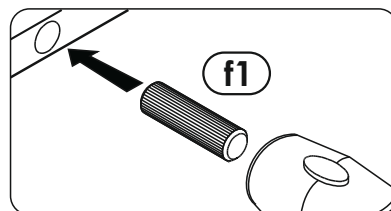
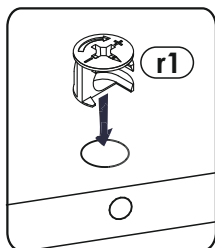
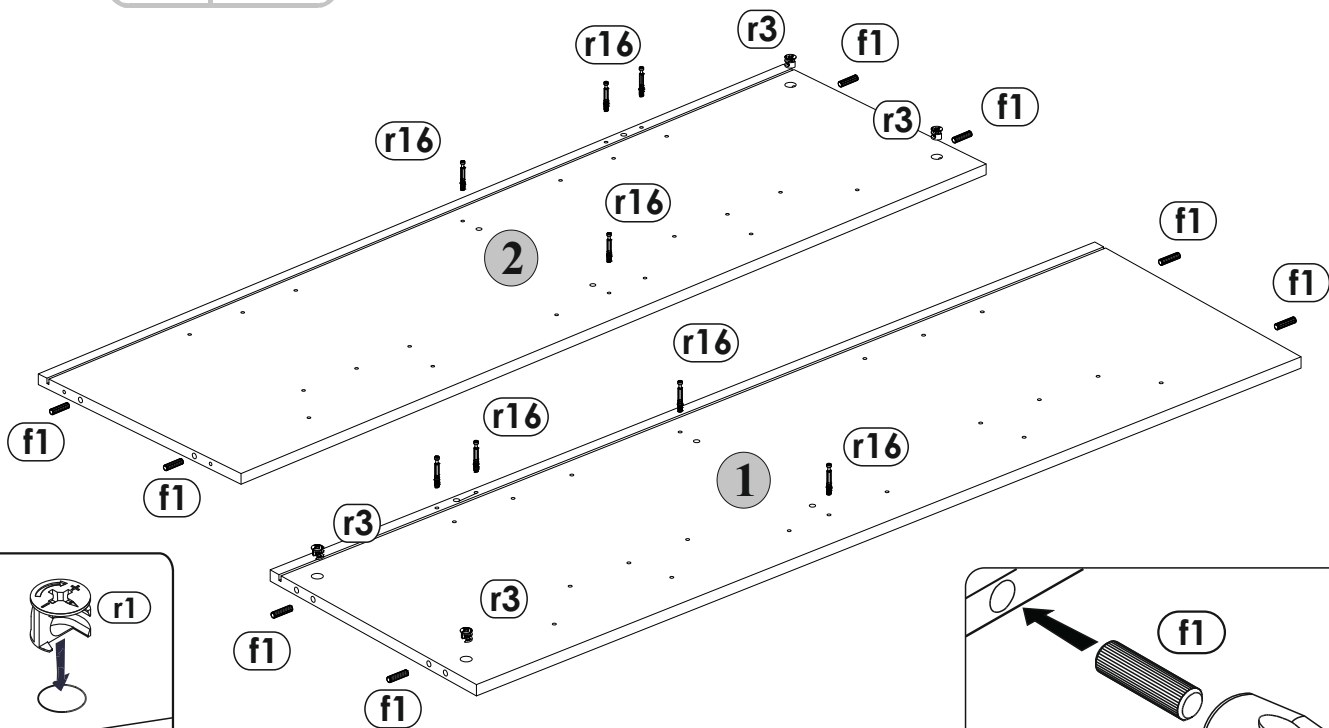


2

16x
φ8x32 mm
f1








4x
r16

12x
r1



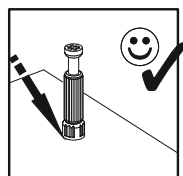
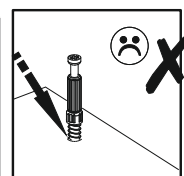
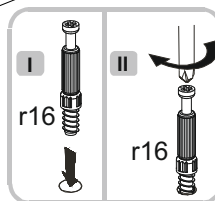
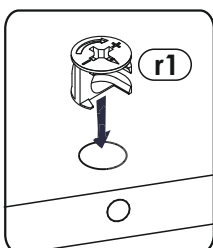
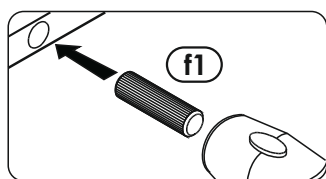
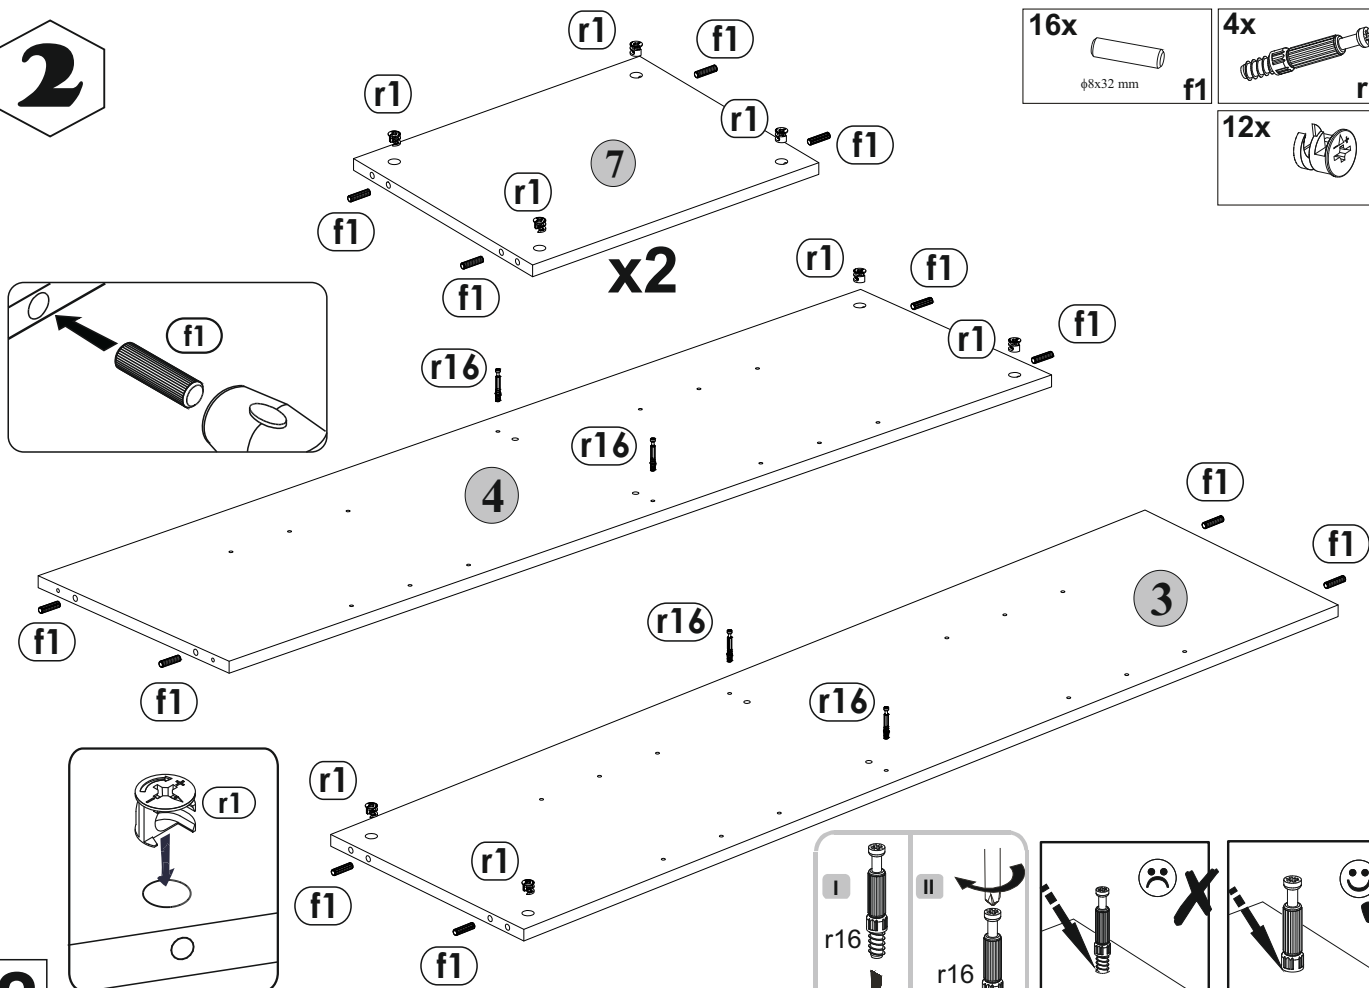


2

3

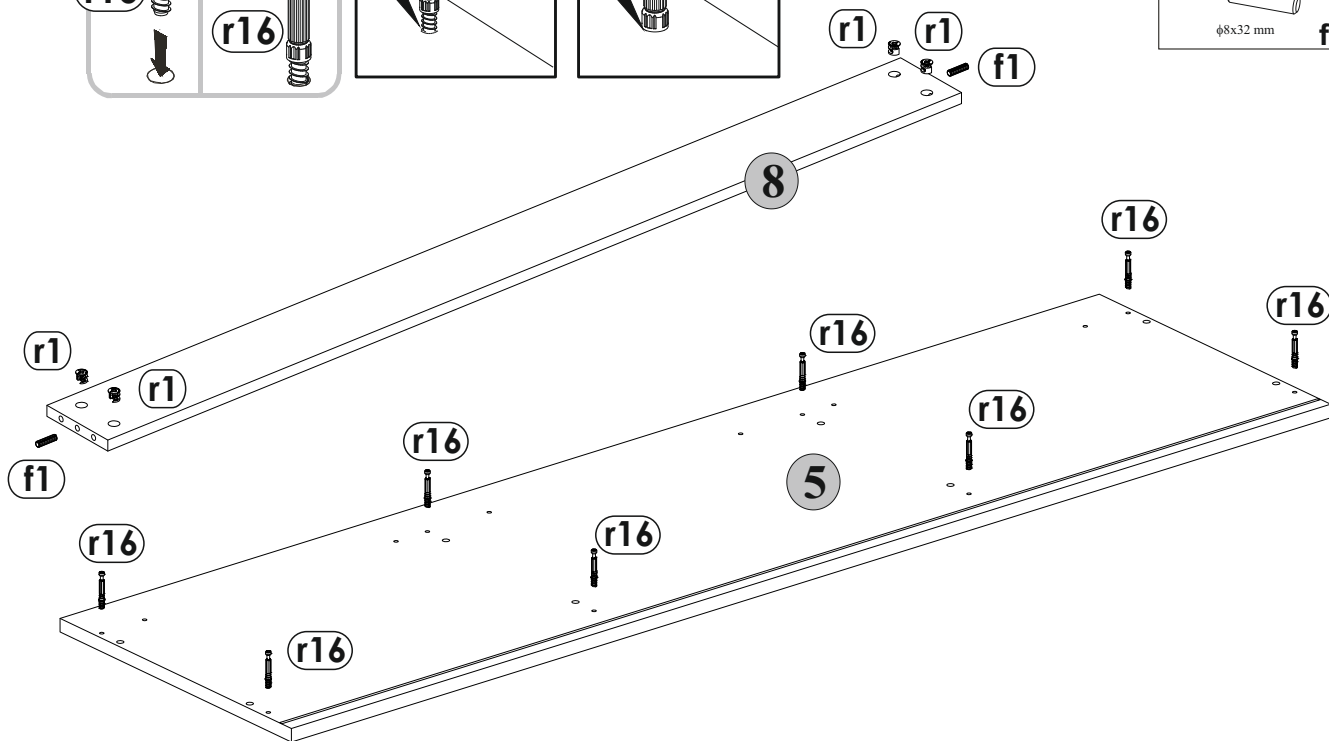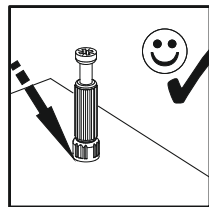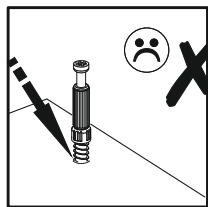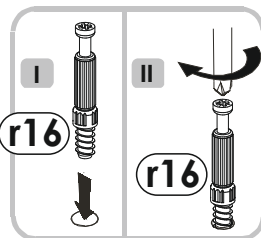


4

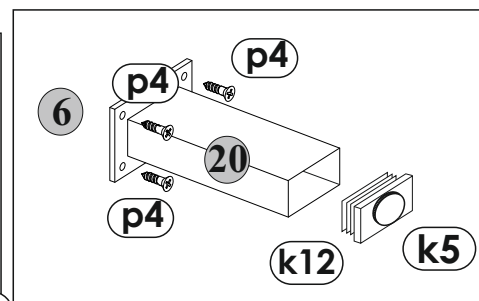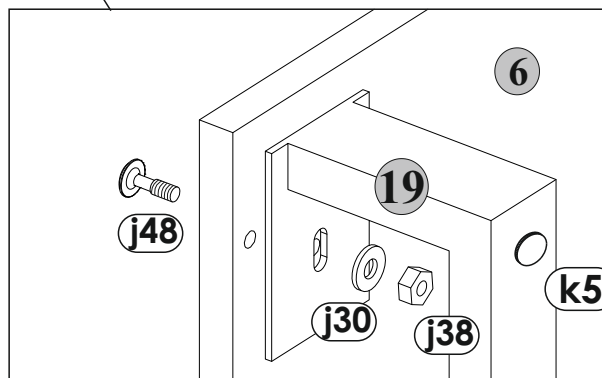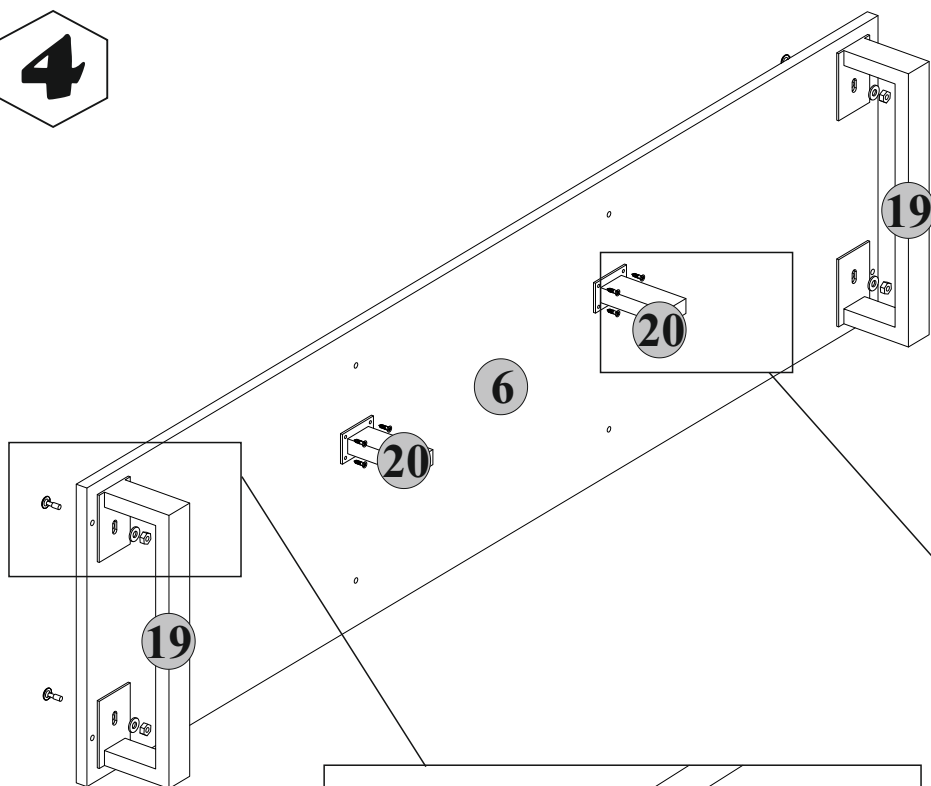



3

5

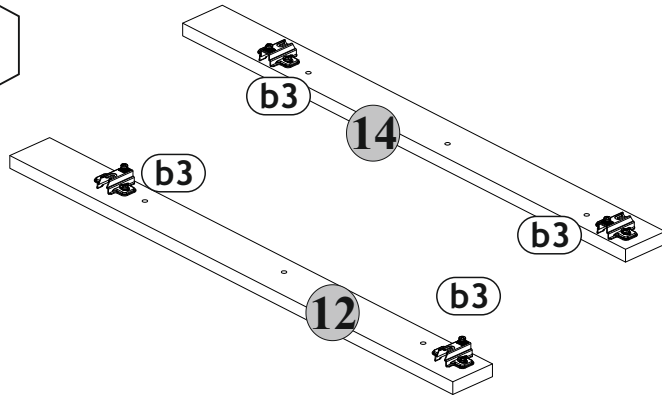


6x  **b3**

12x  **e2**
 $\phi 6.3 \times 13 \text{ mm}$


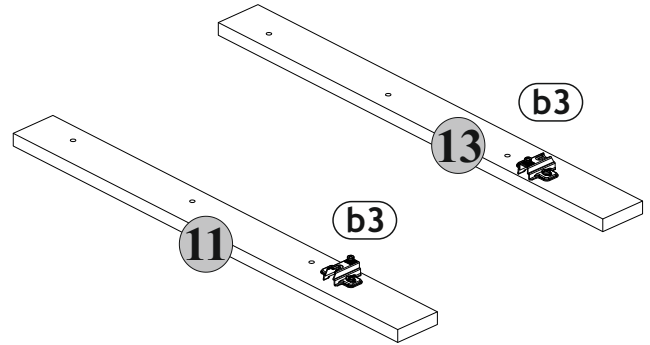
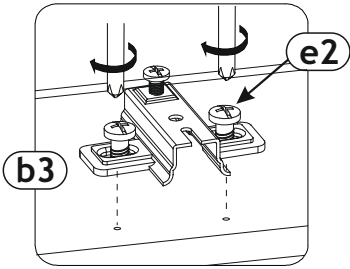


6

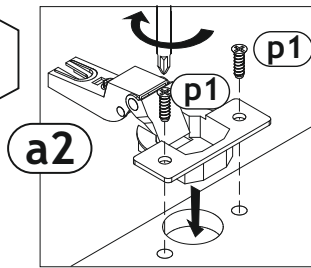


9x  **a2**

18x  **p1**
 $\phi 3.5 \times 16 \text{ mm}$

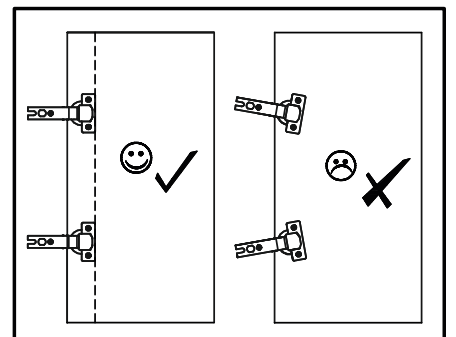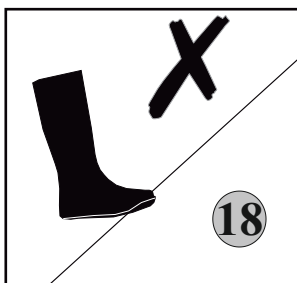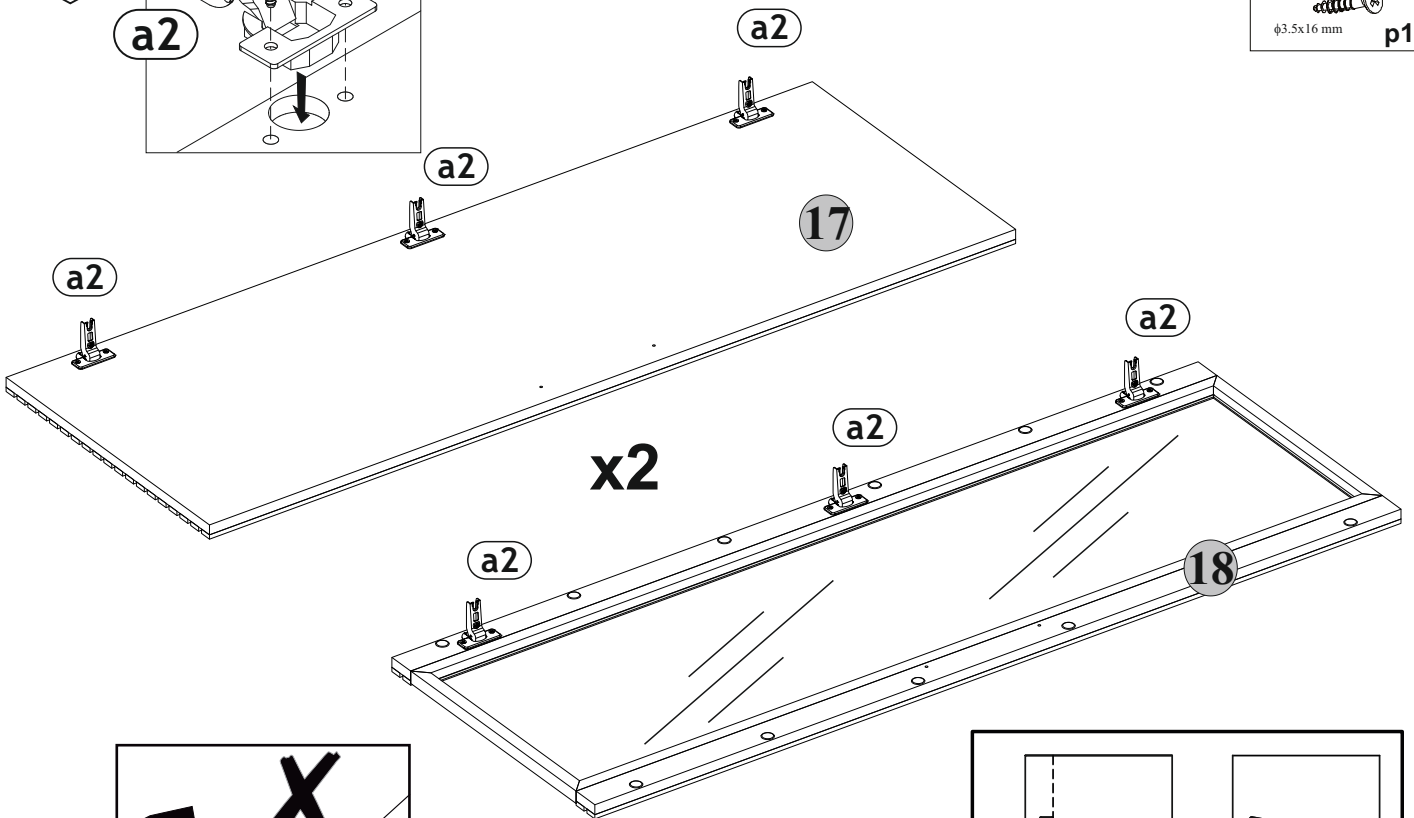


4



7

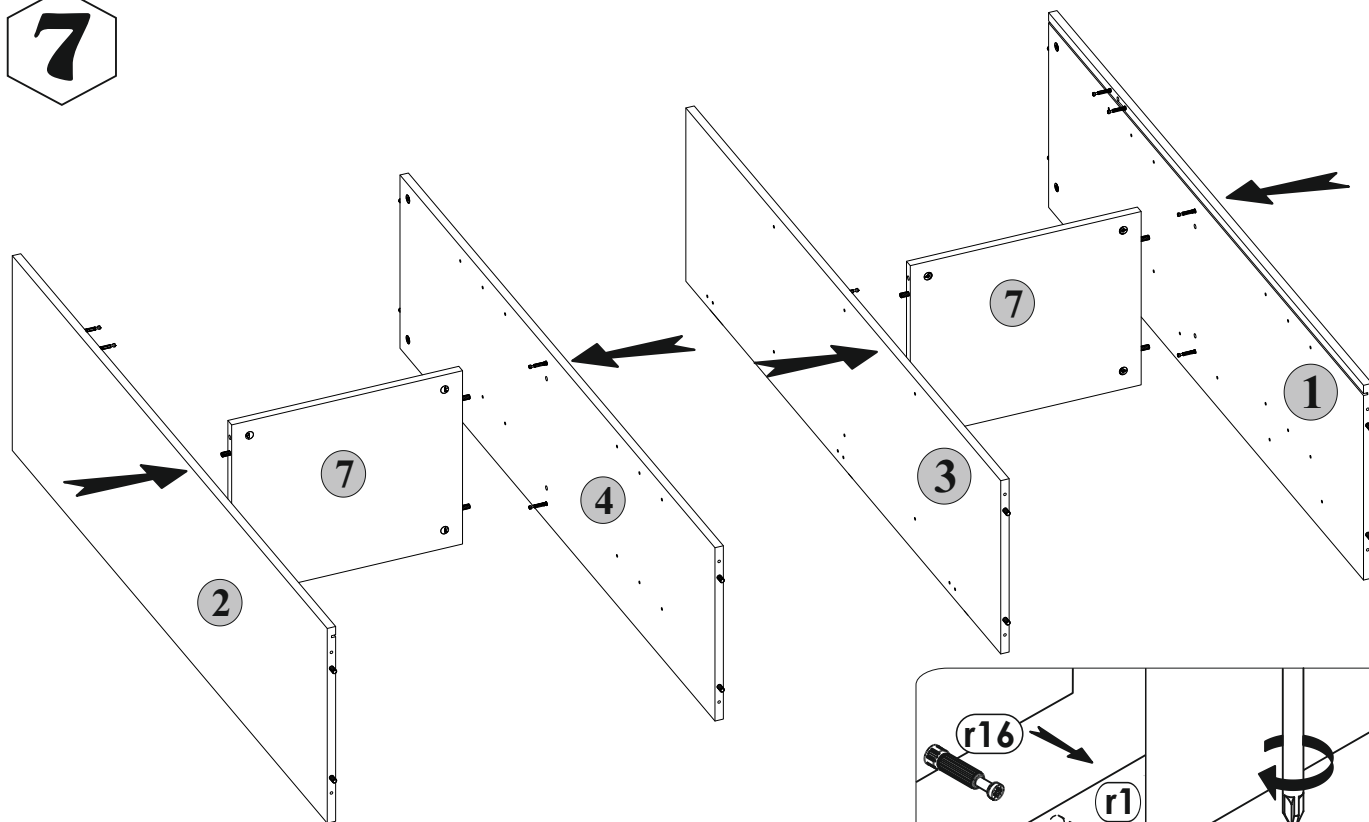


8

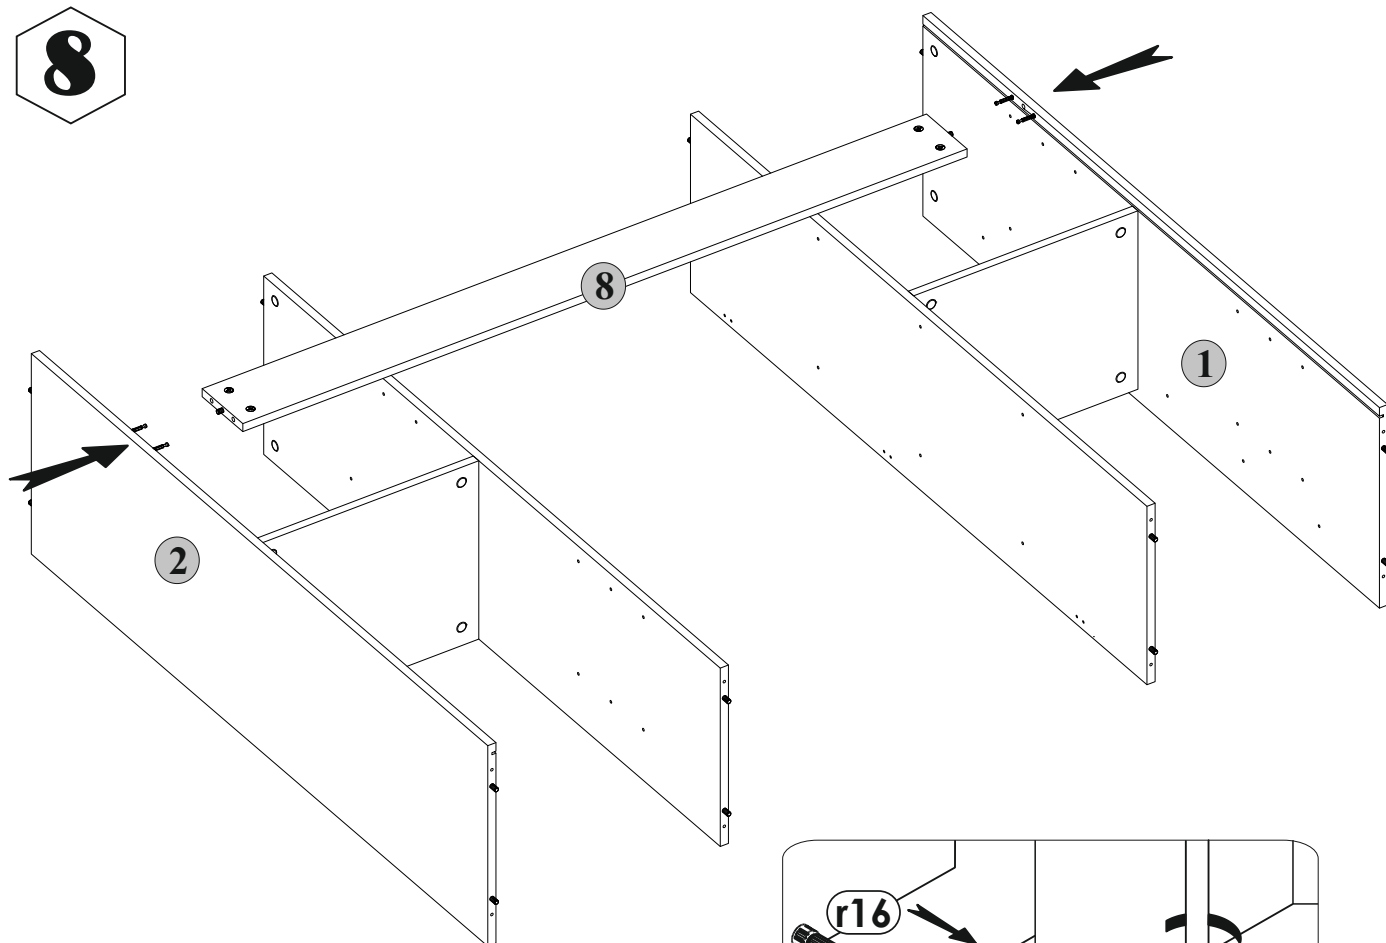

9

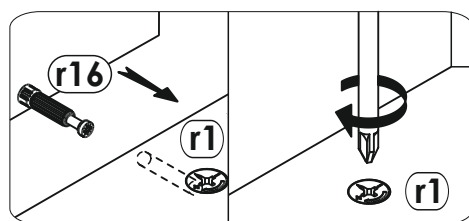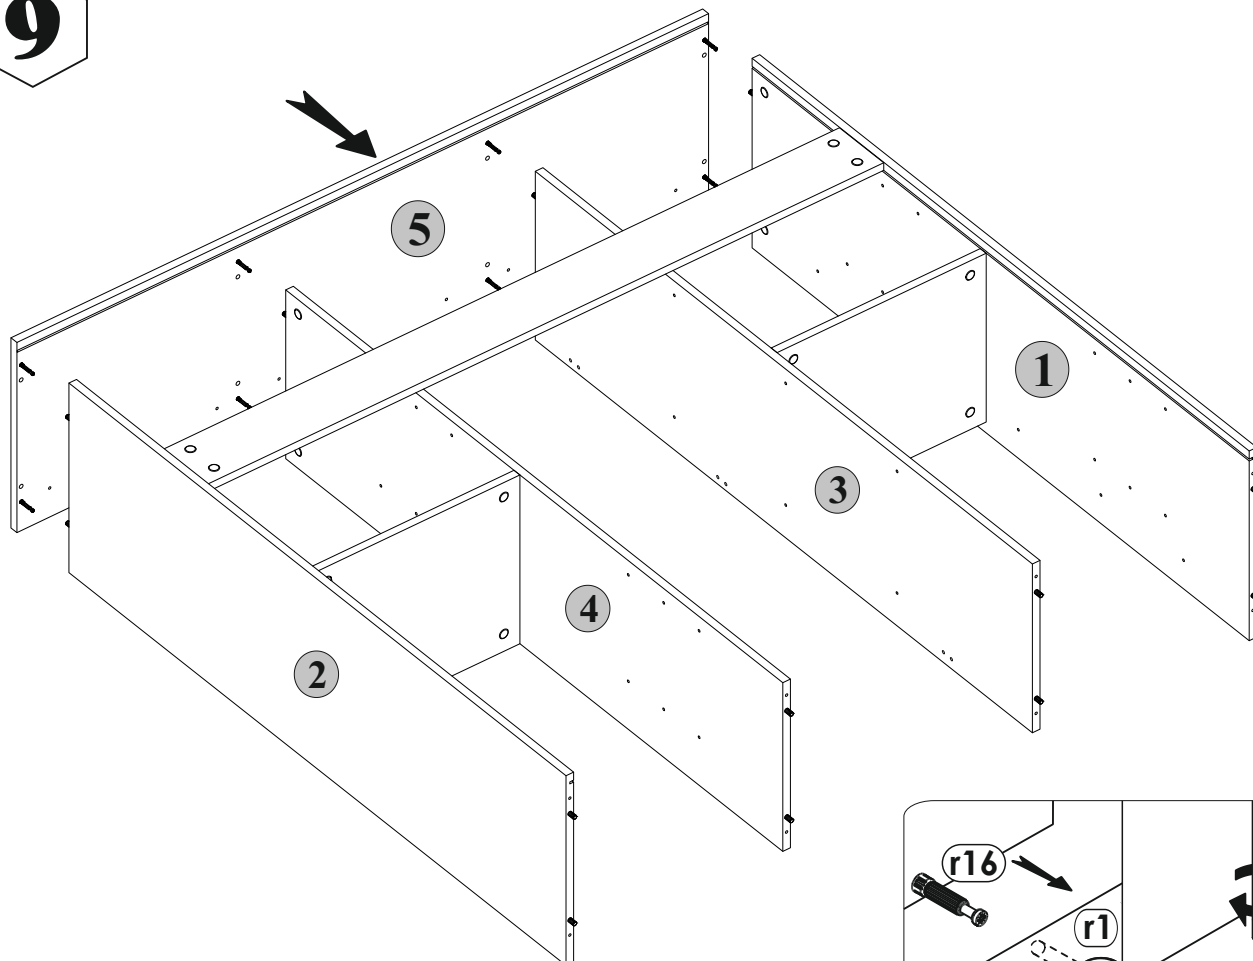




10

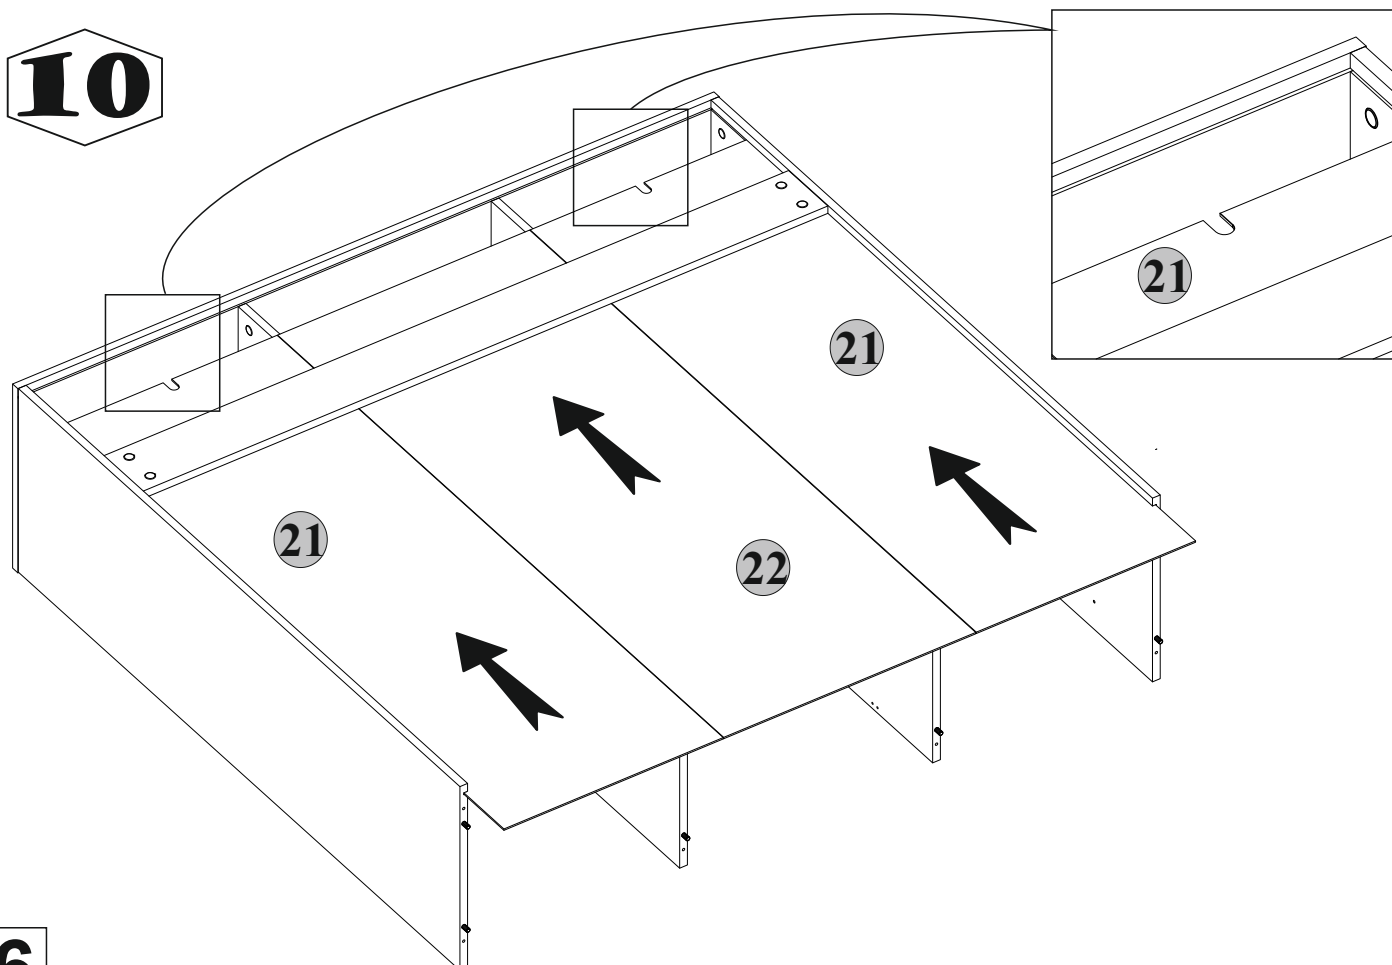


6





11

- 8x  e1
- 8x  s1
- 1x  z1

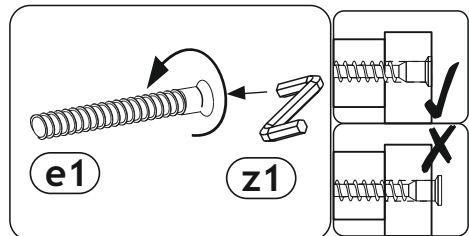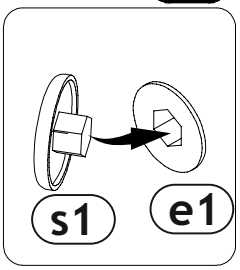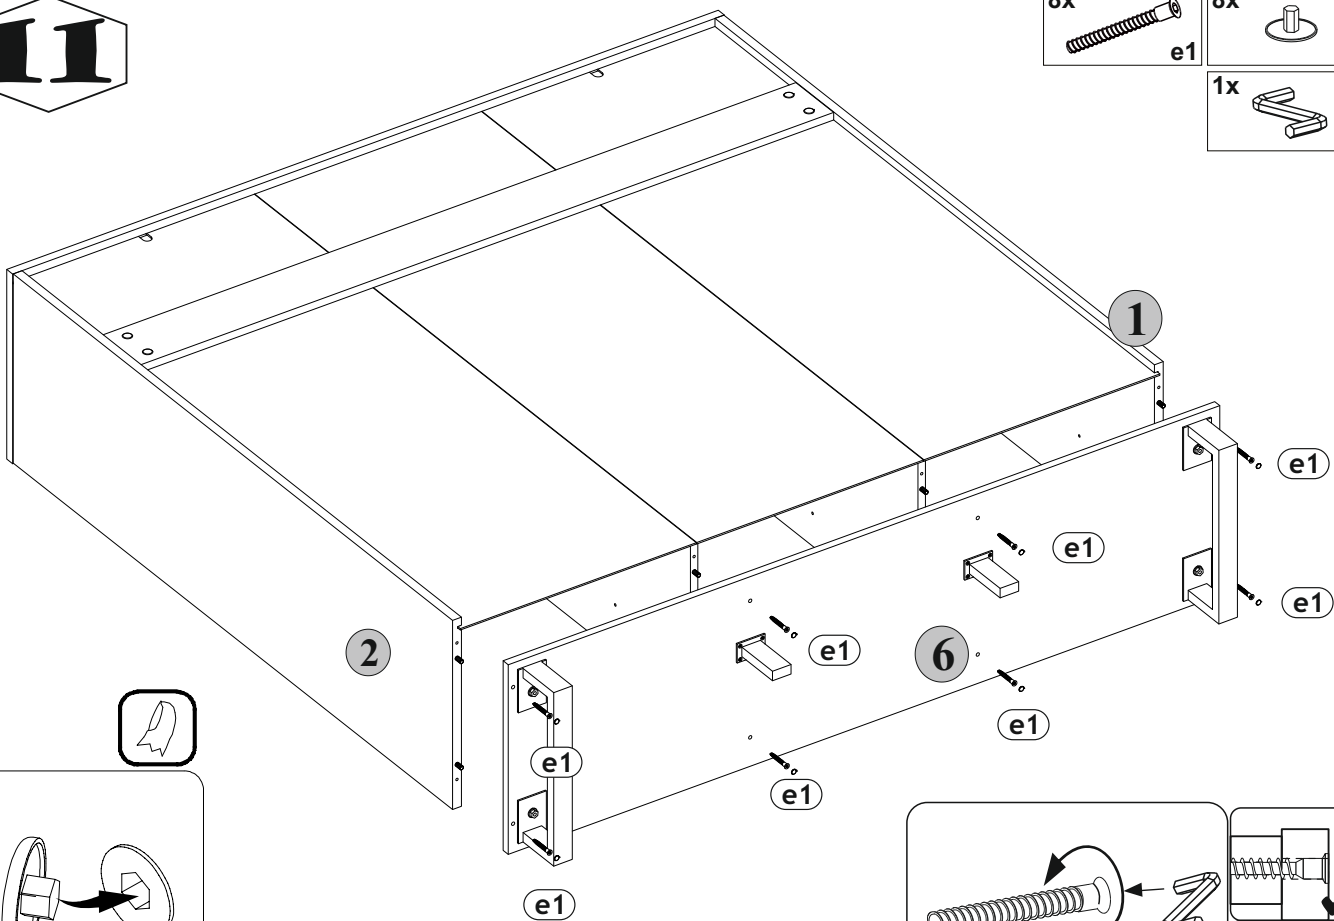

12

- 18x  l2
- 8x  i9
- 8x  p4 $\phi 3.5 \times 16 \text{ mm}$

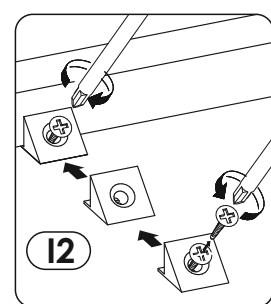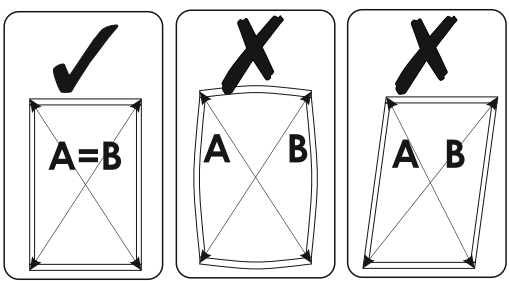
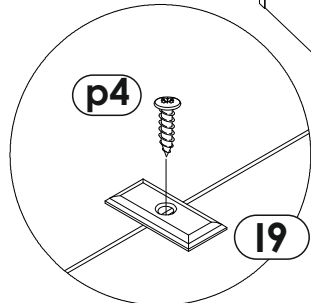
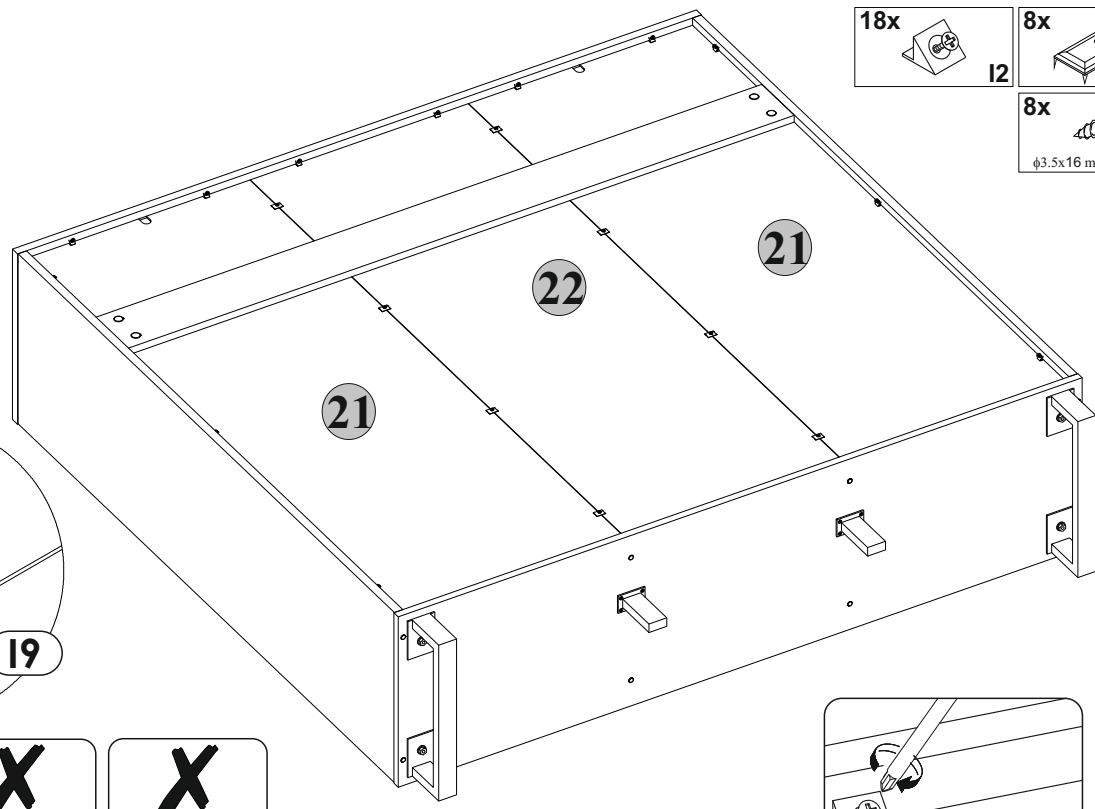


7

13

24x

 φ6x20 mm e23

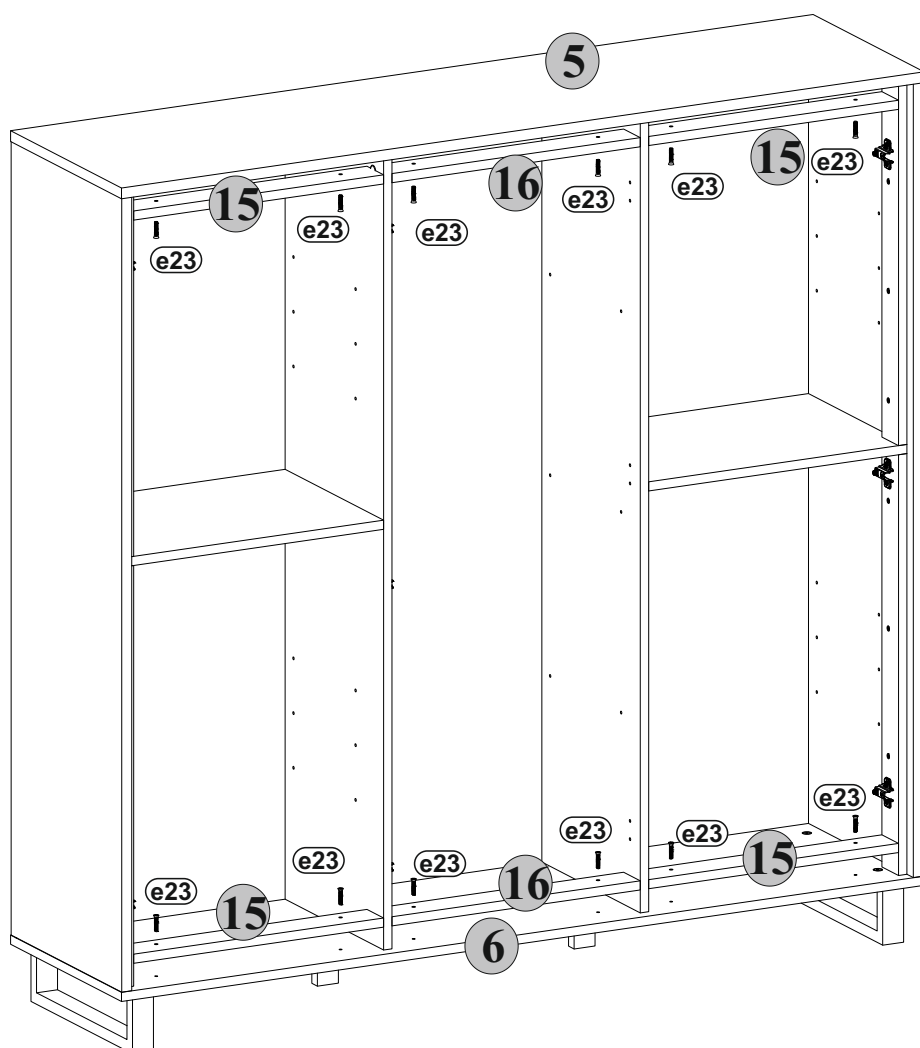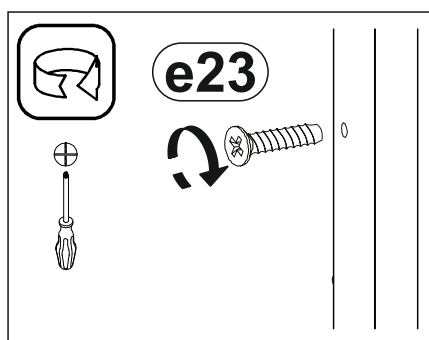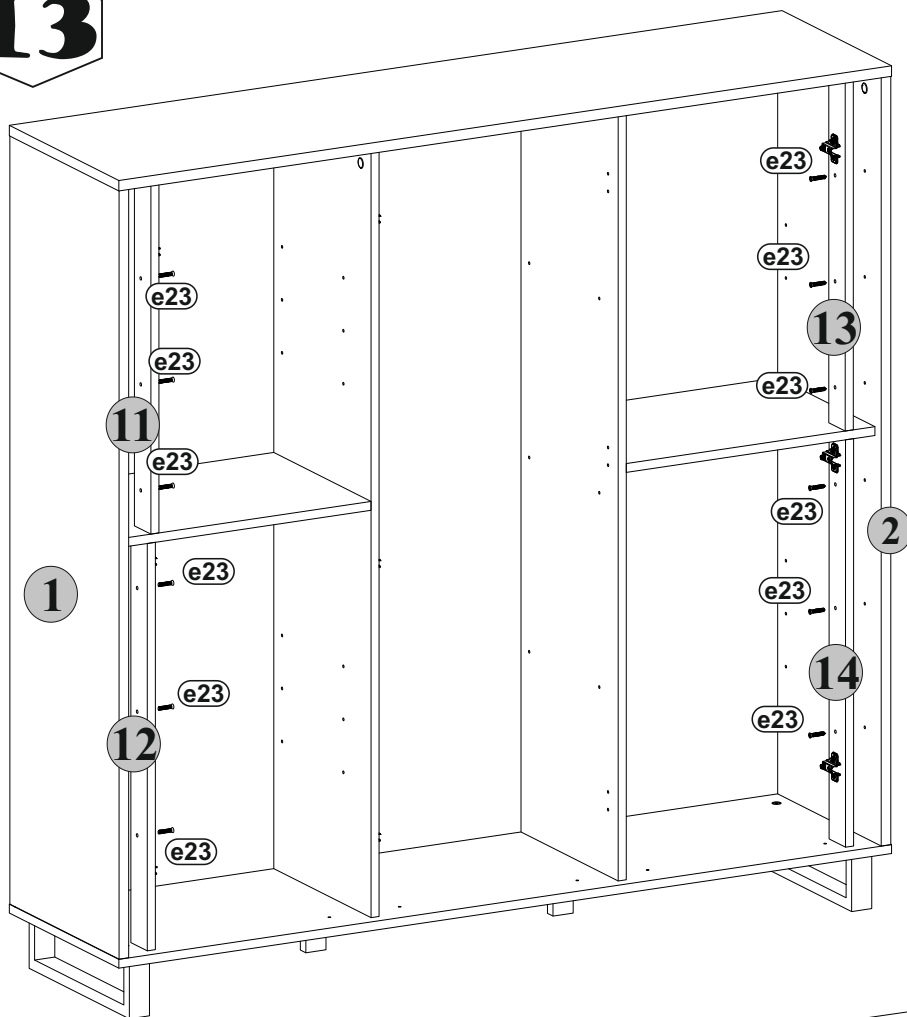


8

14





6x  b3

12x  e2
φ6.3x13 mm

Version L

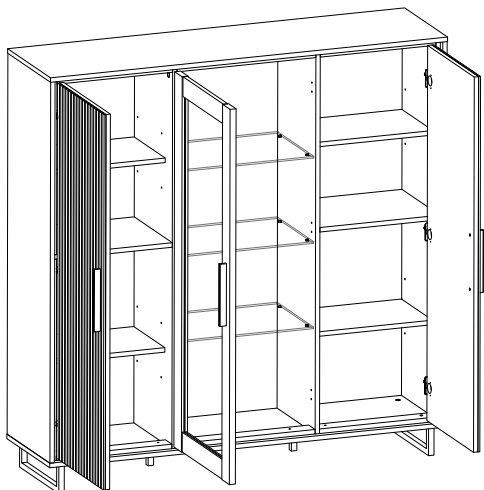

Version R

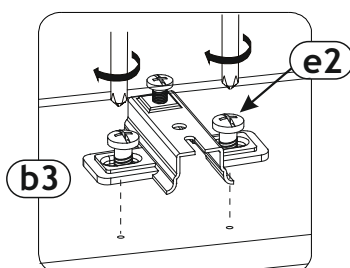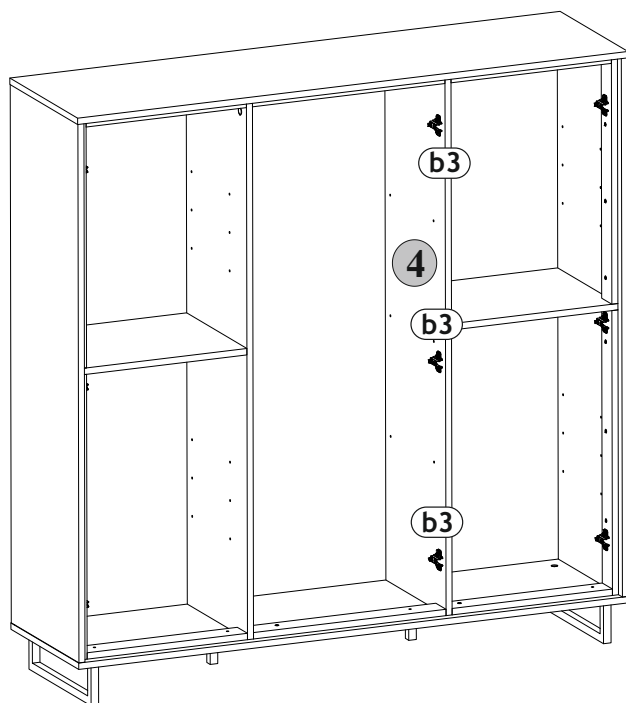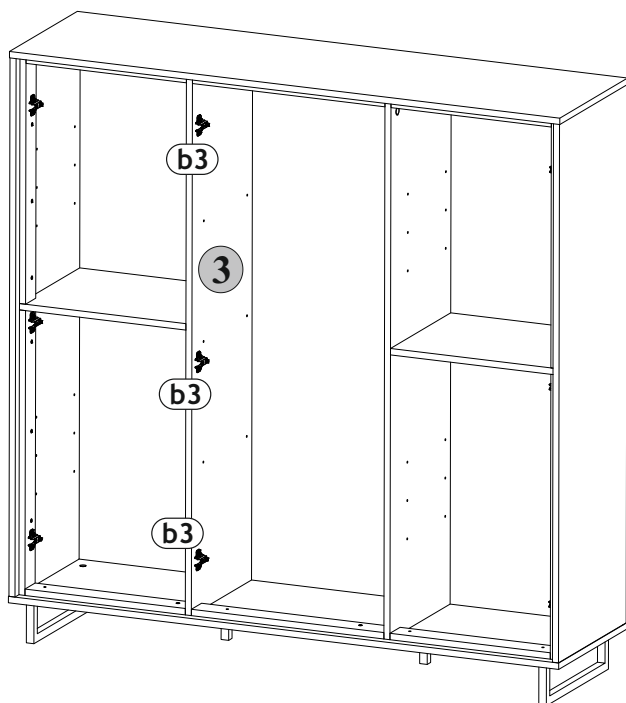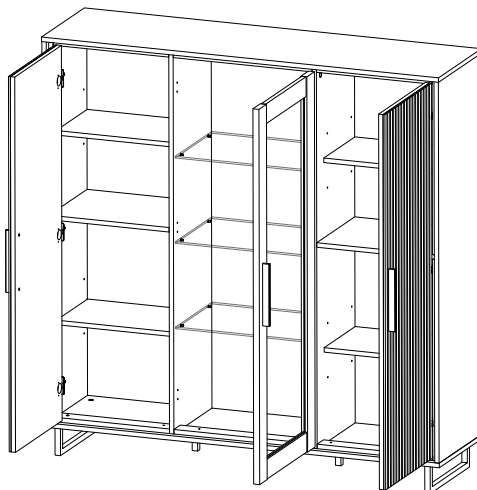



6x  p42

3x




c105

2x  t17

2x  n14

4x  $\phi 3.5 \times 16 \text{ mm}$ **p1**

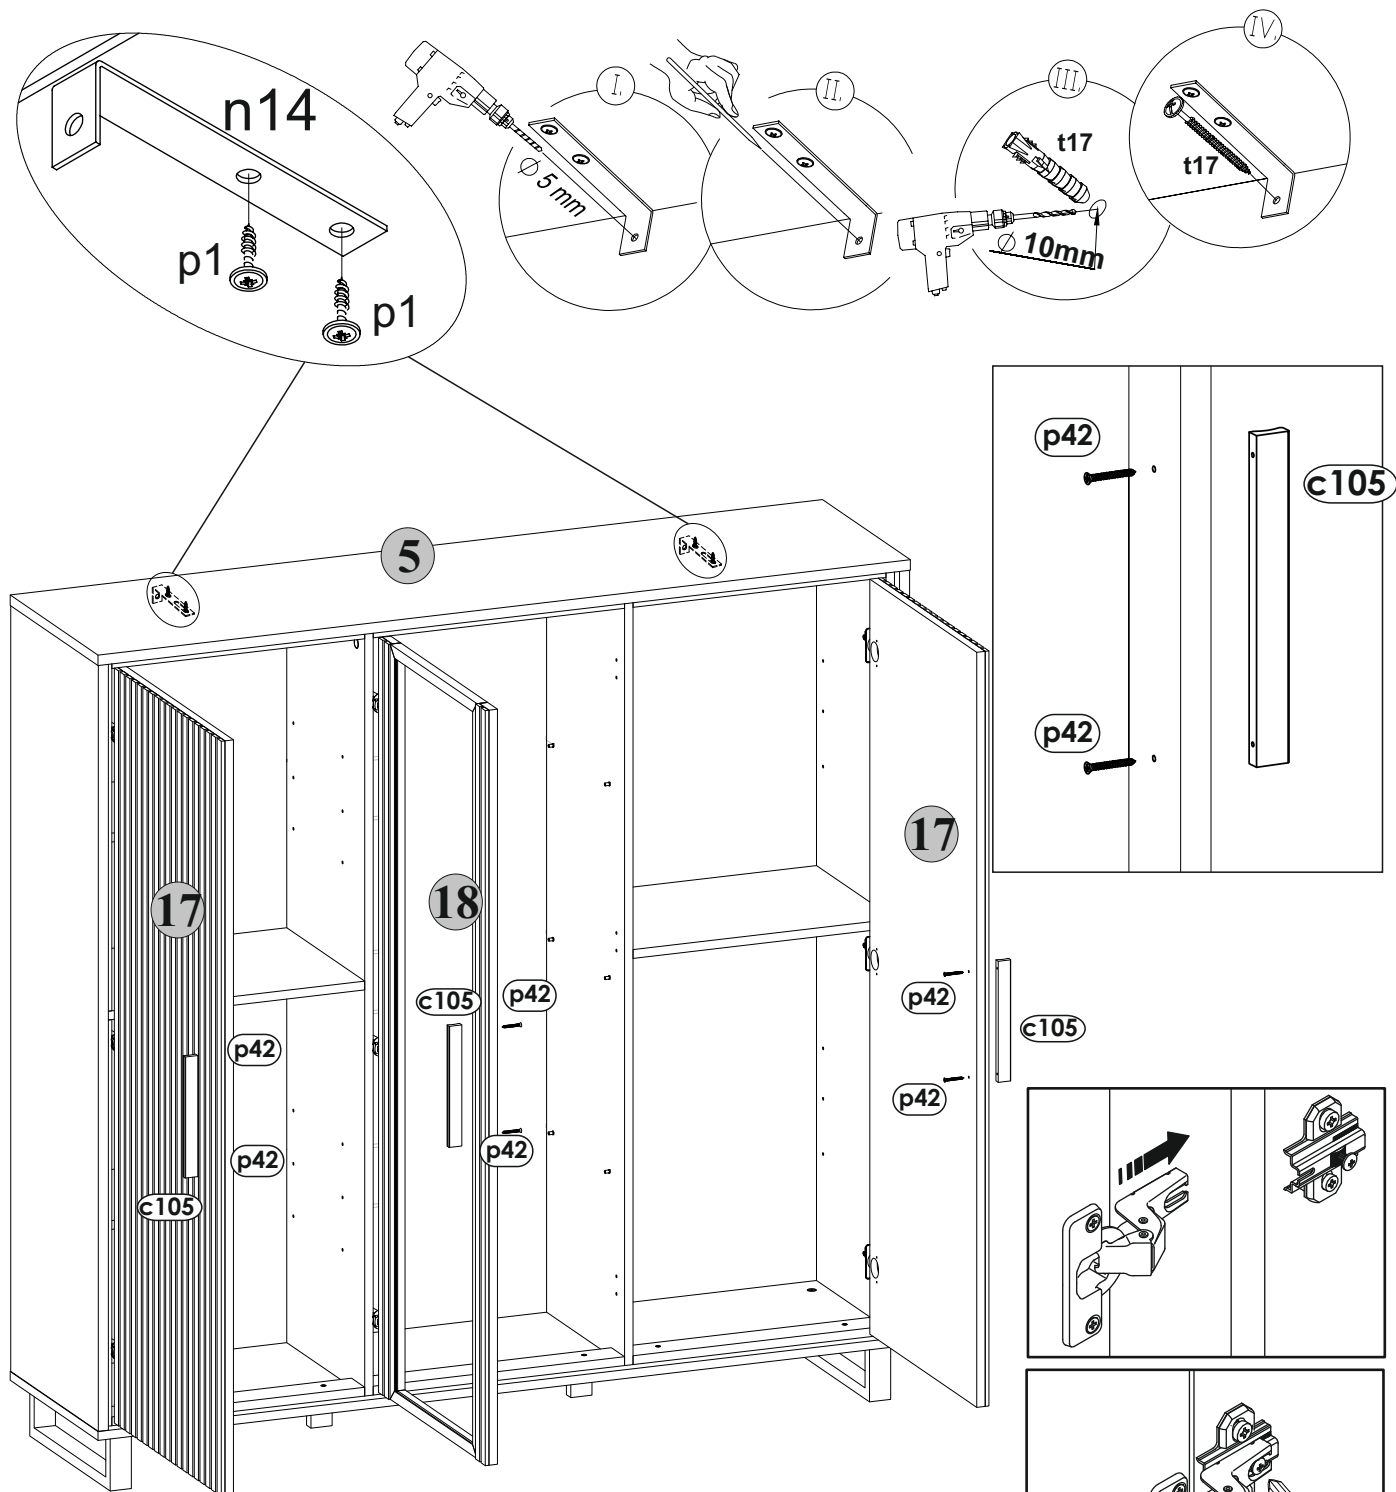




10

16

12x  $\phi 5 \times 17$ mm d3

16x  $\phi 5 \times 17$ mm d1

32x  s2/a

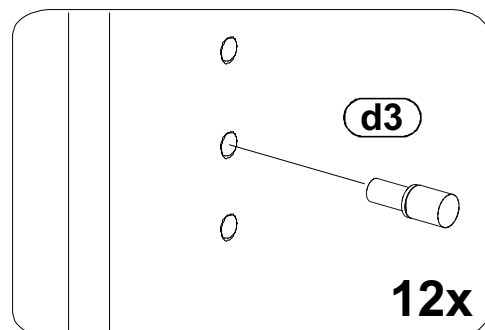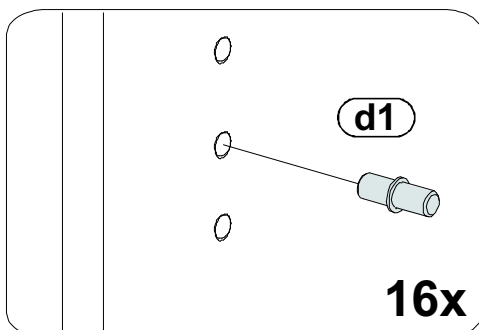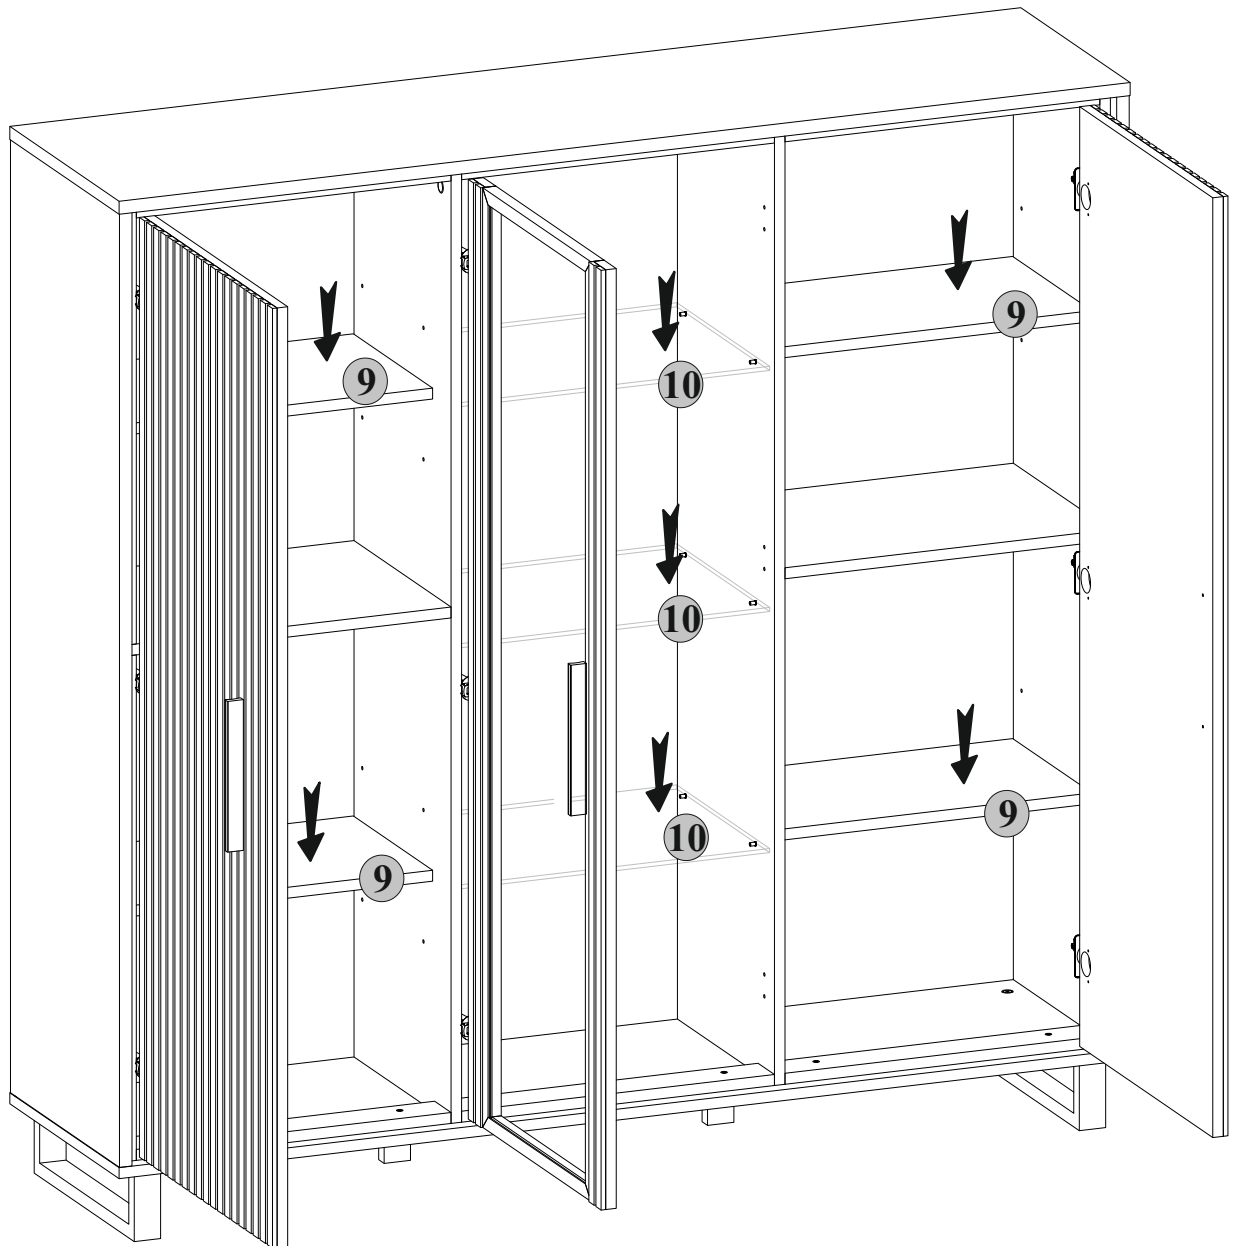

11