
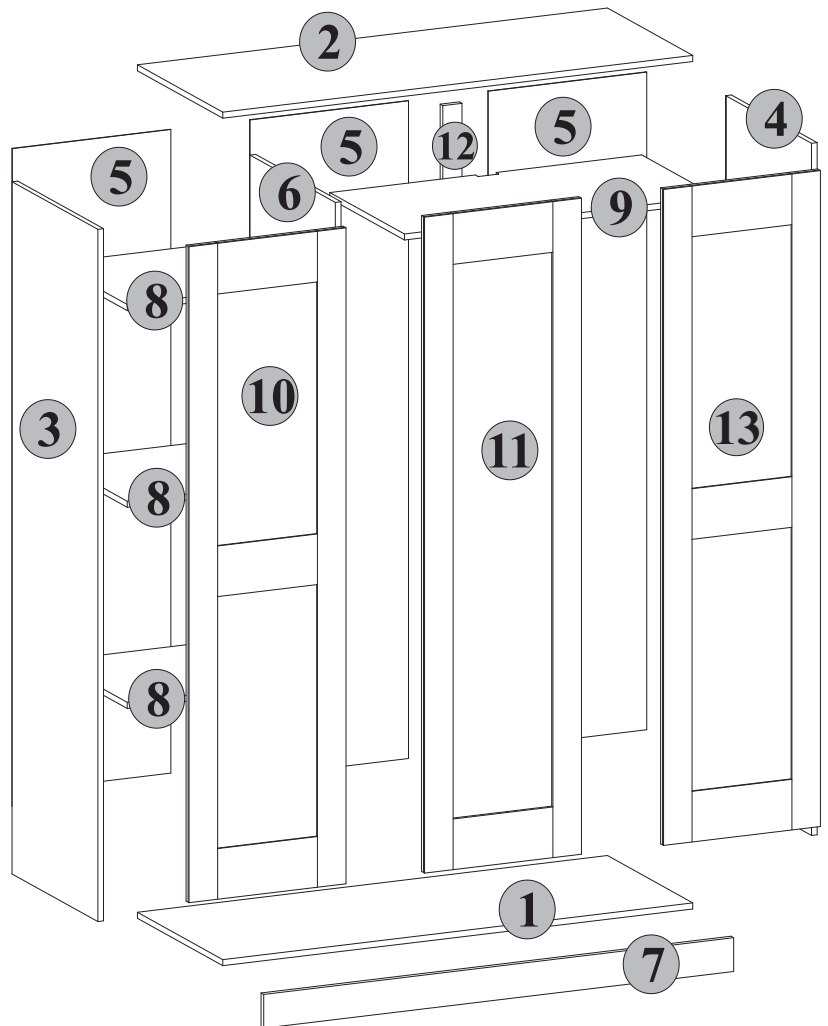
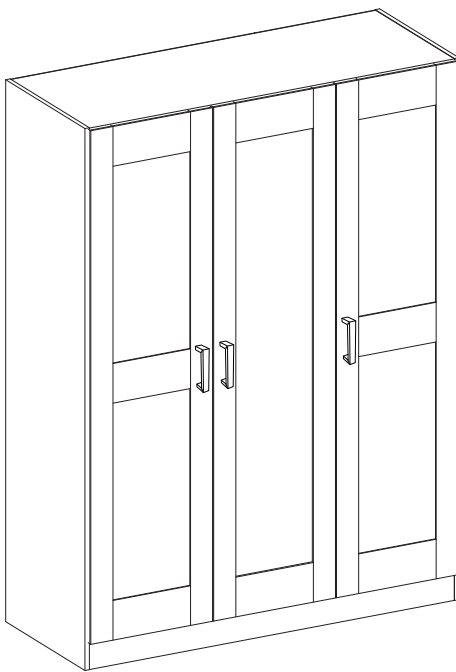
















TONI 3S

versionsnummer: 08.10.2021

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



3x  k7	6x  n2	6x  n3	100x  1x16 l1	5x  k1	20x  l9	3x  c93
52x  φ3.5x13 mm p1	32x  φ3.5x16 mm p3	6x  φ4x30 mm p9	12x  φ5x17 mm d1	4x  d17	4x  d15	2x  n302
27x  r16	27x  φ15 #12.5 r1	27x  s2	12x  φ8x30 mm f1	24x  φ6.3x13 mm e2	12x  a2	12x  b1

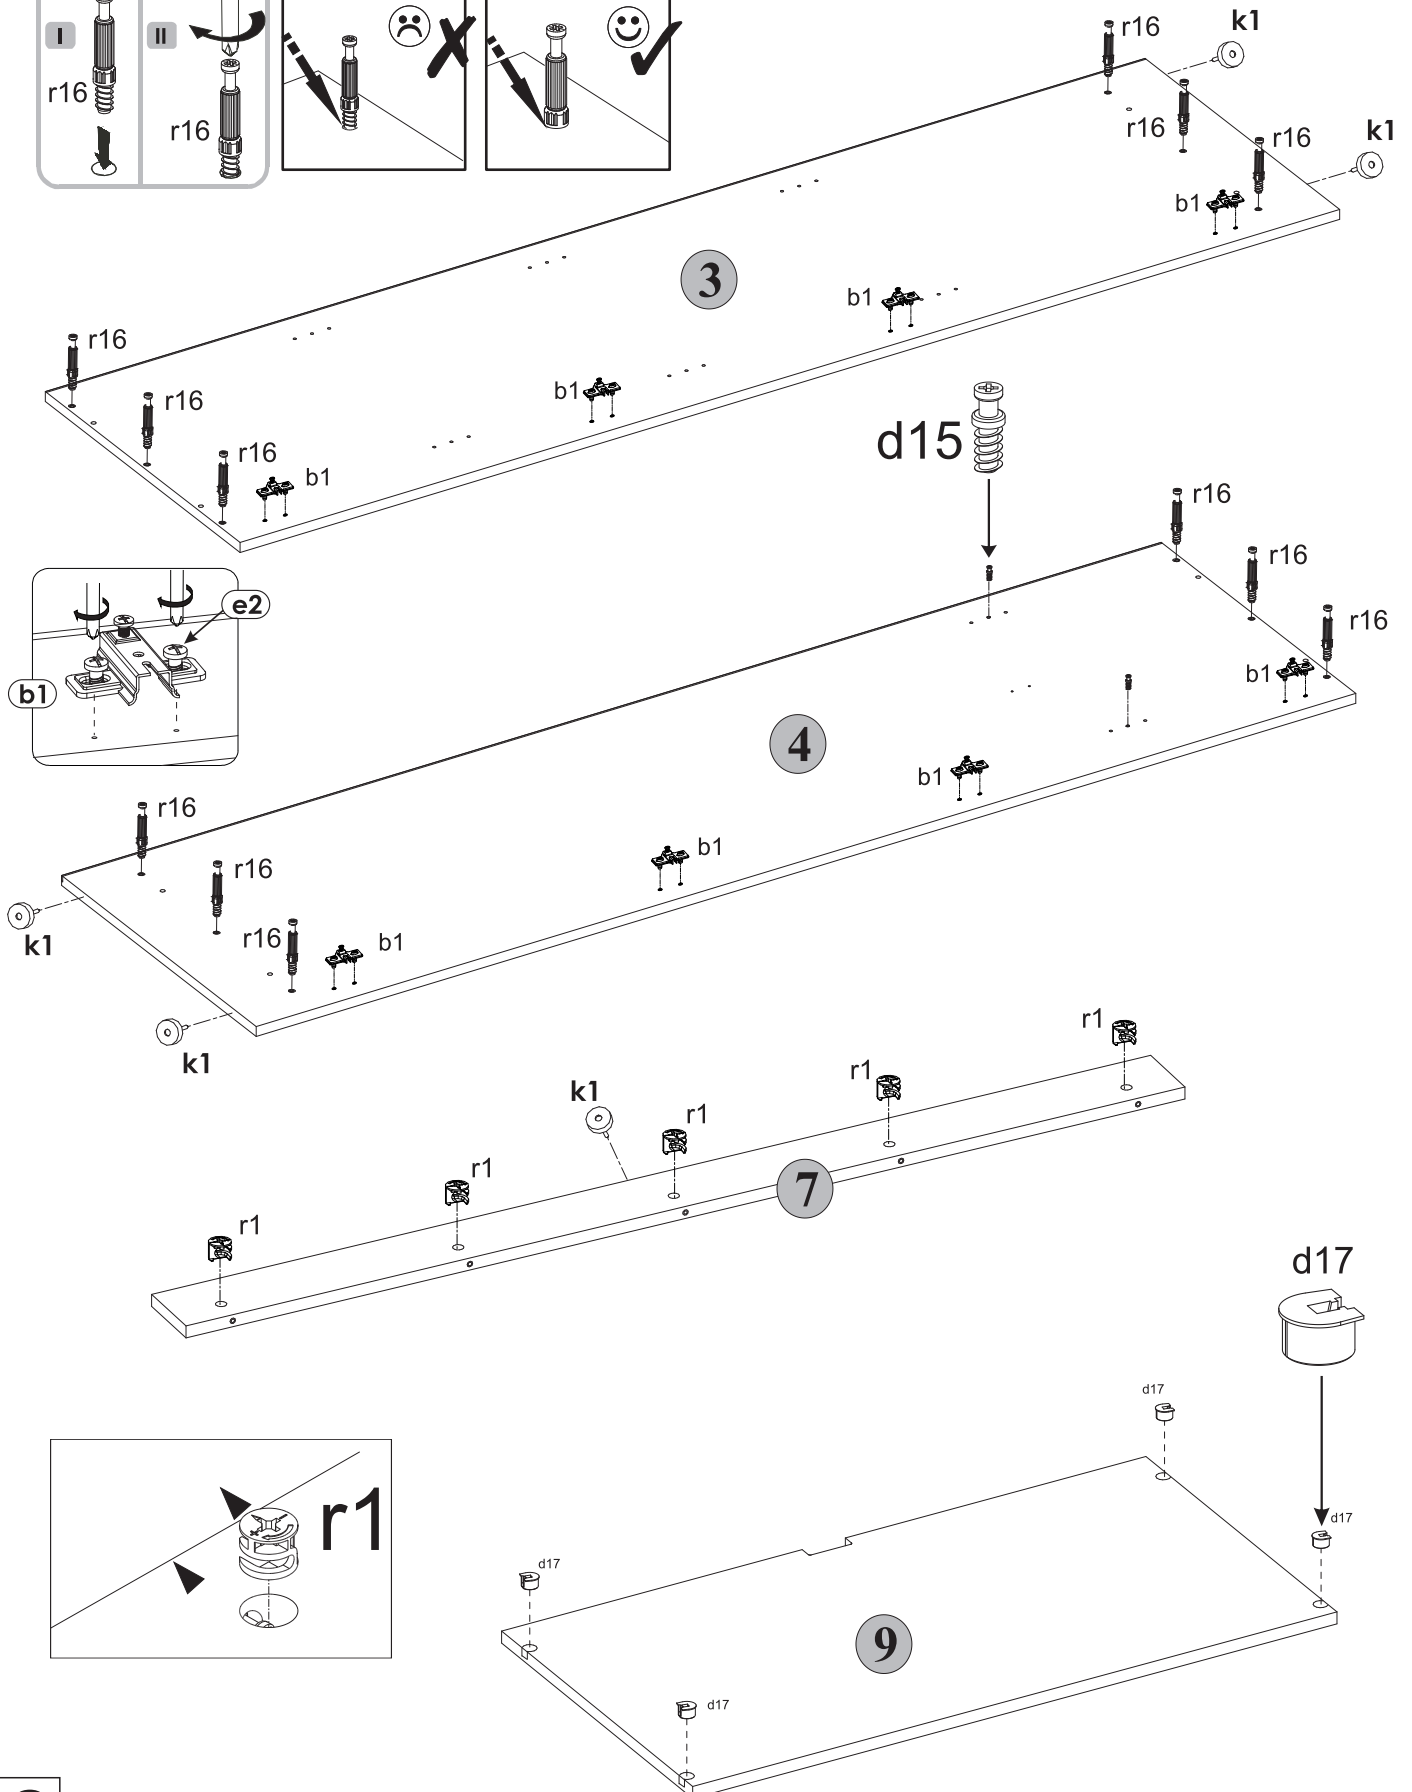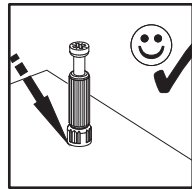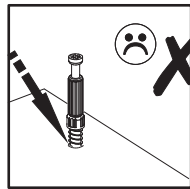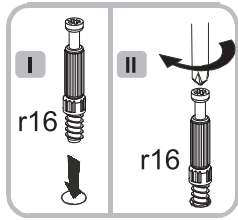

2

3x



k7

5x



r16

10x  $\phi 15$ #12.5 **r1**

2x  d15

12x










φ3.5x13 mm

p1

8x  $\phi 6.3 \times 13 \text{ mm}$ **e2**


8x  $\phi 8 \times 30 \text{ mm}$ **f1**

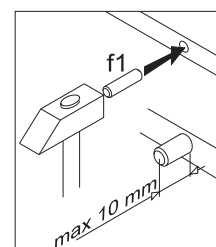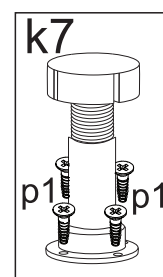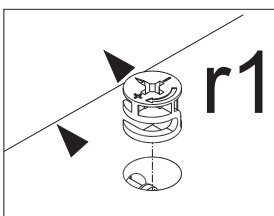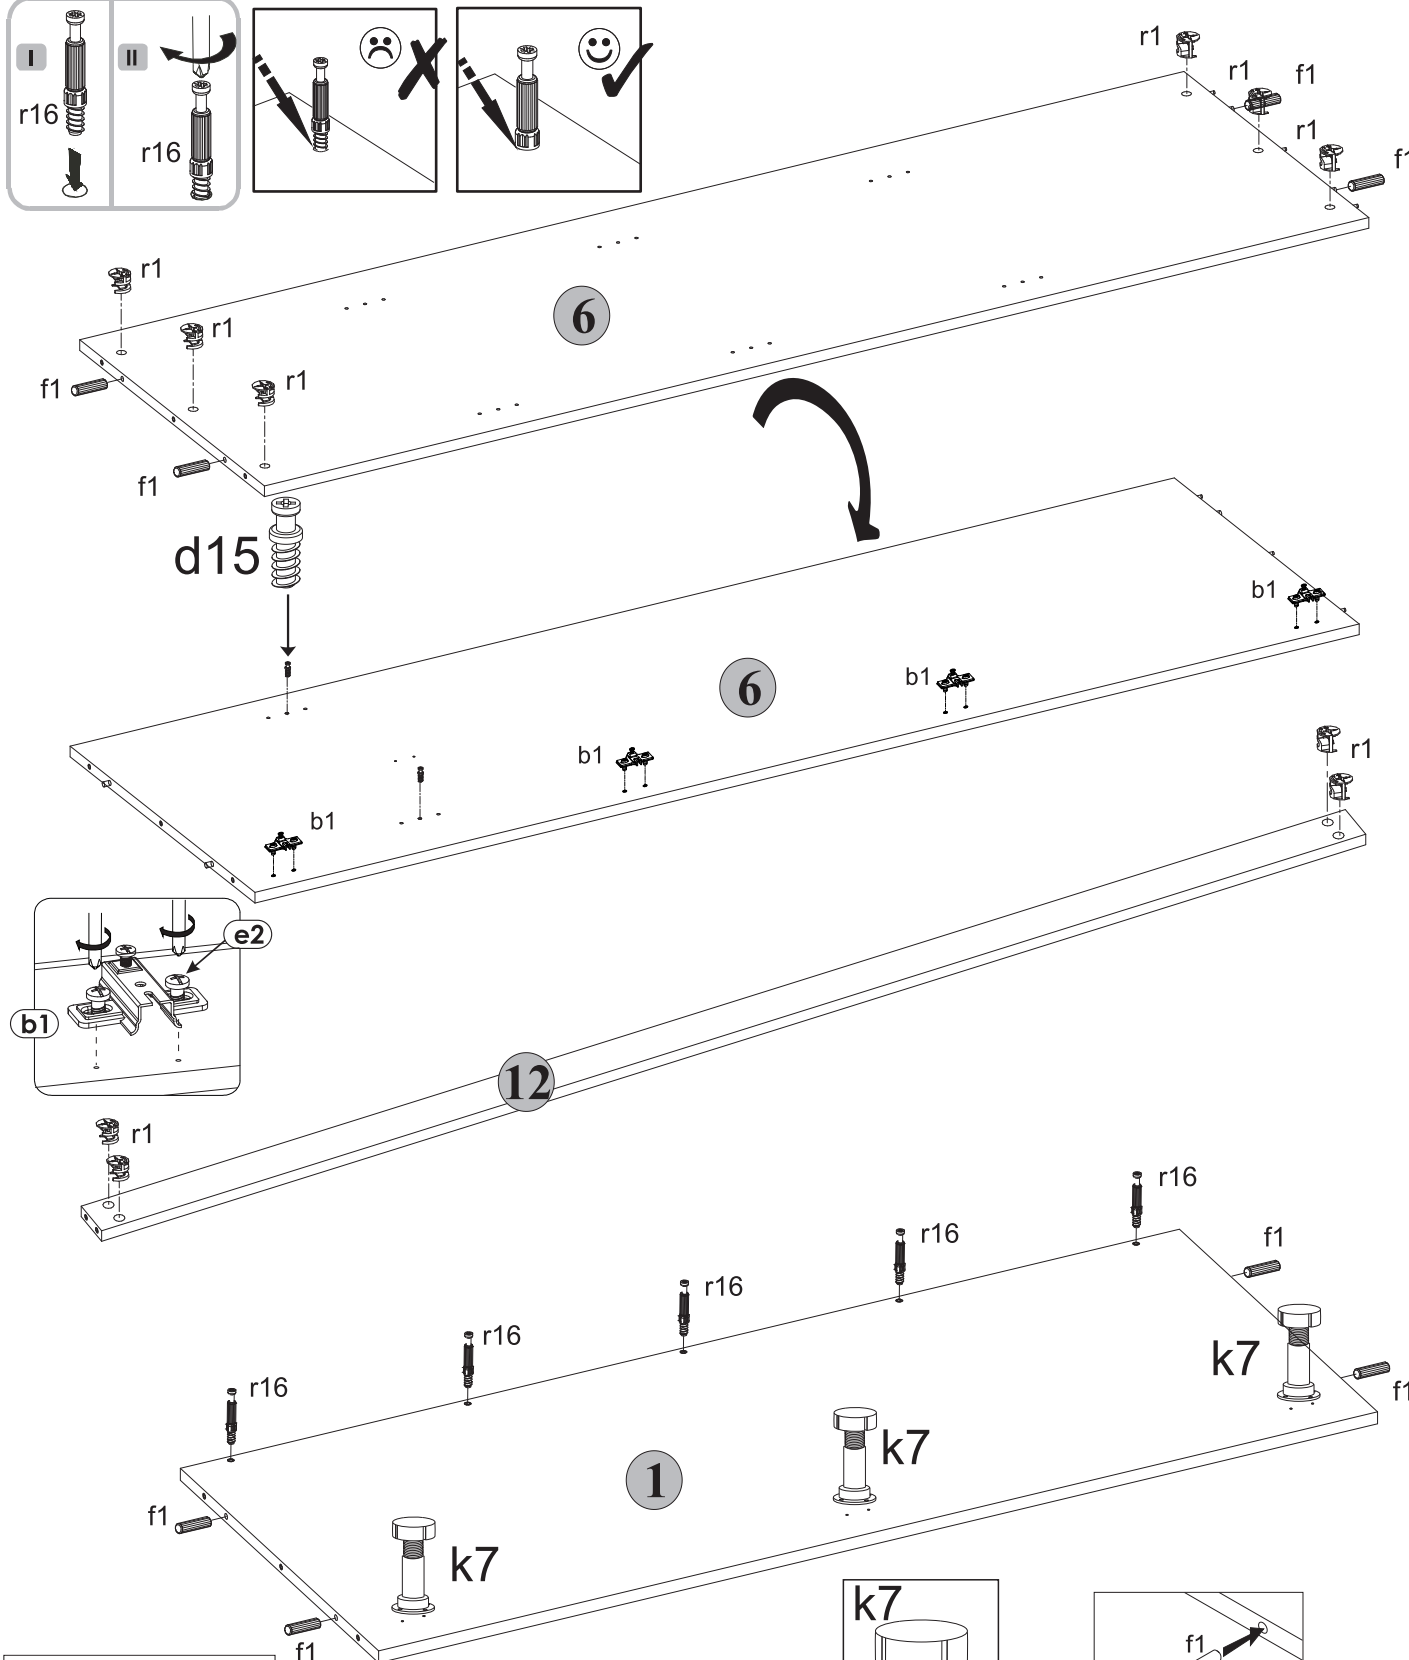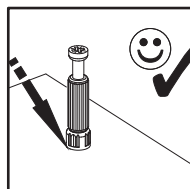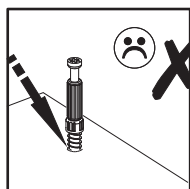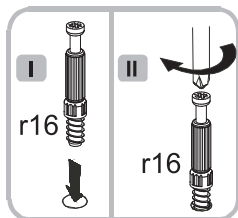

3

3



x2

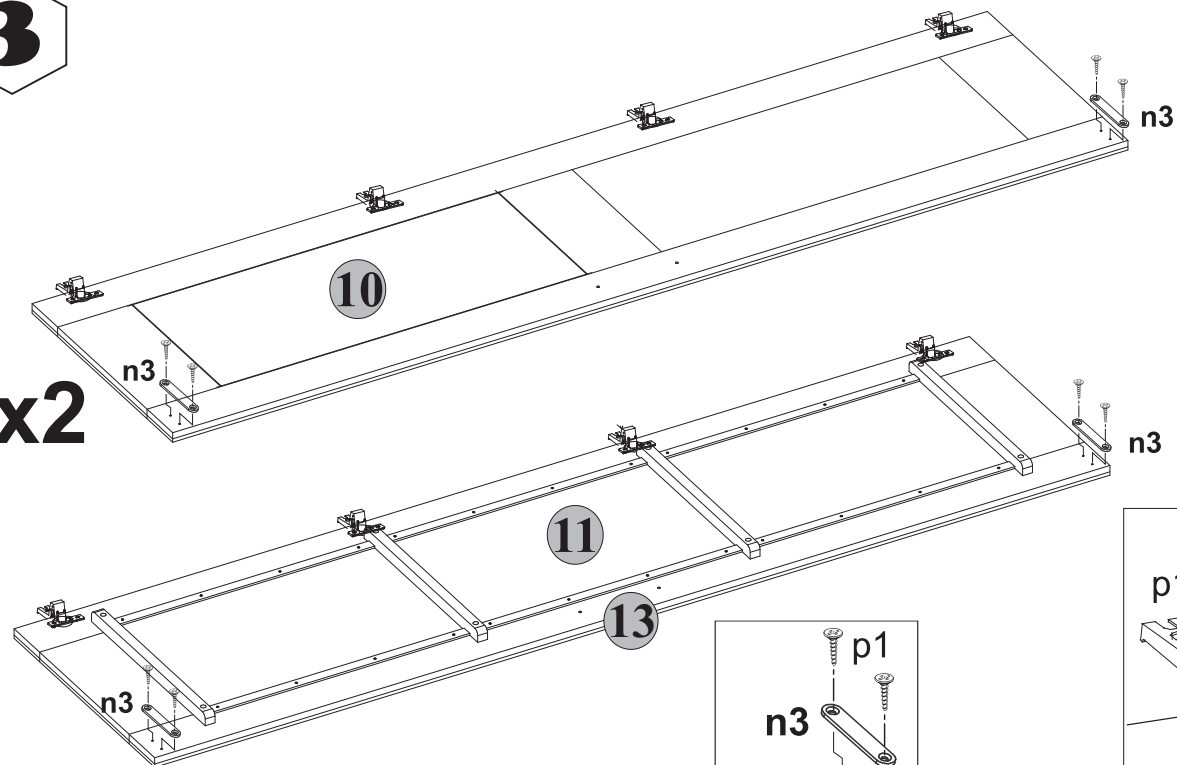


12x  a2

36x  p1
φ3.5x13 mm

6x  n3

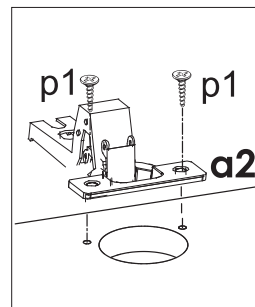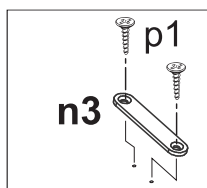






4

5x  r16

6x  r1
φ15 #12.5












3x  n2

6x  p3
φ3.5x16 mm

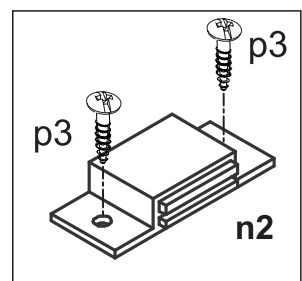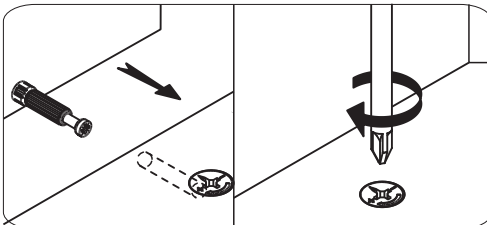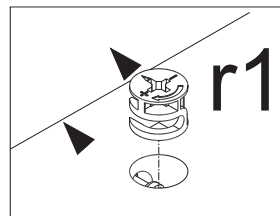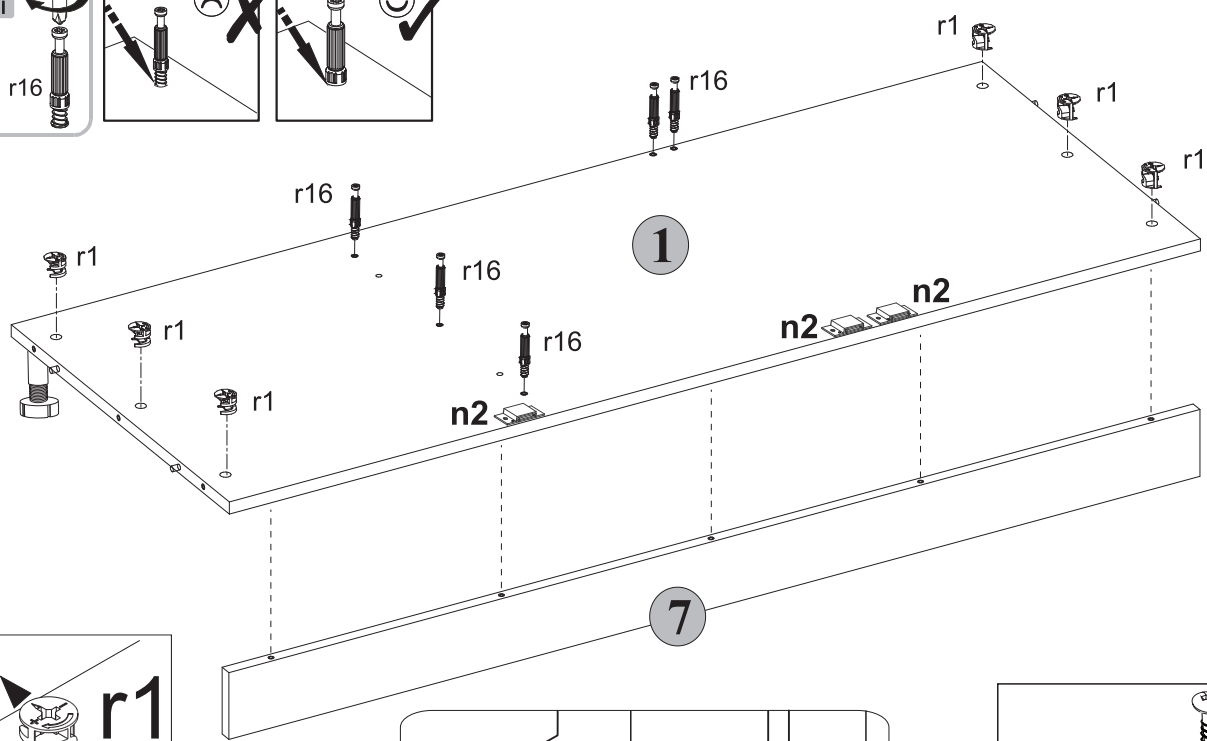
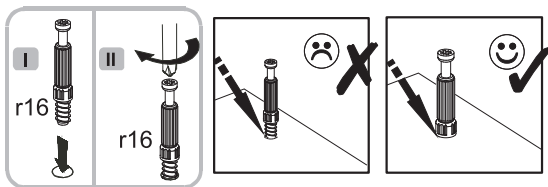


4

5

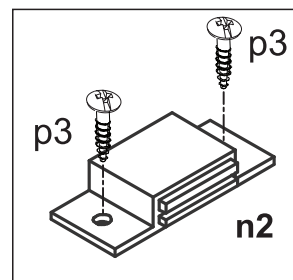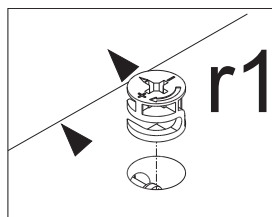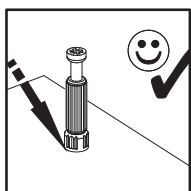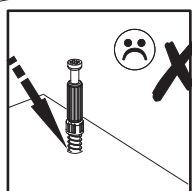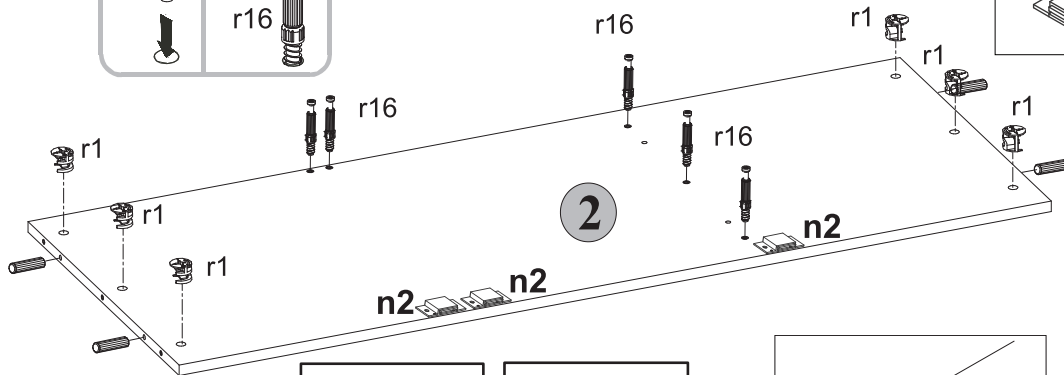
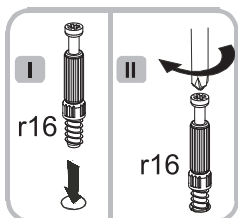


6

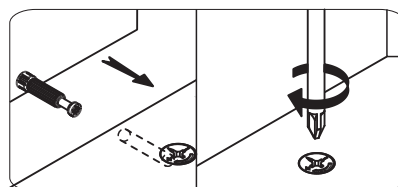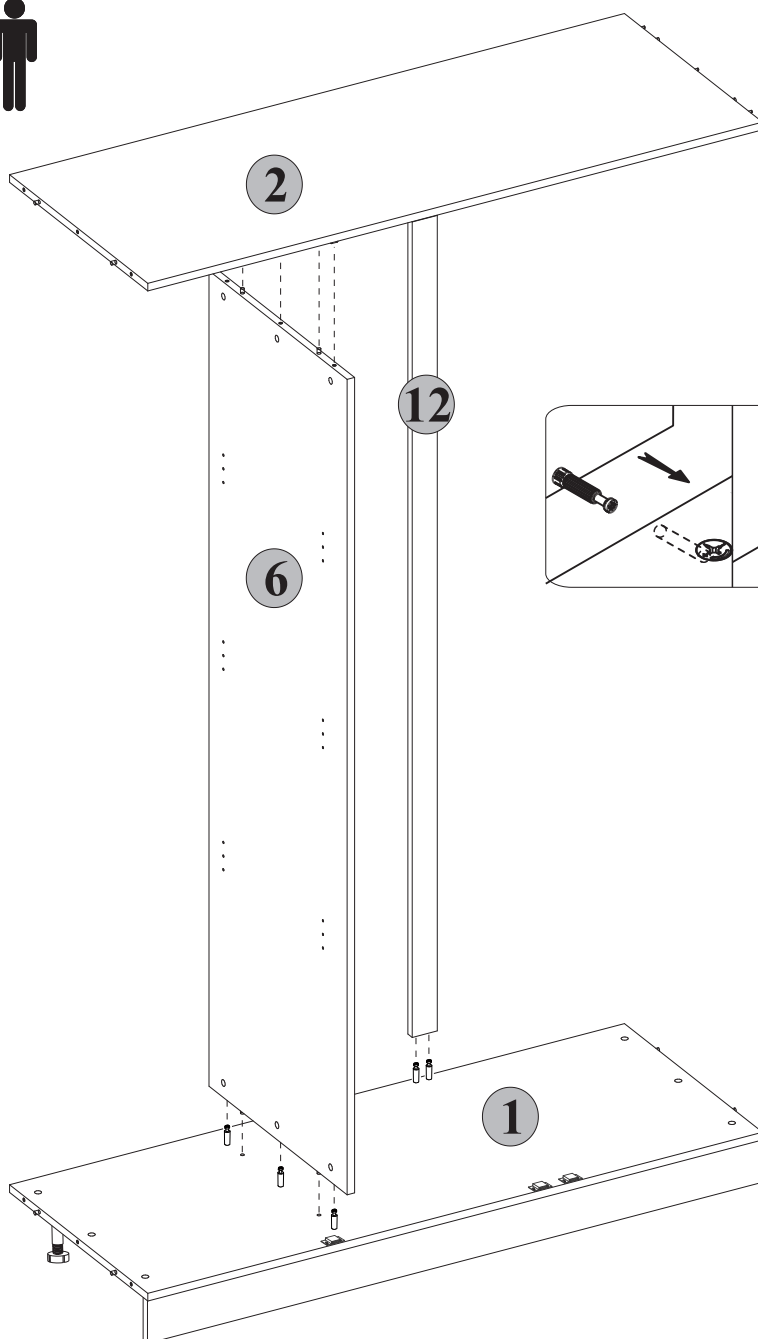


5

7

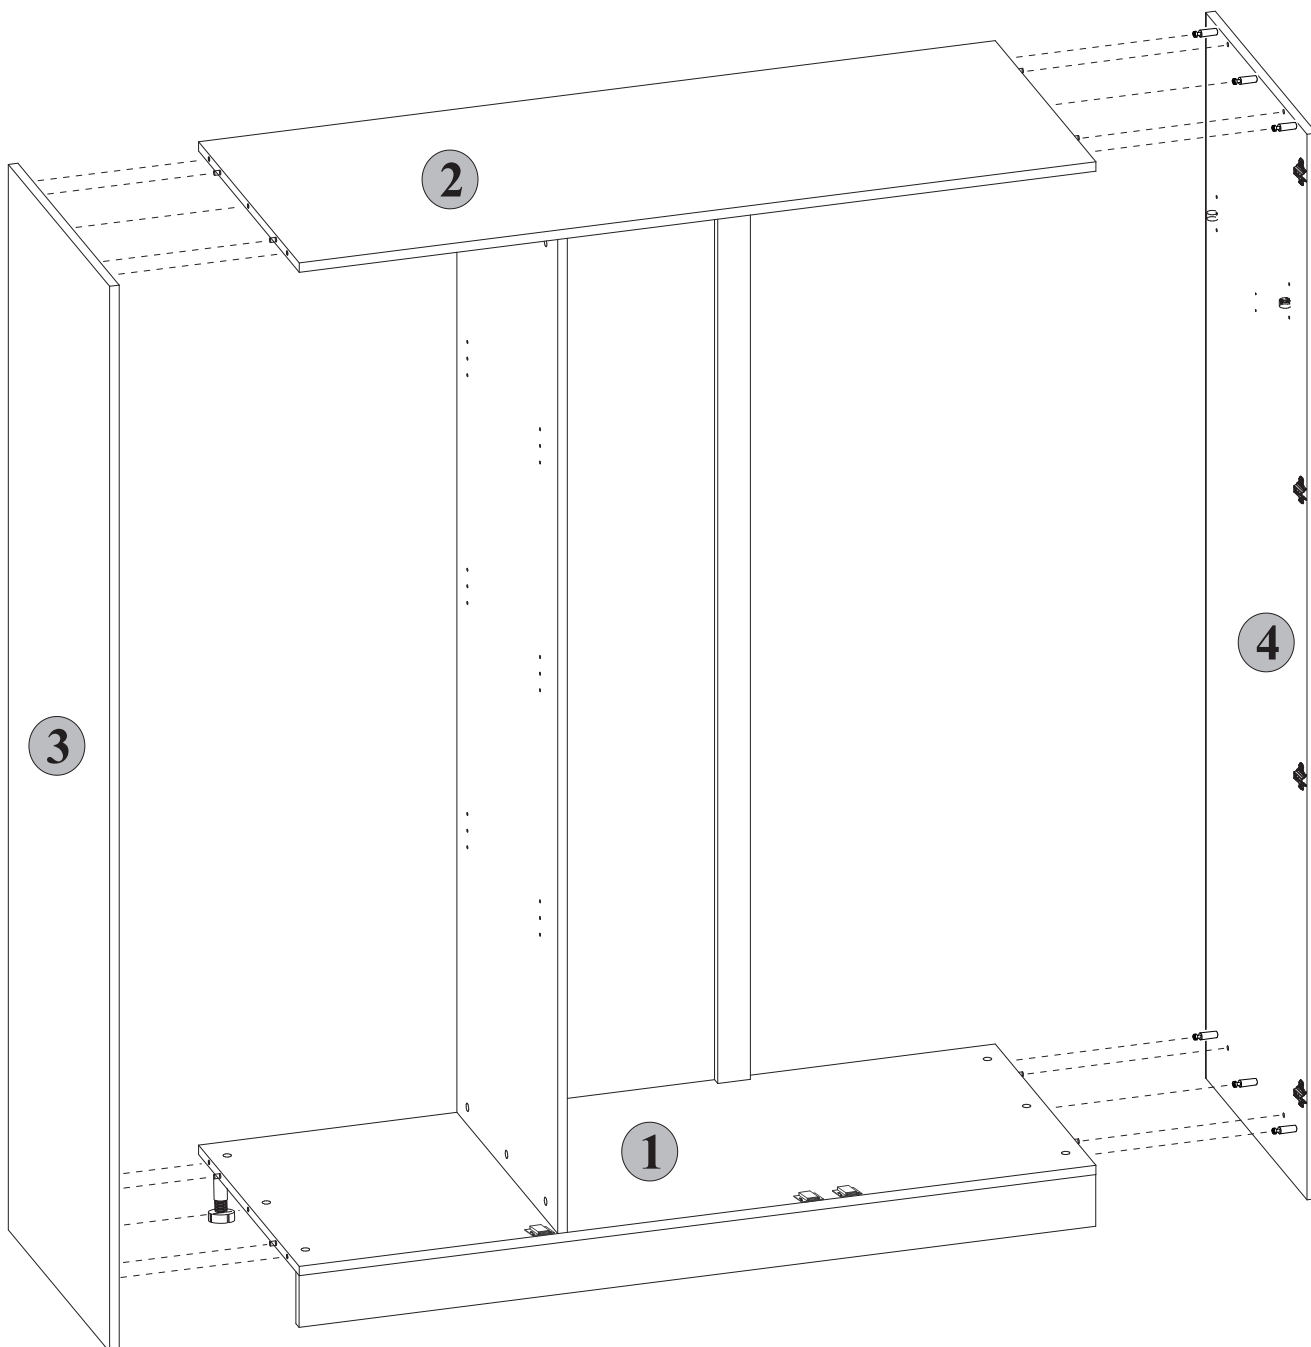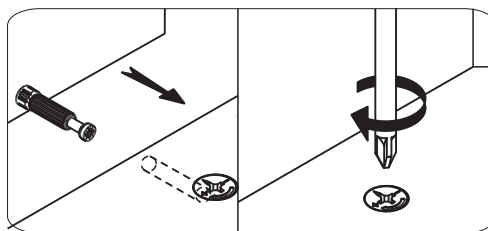

8

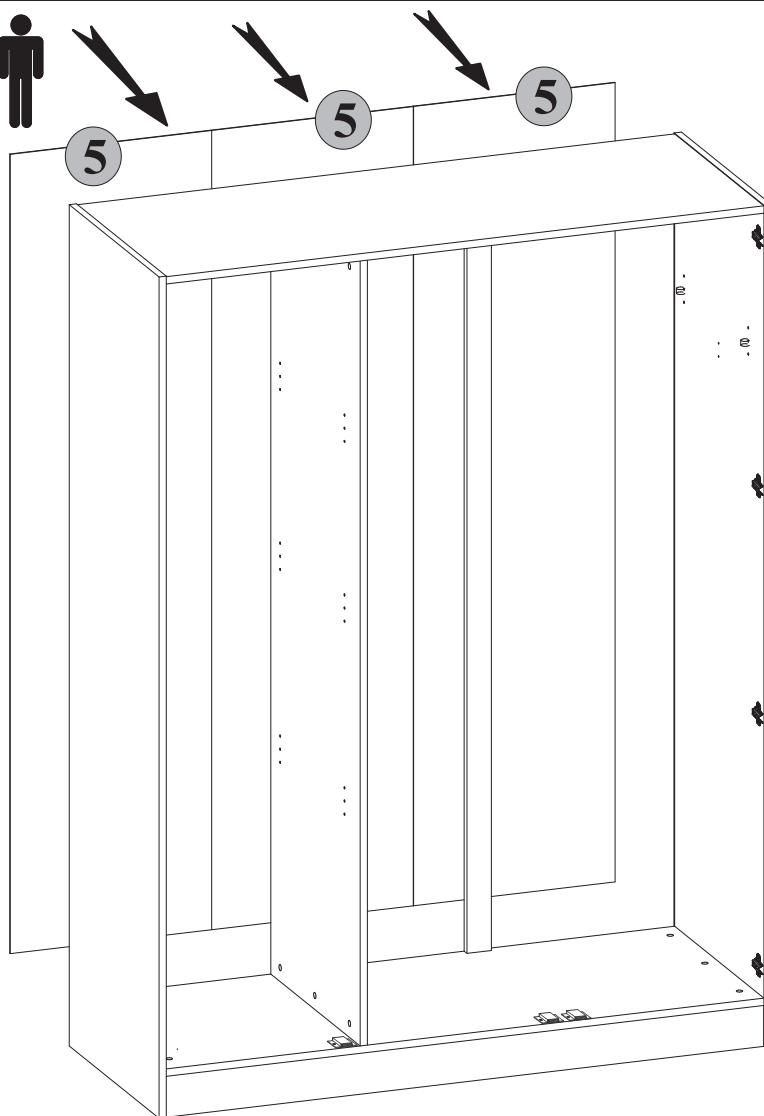




- 100x
1x16

I1
- 20x

I9
- 20x

p3

$\phi 3.5 \times 16 \text{ mm}$

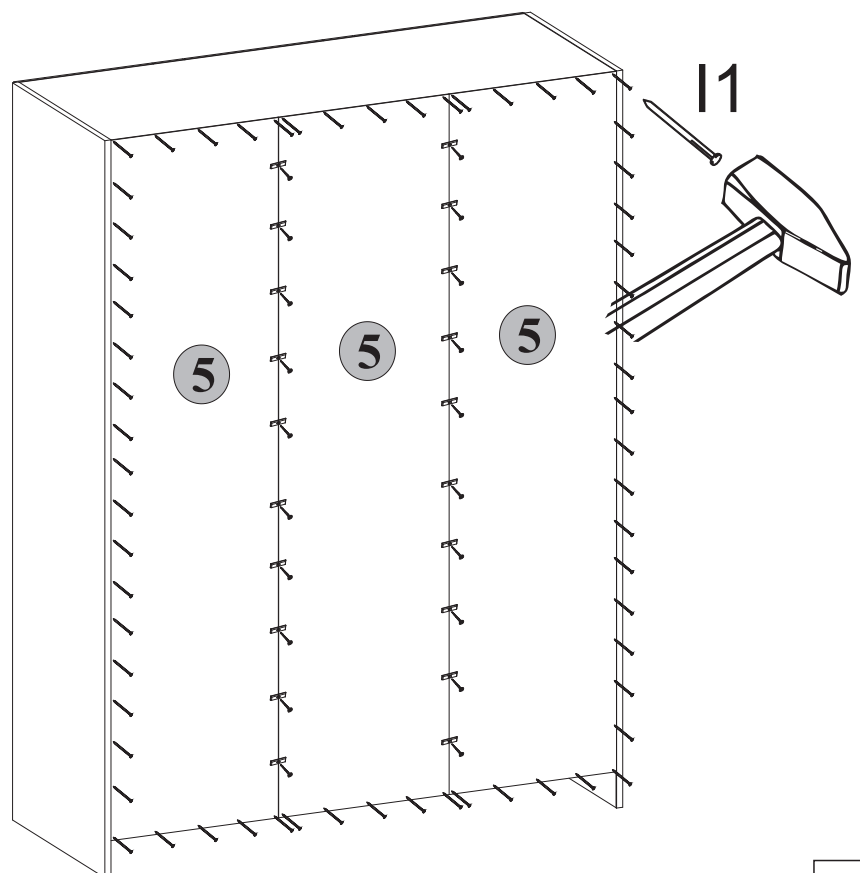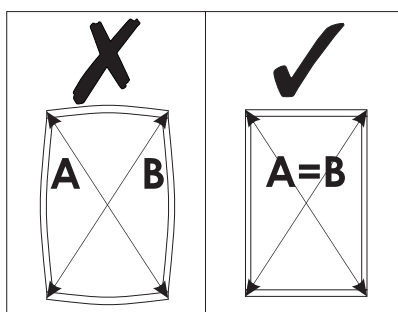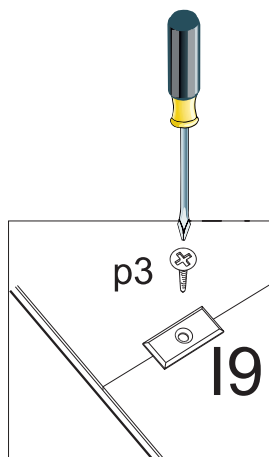






7

9

12x  $\phi 5 \times 17$ mm d1


2x  n302

4x  $\phi 3.5 \times 13$ mm p1

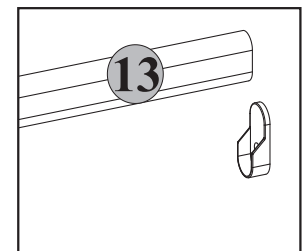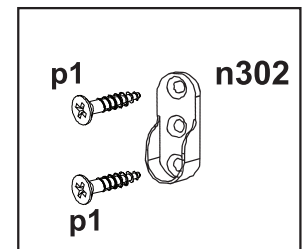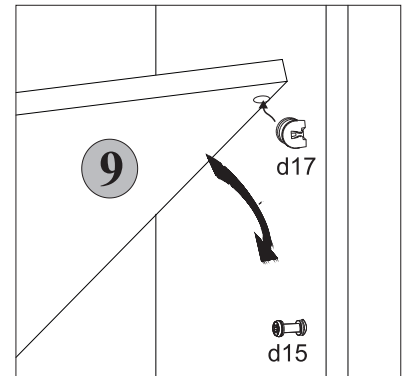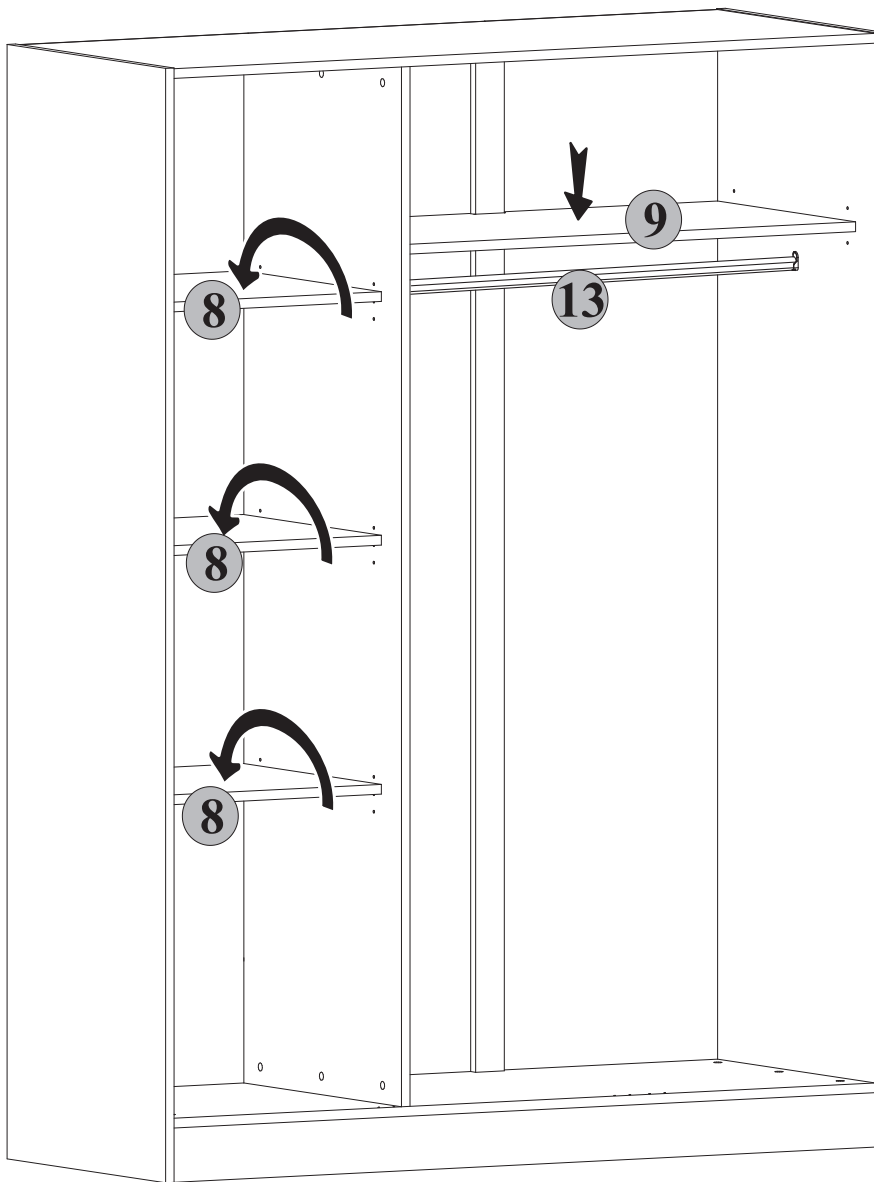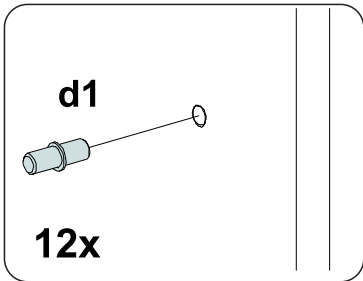






8

10

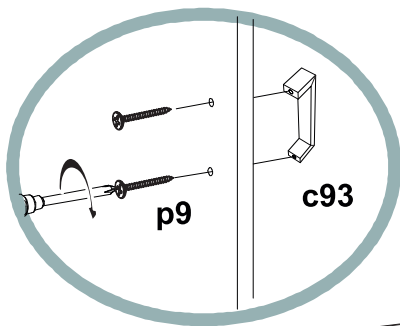

3x
c93

6x
p9
 $\phi 4 \times 30$ mm

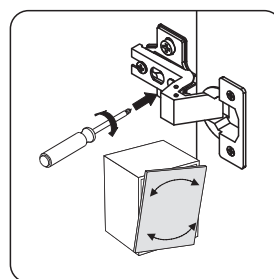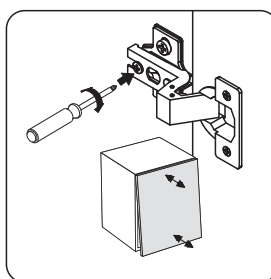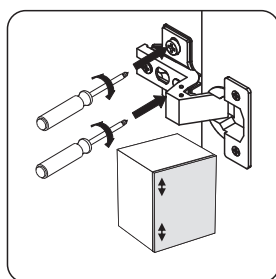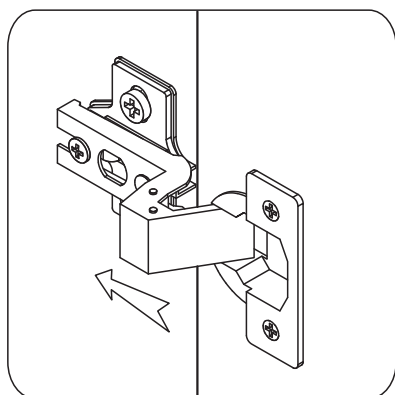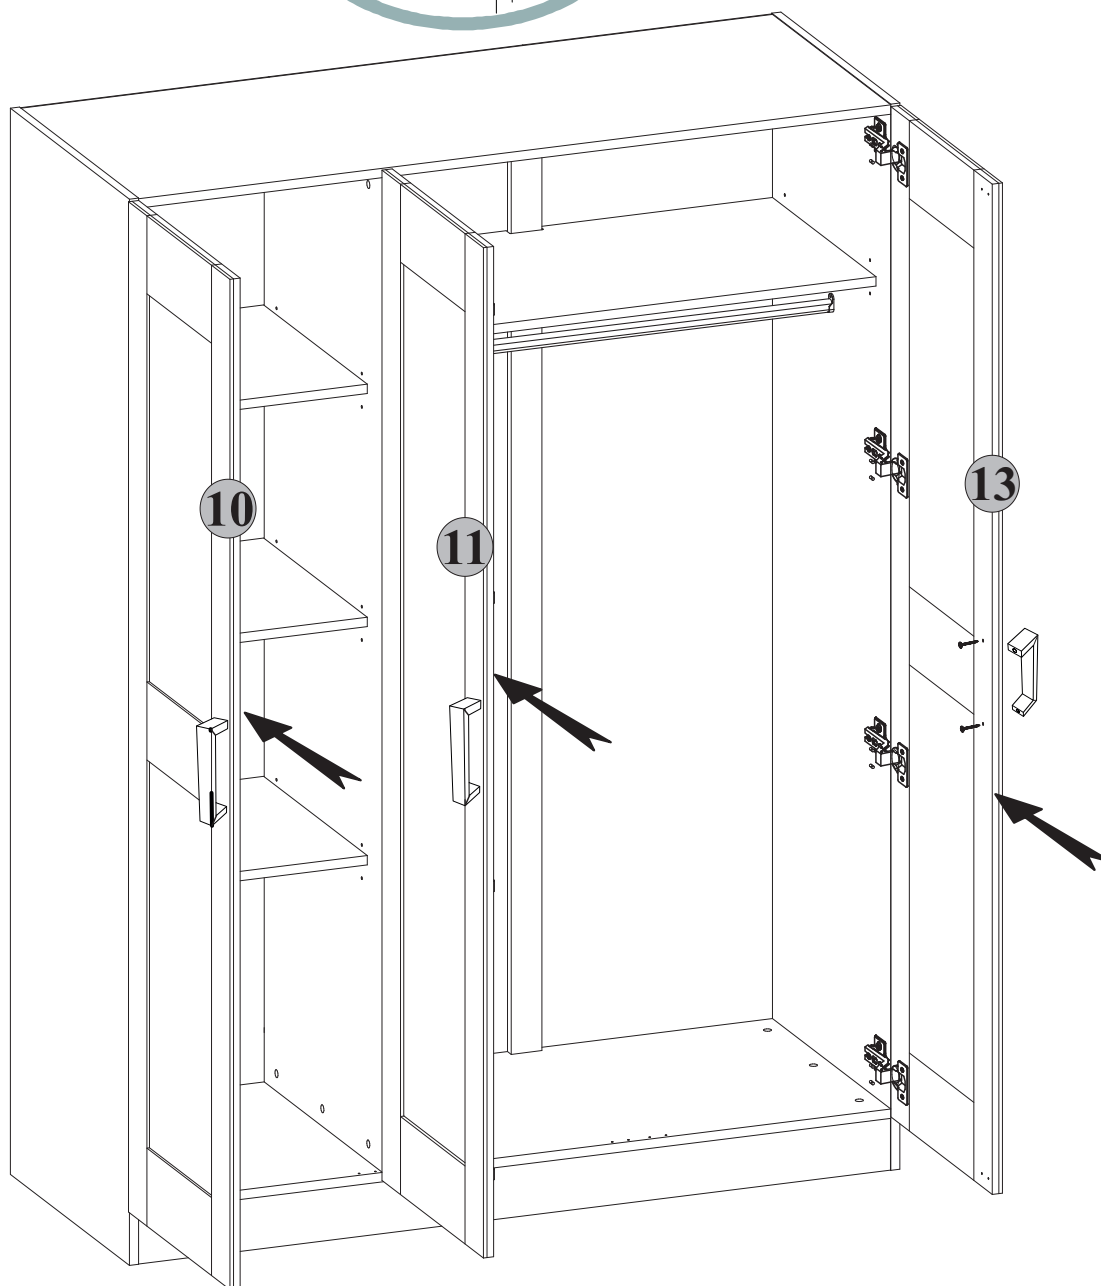

9