
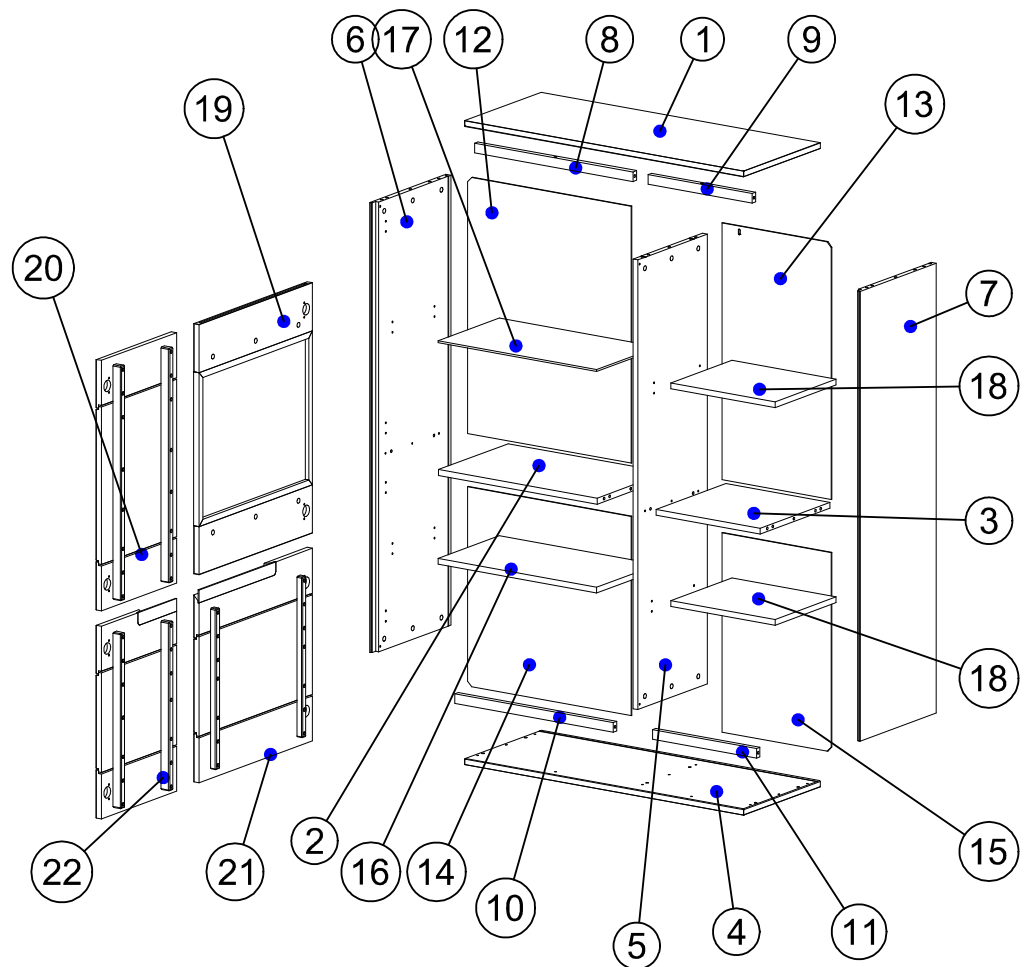


3994


Versionsnummer:

11.2023








Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.









x2 80 min

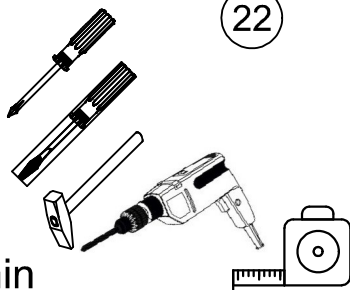


A $\varnothing$ 8x30 16	A1 $\varnothing$ 8x50 2	B 28	D 28	D1 10/10	D2 4/4	E 8	F $\varnothing$ 6.3x13 8	G $\varnothing$ 4x30 10
H 22	I1 12	I2 4	J $\varnothing$ 5x13 16	P 22	V 5	U 1	Q 22	

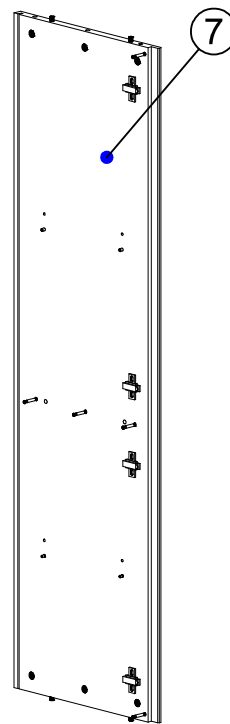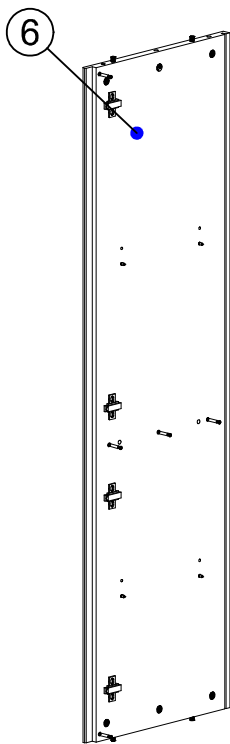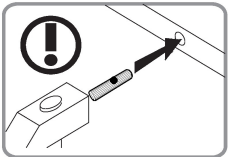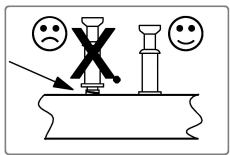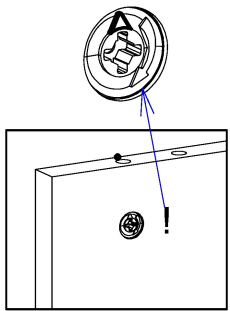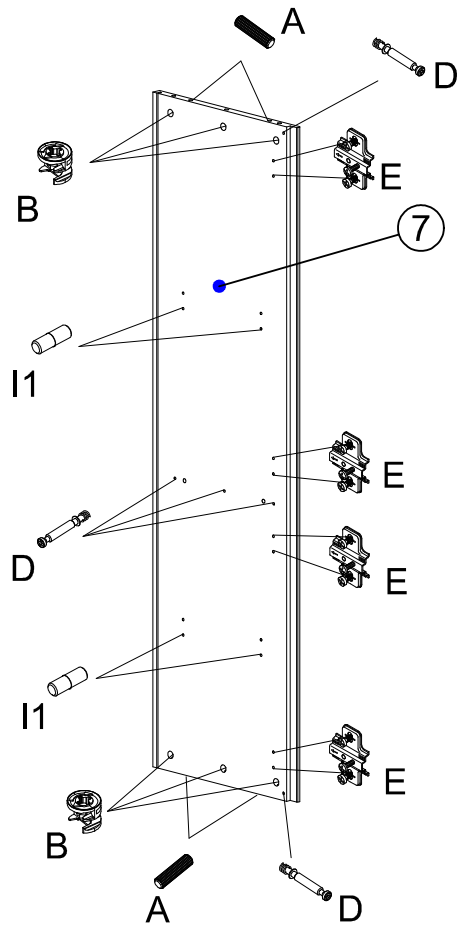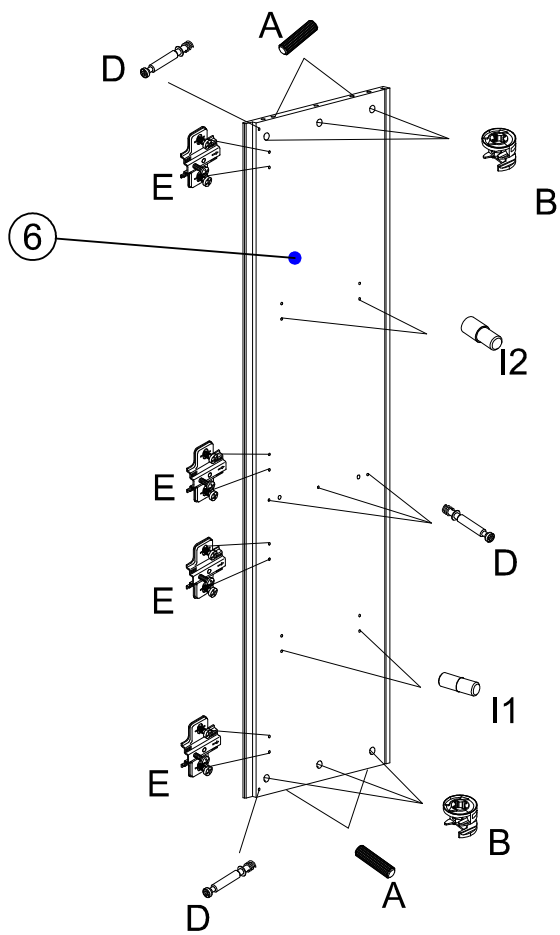



I

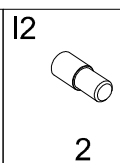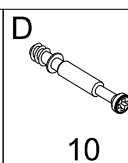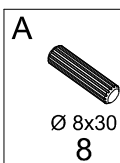

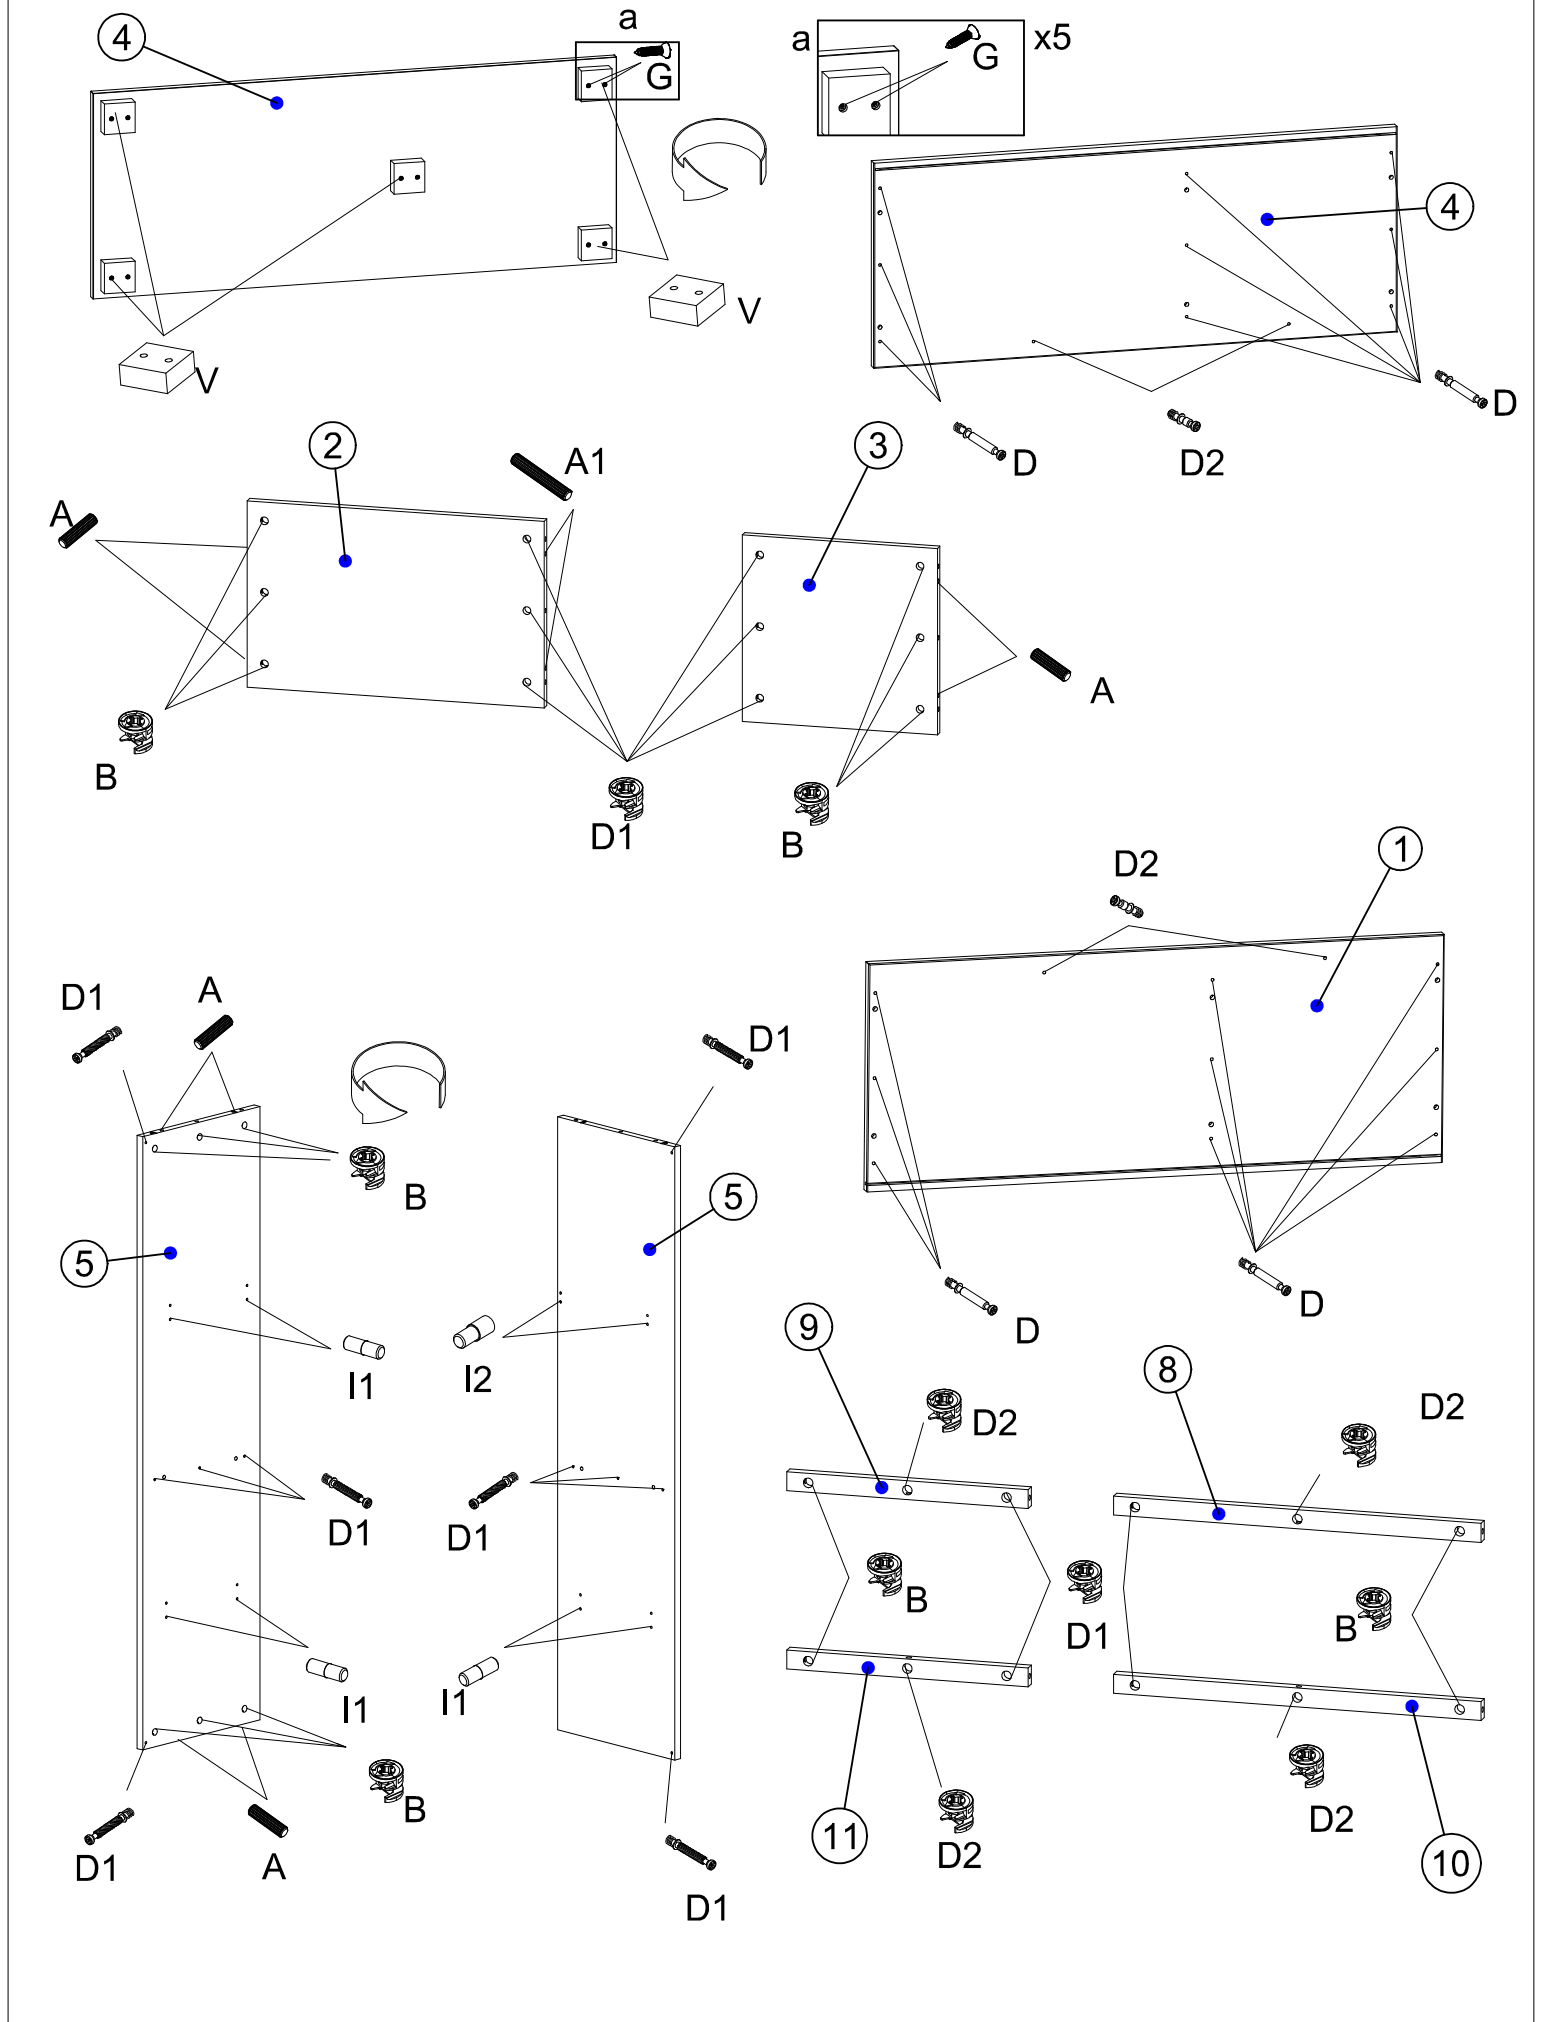


II	A Ø 8x30 A1 Ø 8x50 8 2	B 16	D 18	D1 10/10	D2 4/4	G Ø 4x30 10	I2 I1 2 6	V 5
----	---	---	---	---	--	---	--	--

1°

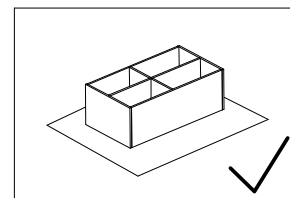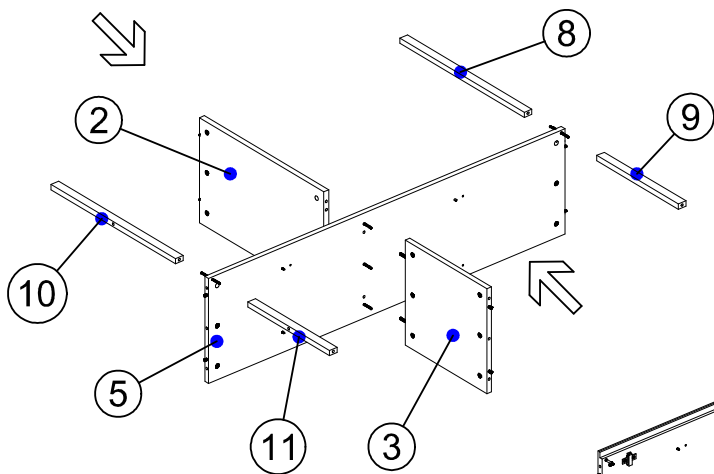


2°

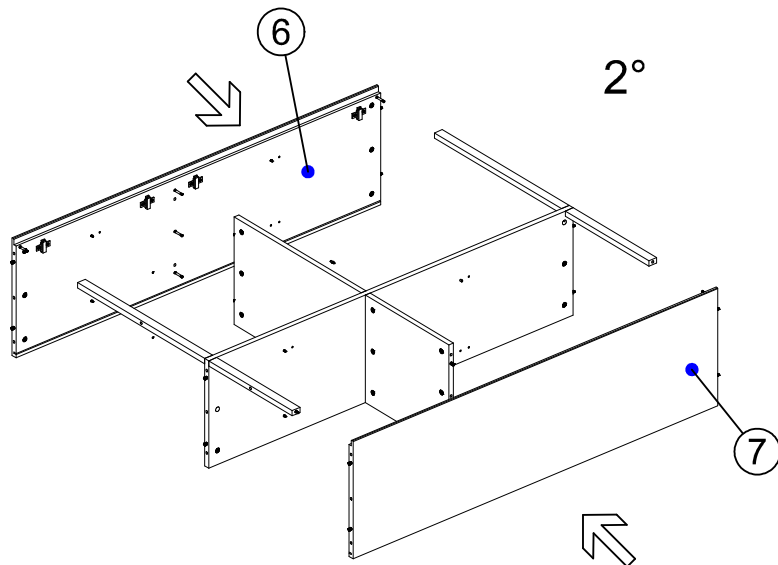


Heben Sie vor dem Zusammenbau des Elements 4 die Element 5 um 2 cm an.



3°



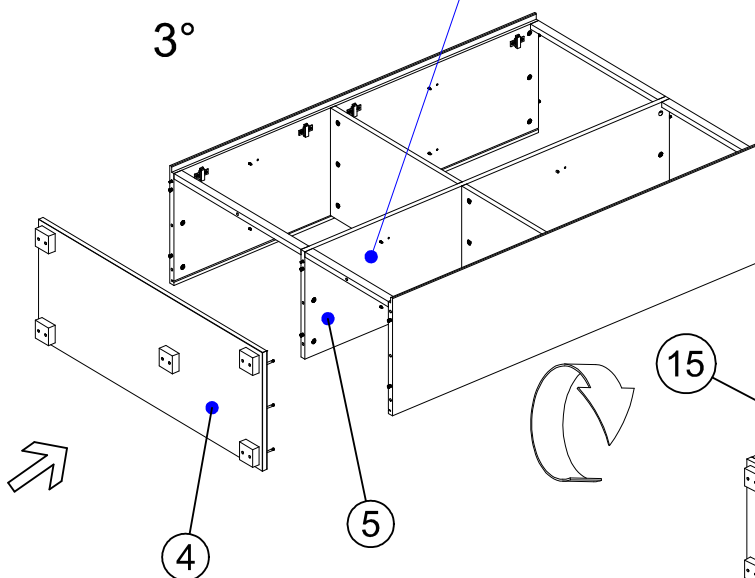


4°

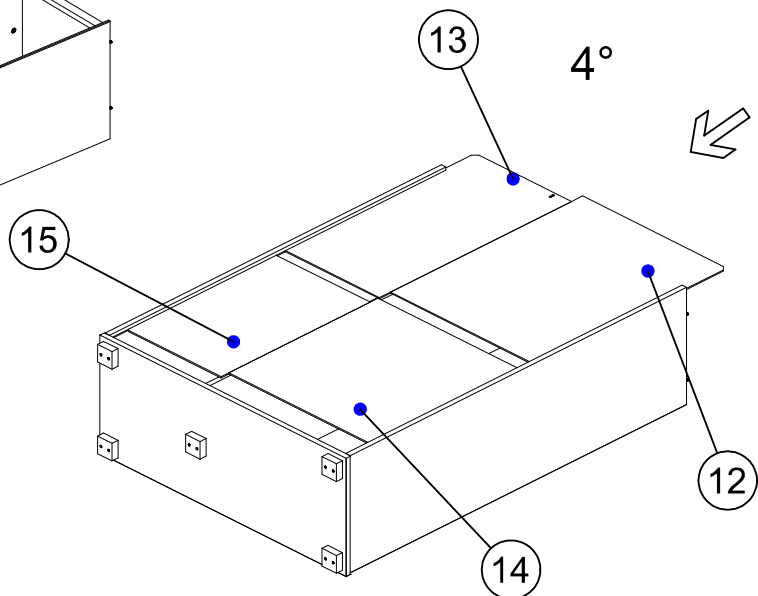




5°

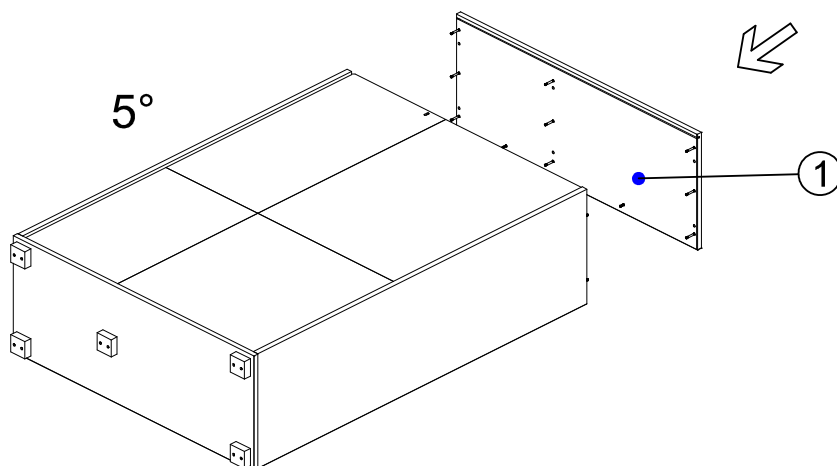

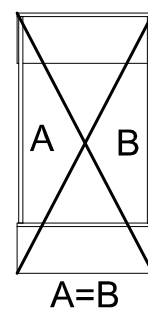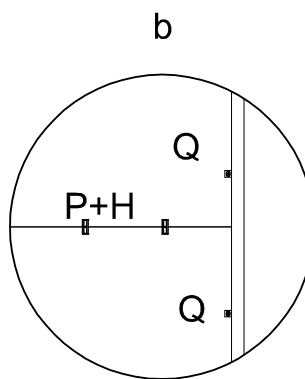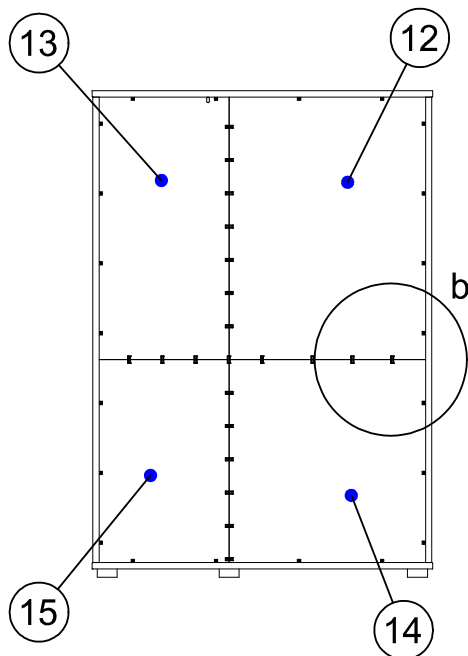


IV

H	P	Q
		
22	22	22

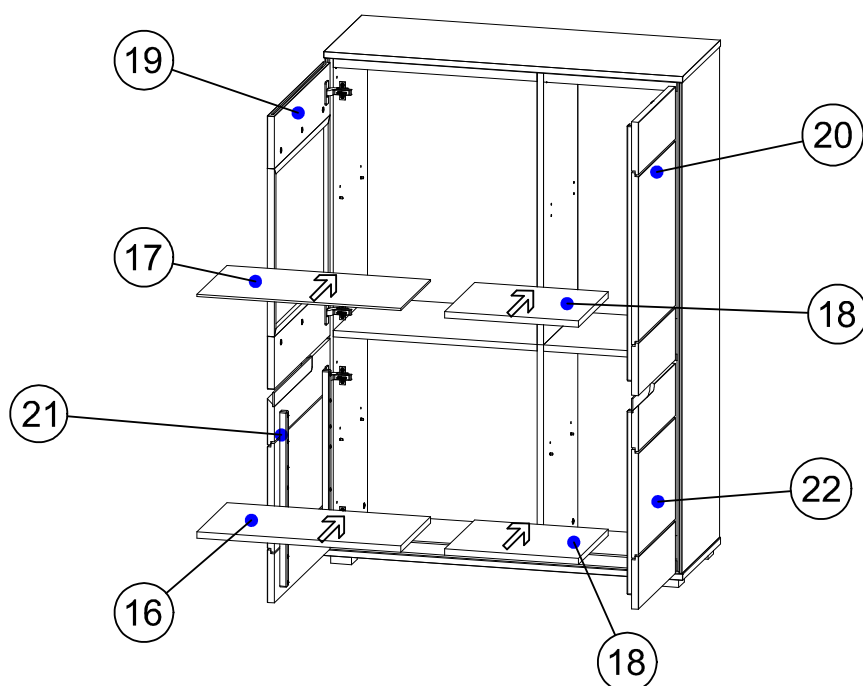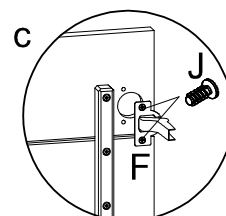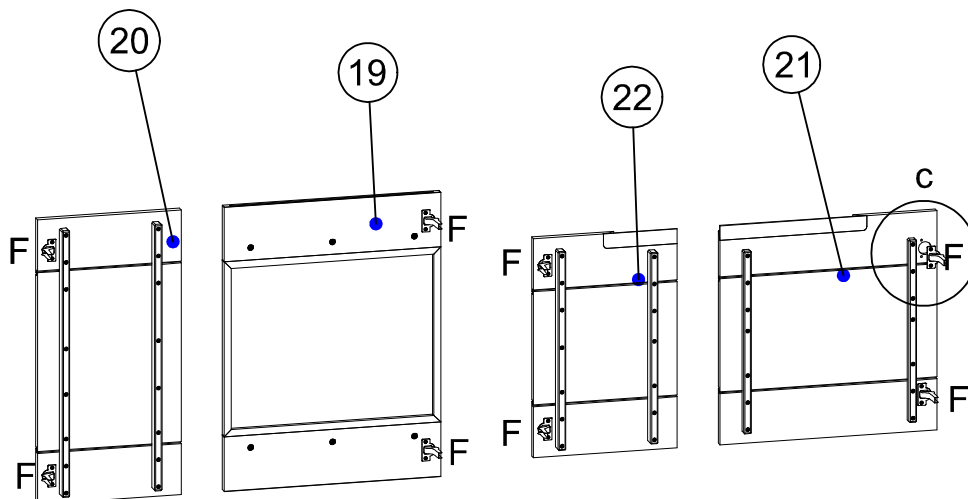

V

F	J
	
8	Ø 5x13 16

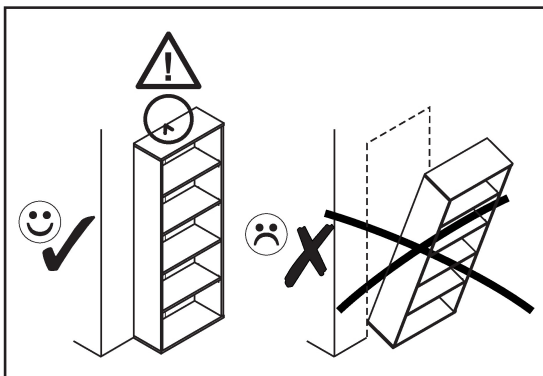

U
d

