
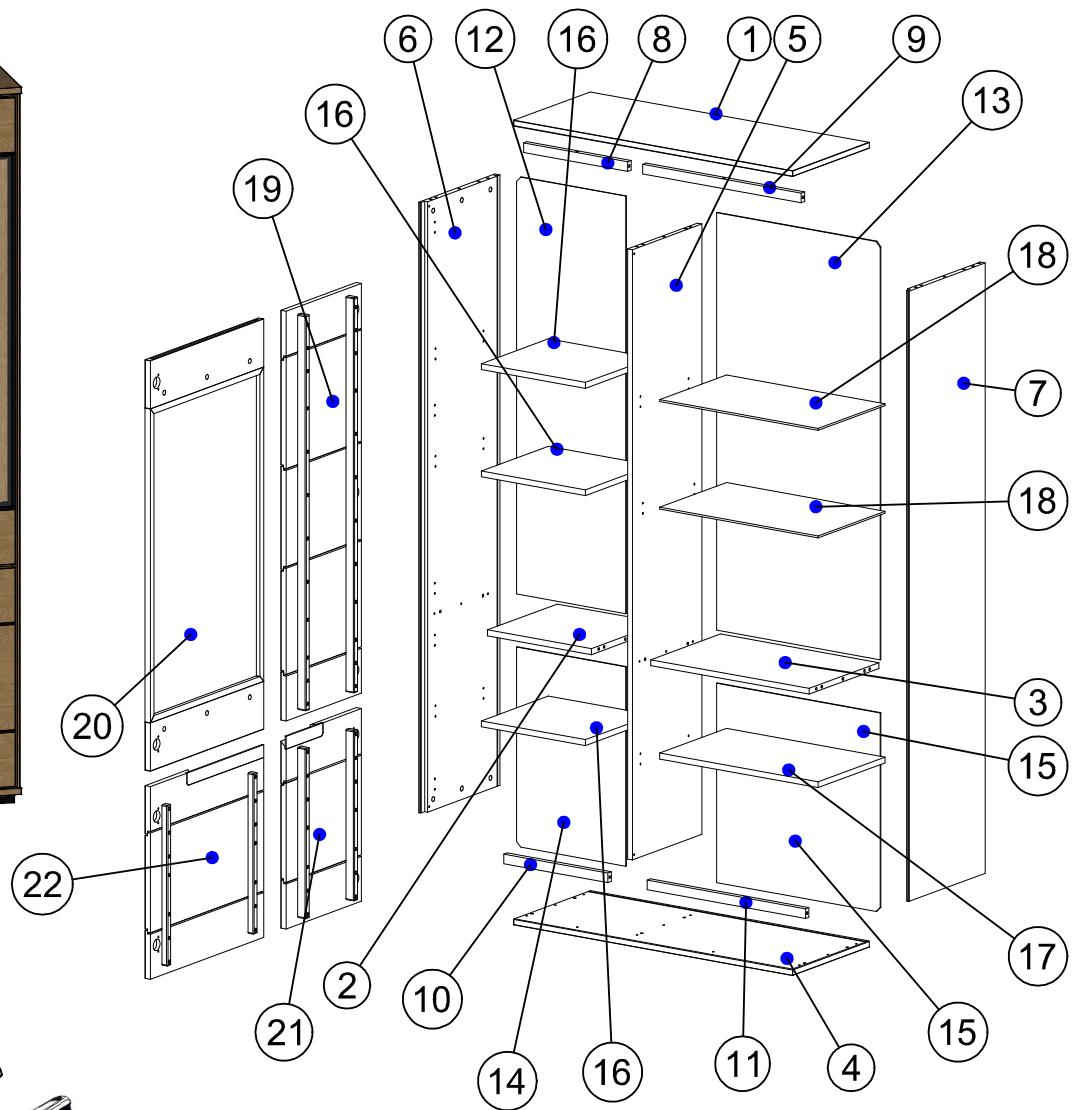


3993


Versionsnummer:

05.2023








Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



x2 80 min

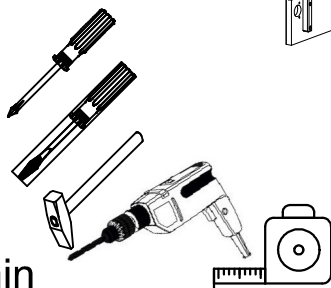

A Ø 8x30 16	A1 Ø 8x50 2	B 28	D 28	D1 10/10	D2 4/4	E 9	F Ø 6.3x13 9	G Ø 4x30 10
H 26	I1 16	I2 8	J Ø 5x13 18	P 26	V 5	U 1	Q 24	

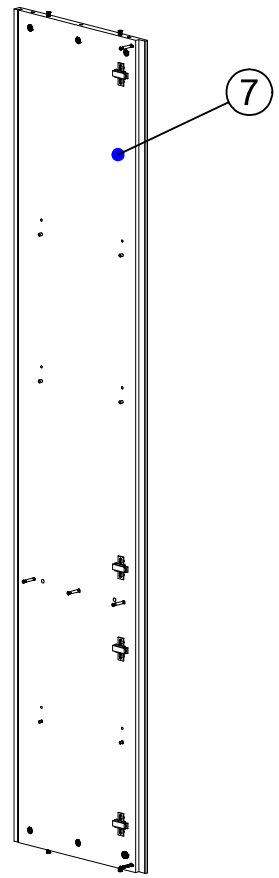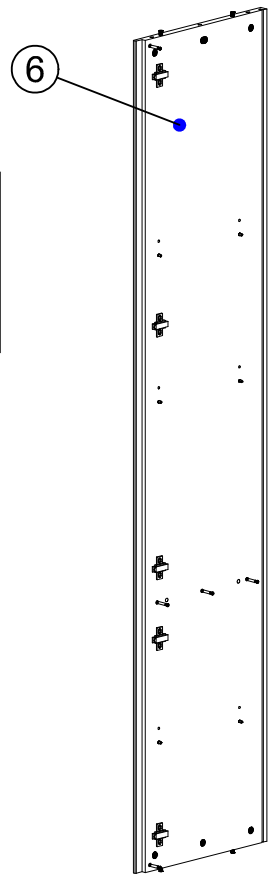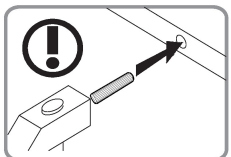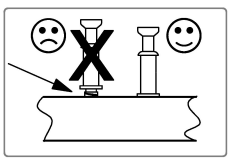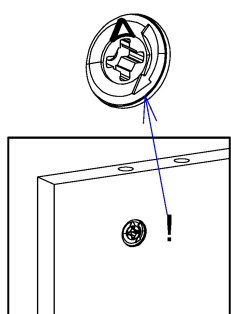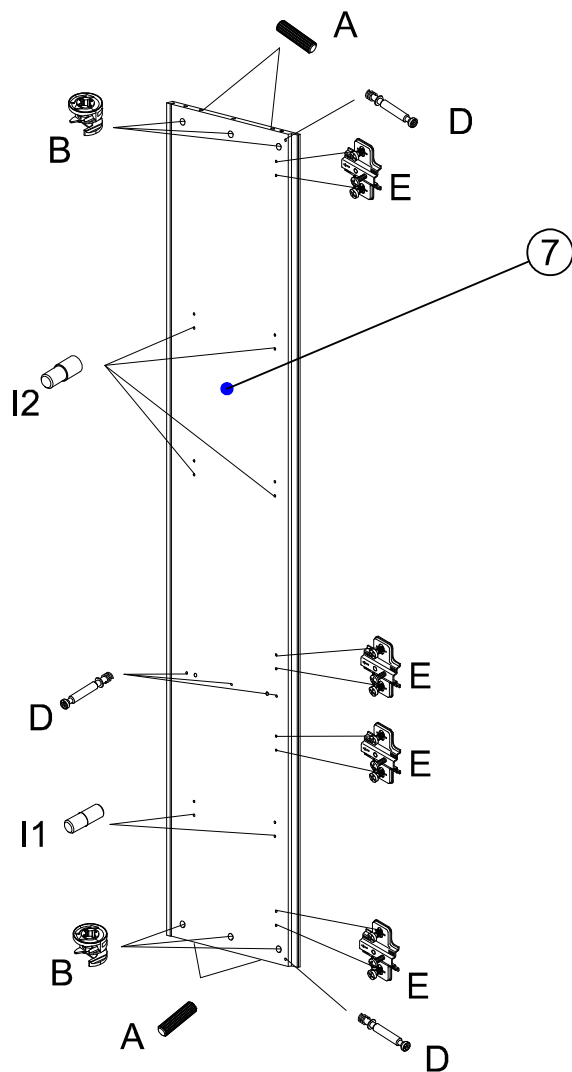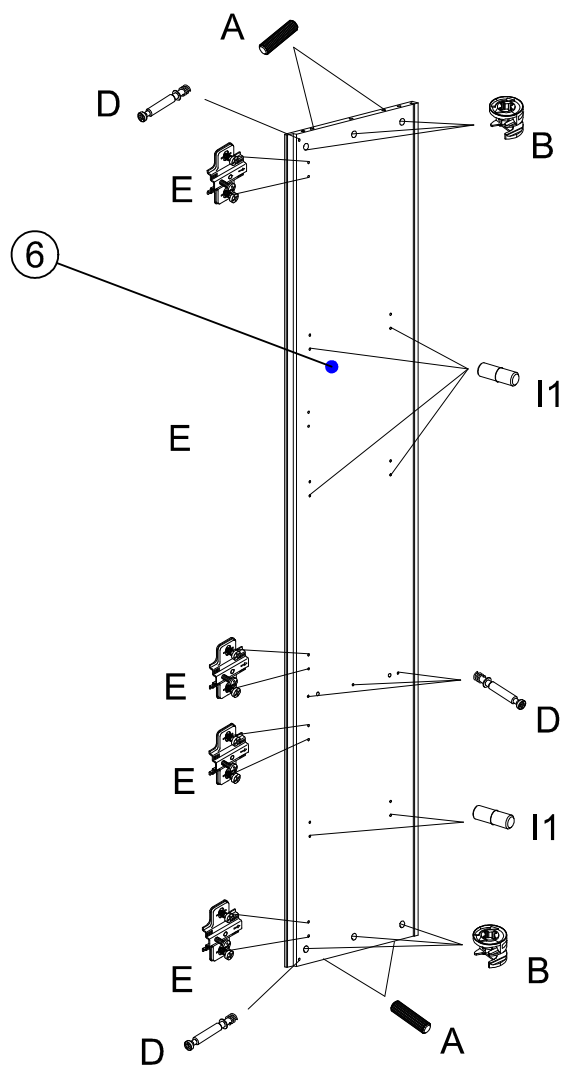


I

A

 Ø 8x30
 8

B

 12

D

 10

E


 Ø 6.3x13
 9

I1

 8


I2

 4

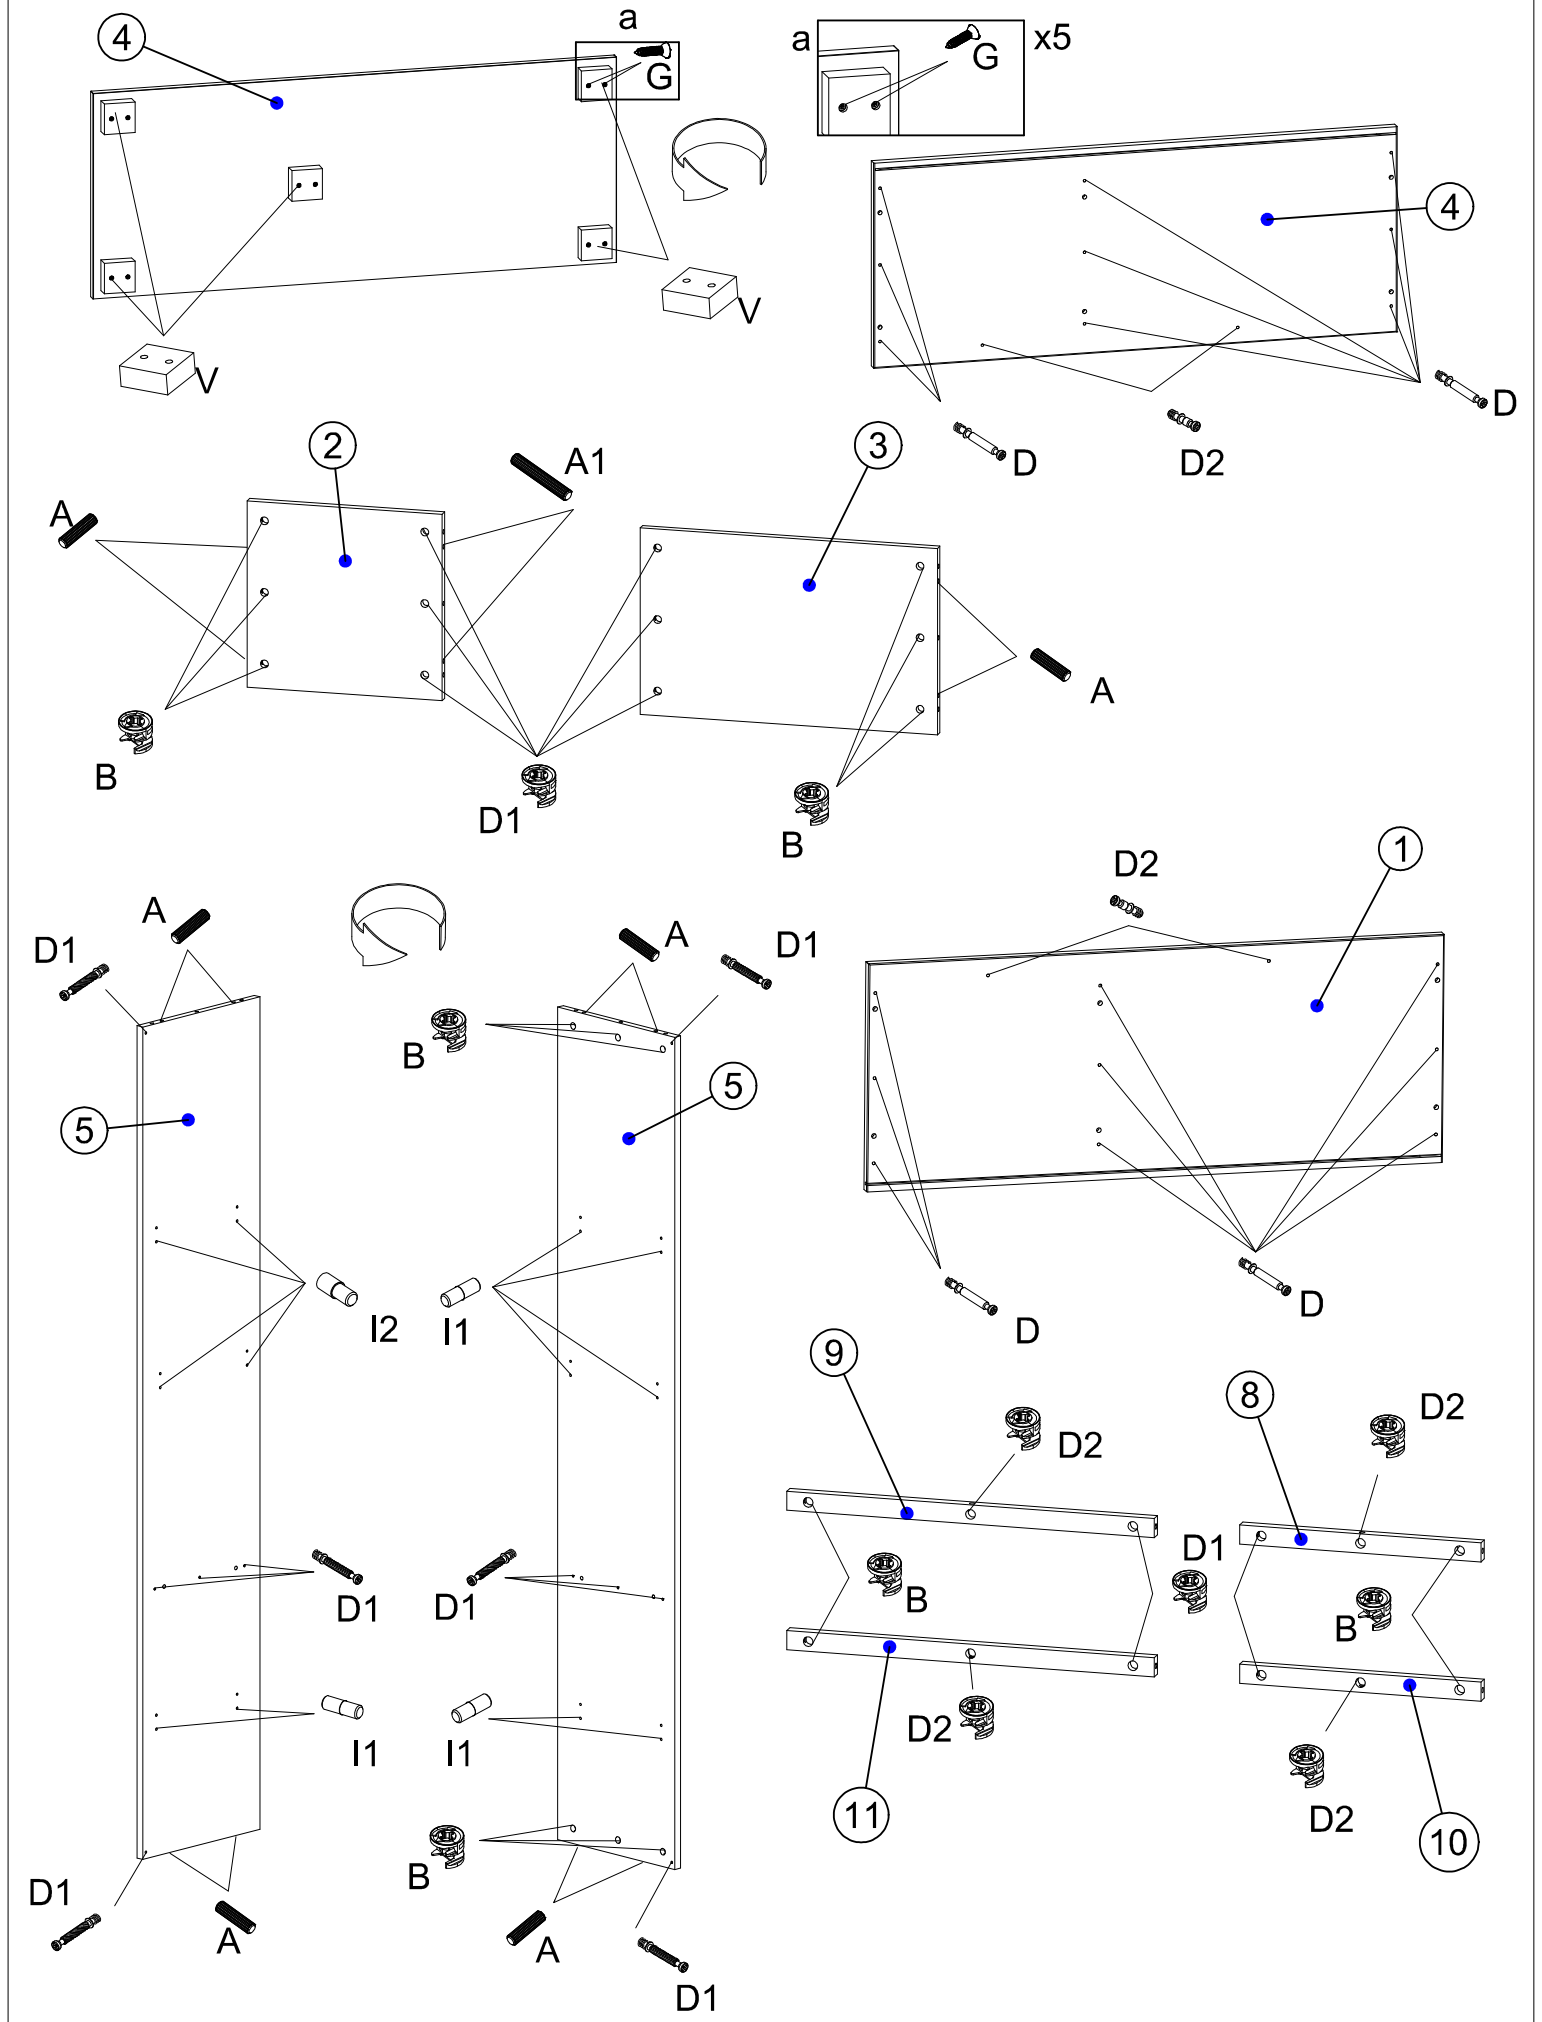


II	A Ø 8x30 A1 Ø 8x50 8 2	B 16	D 18	D1 10/10	D2 4/4	G Ø 4x30 10	I2 I1 4 8	V 5
-----------	---	-----------------	-----------------	---------------------	-------------------	----------------------------	------------------------------	----------------

1°

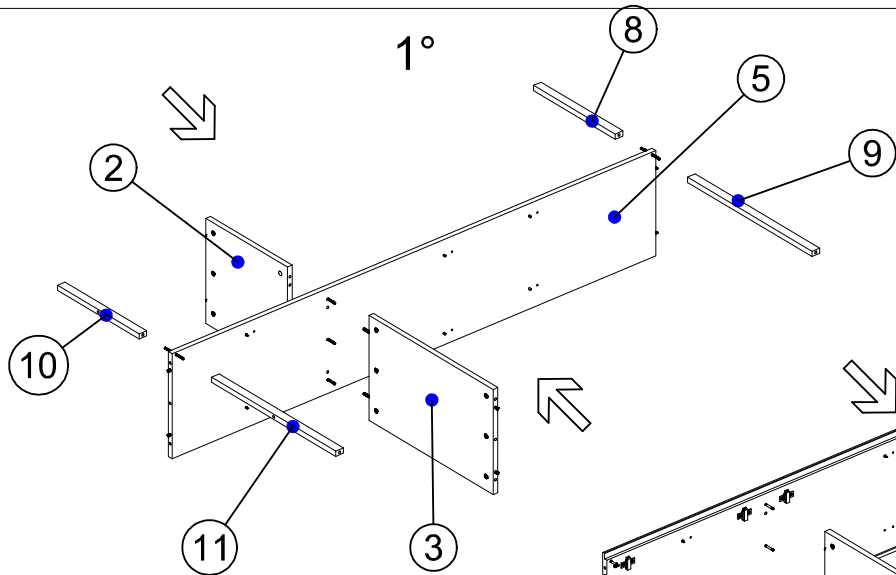


2°

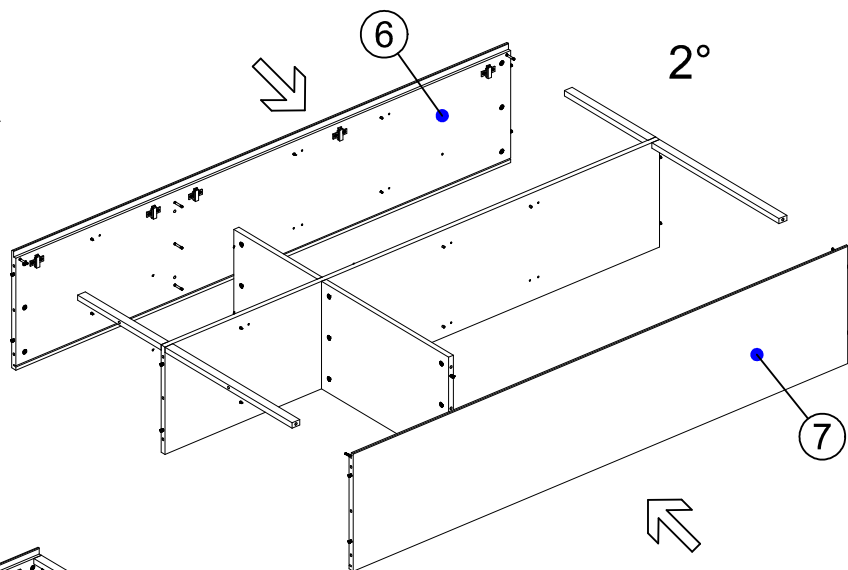


Heben Sie vor dem Zusammenbau des Elements 4 die Element 5 um 2 cm an.


3°

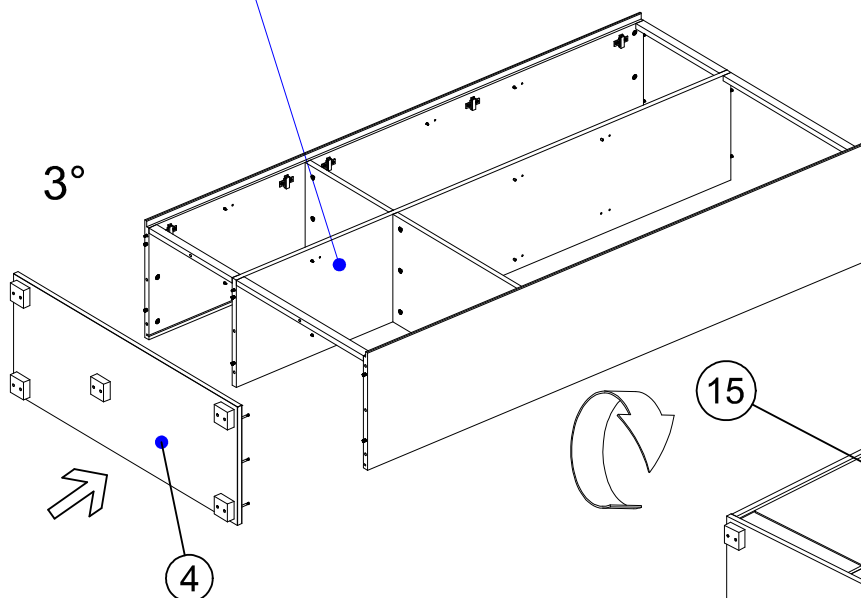


4°



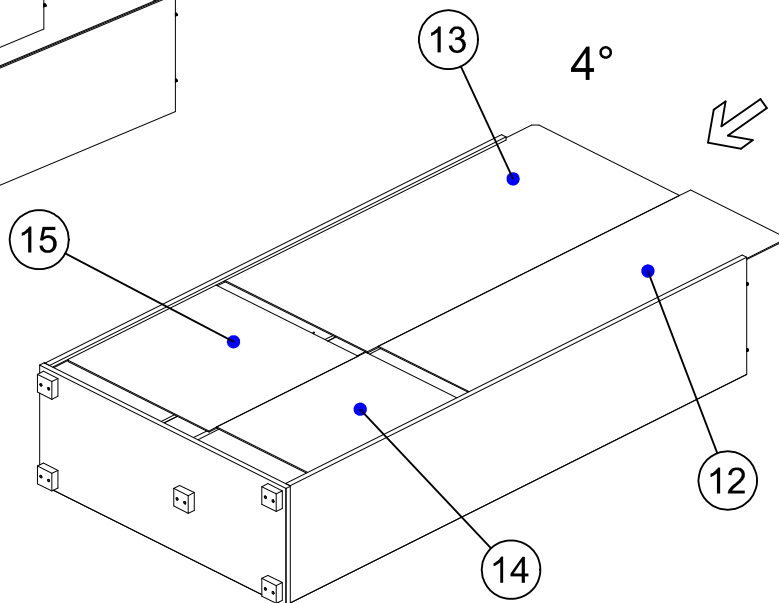


5°

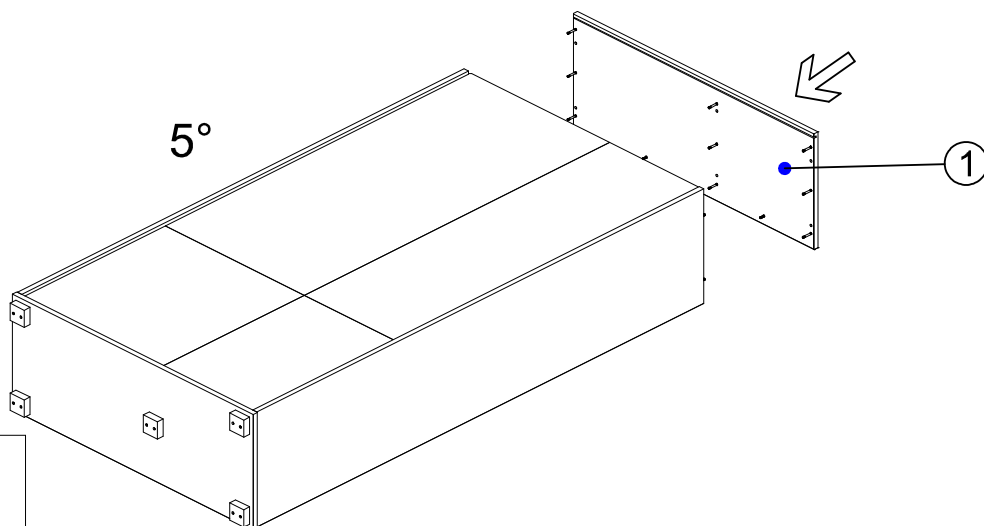



III



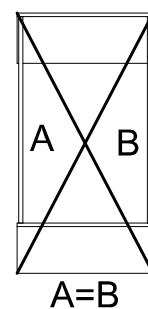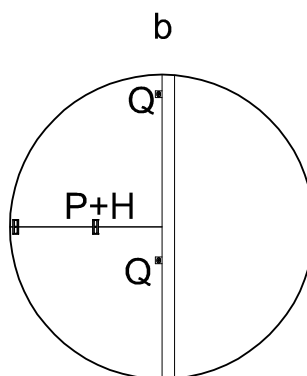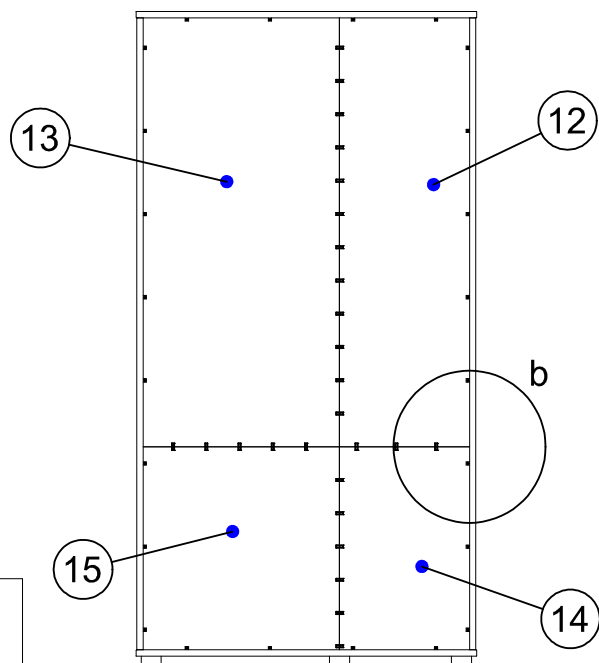

IV

H	P	Q
		
26	26	24

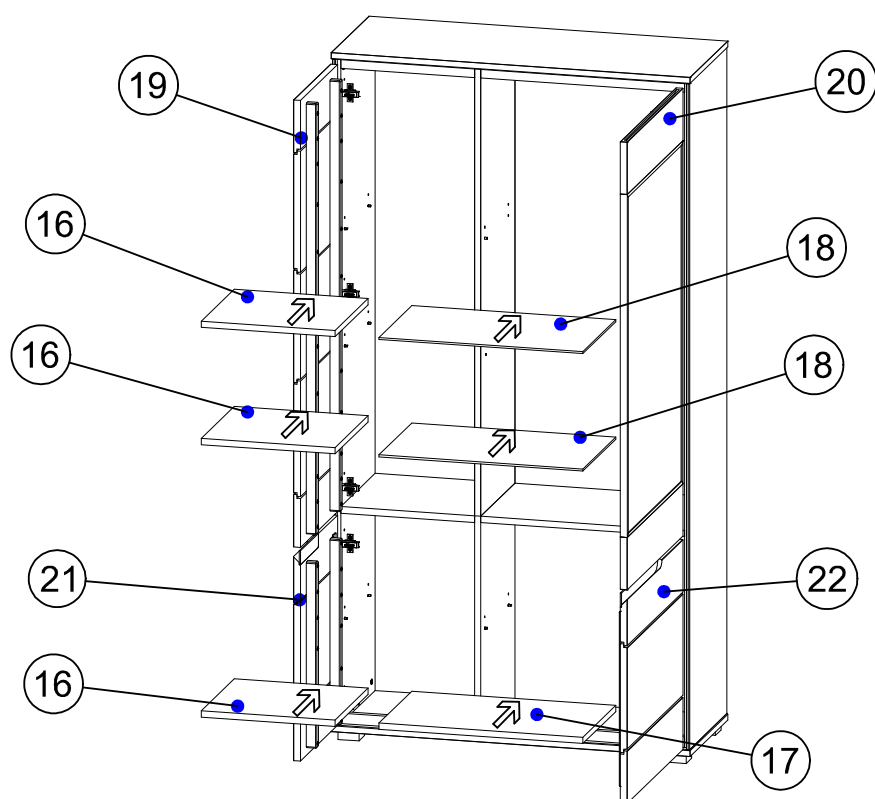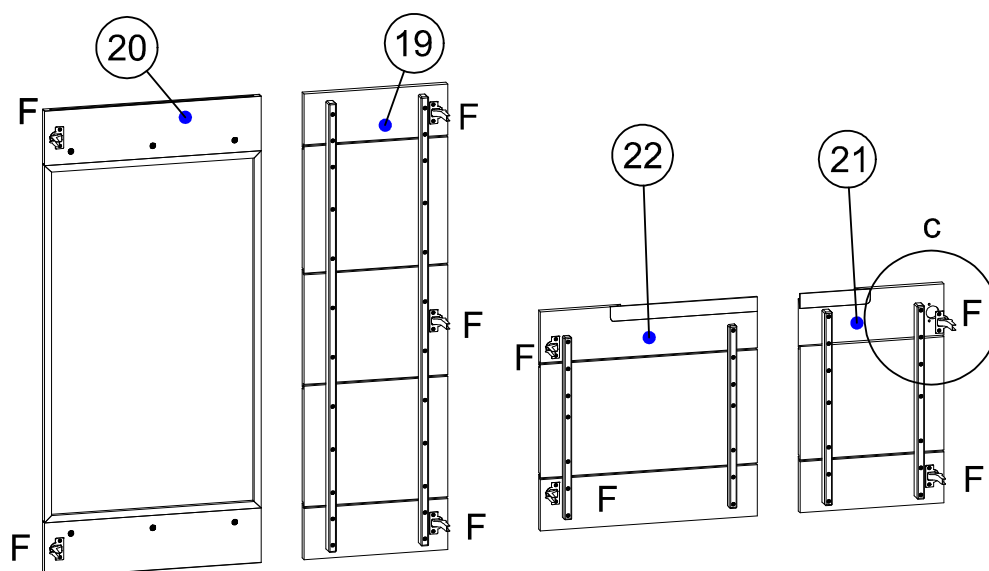

V

F	J
	
9	Ø 5x13 18

