
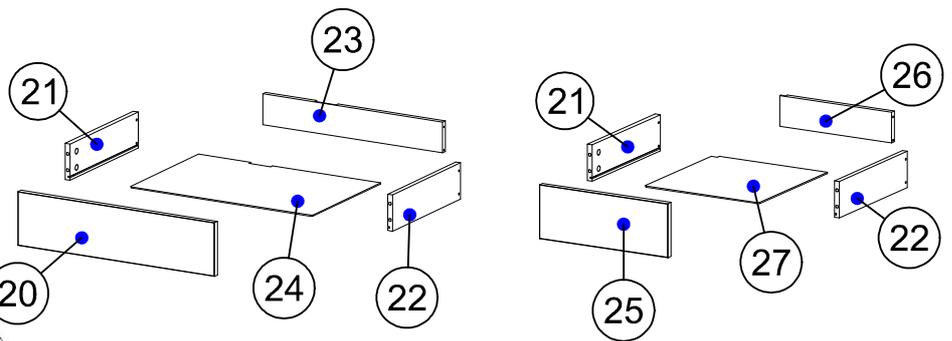
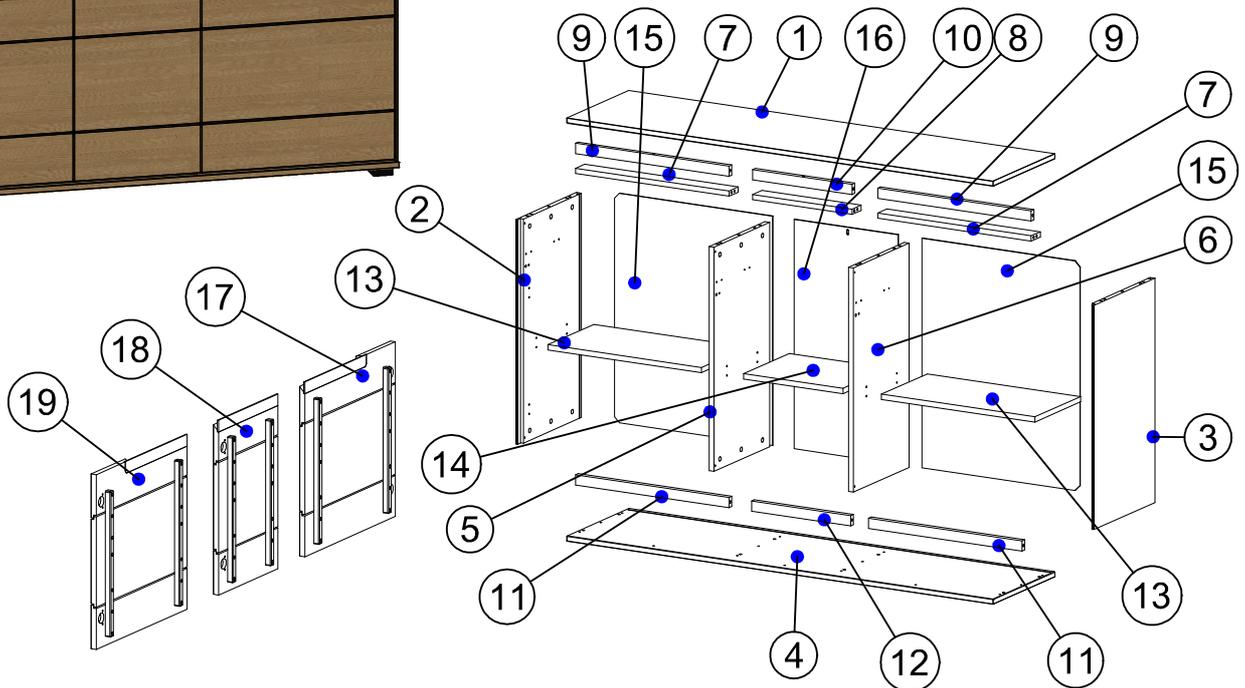


# 3996


Versionsnummer:

06.2023



Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.



x2 120 Min



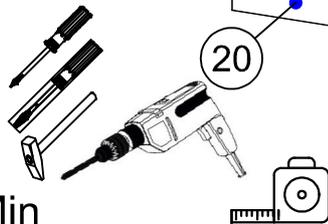


A  Ø 8x30 18	A1  Ø 8x50 2	B  42	D  42	D1  12/12	D2  6/6	E  Ø 6.3x13 6	F  6	G  Ø 4x30 10
H  25	I  12	J  Ø 5x13 36	L  Ø 7x50 12	O  3SET/KPL	T  Ø 3x16 6	P  18	V  5	U  1

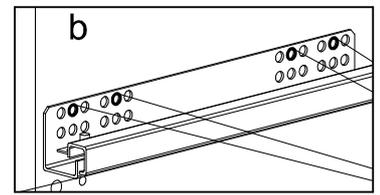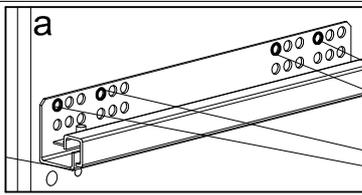



Links

Recht

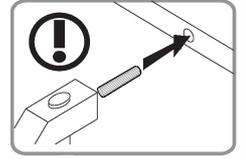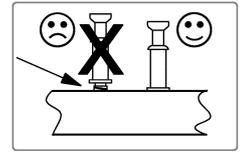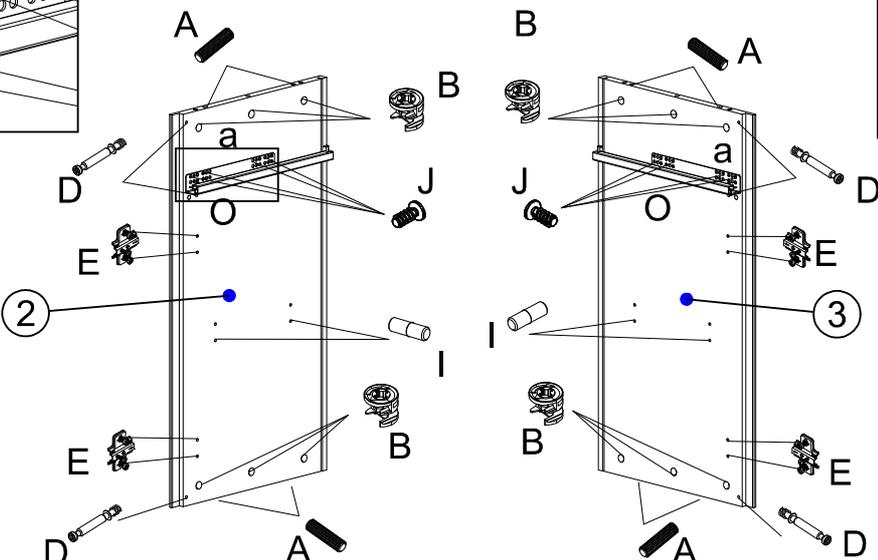

Links



Recht

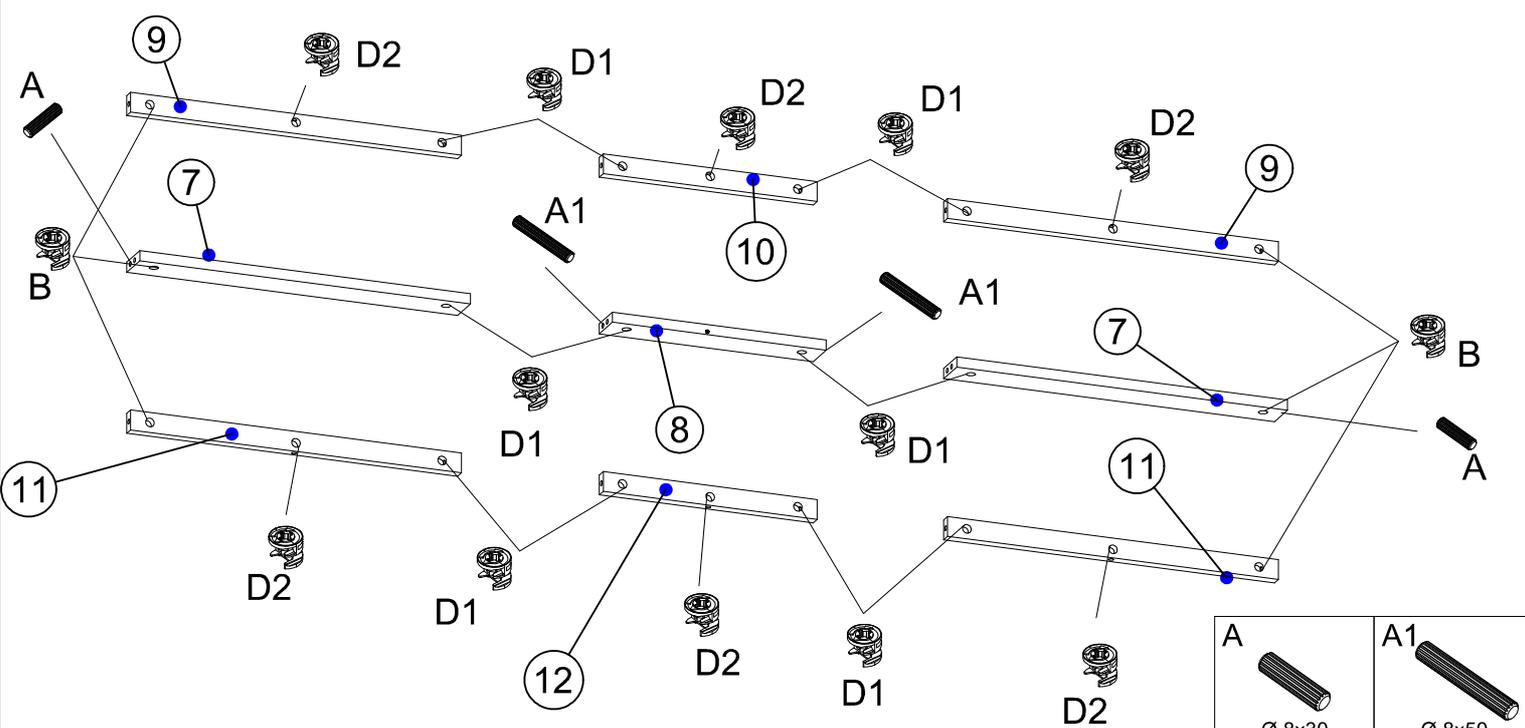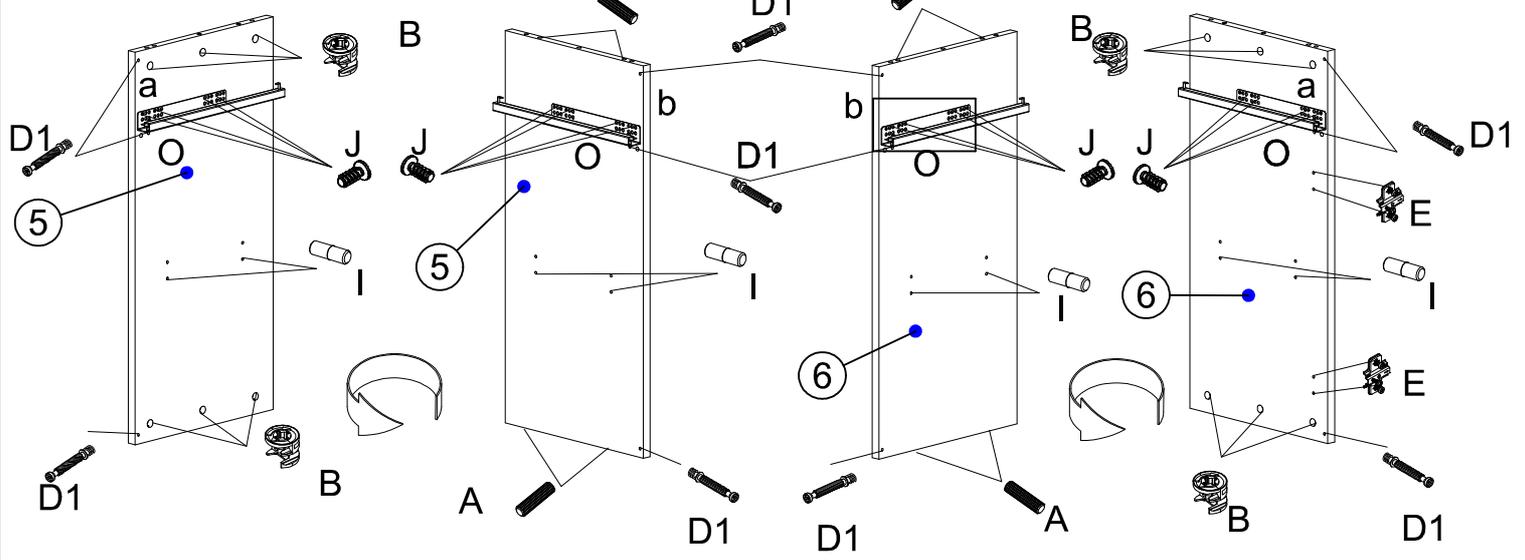


A	A1
Ø 8x30 18	Ø 8x50 2

I	B	D	D1	D2	E	I	J	O
	30	6	12/12	6/0	6	12	Ø 5x13 24	3SET/KPL


4

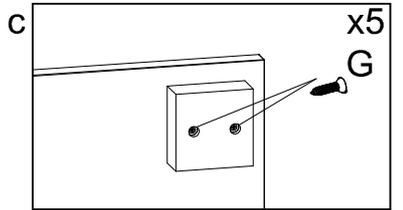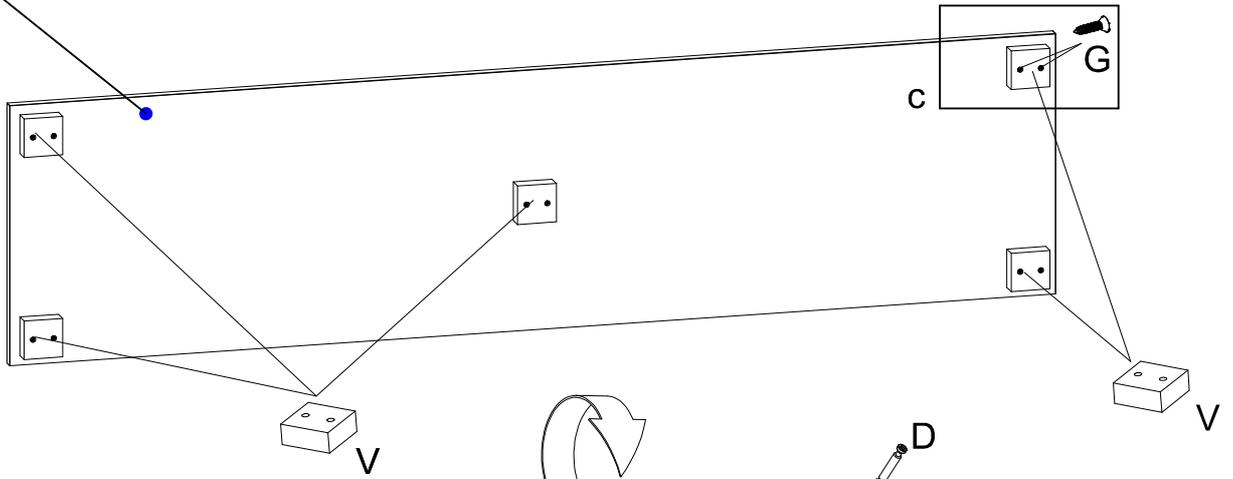

4




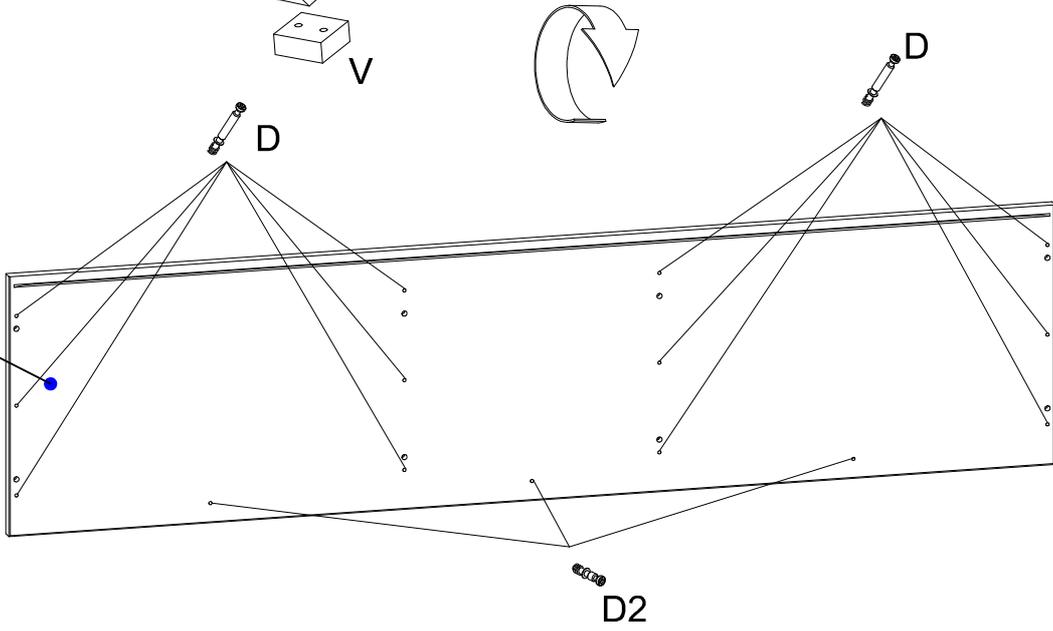


1


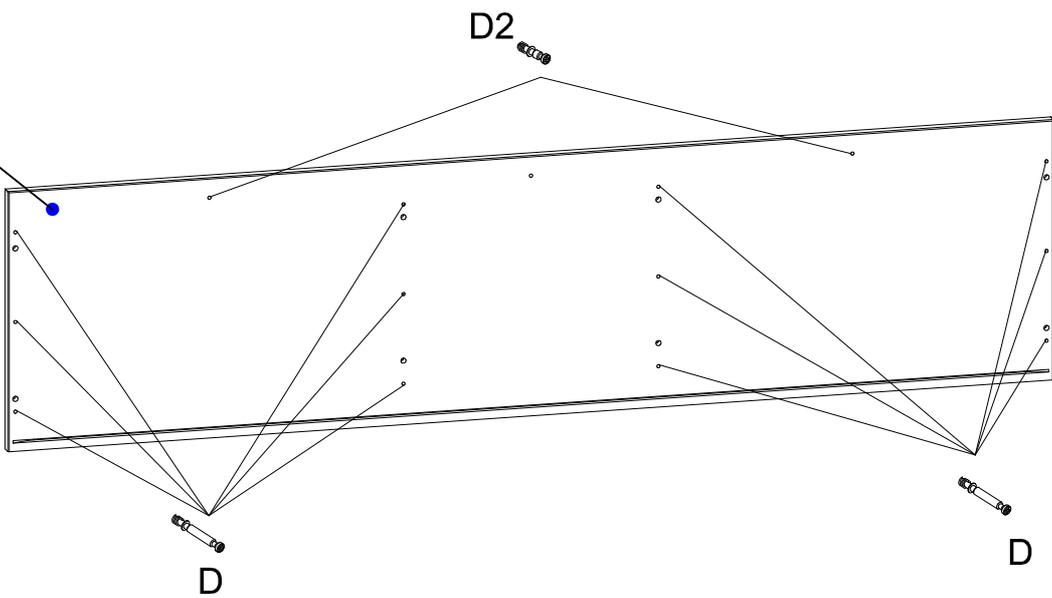





II


<p><b>D</b></p>  <p>24</p>	<p><b>D2</b></p>  <p>0/6</p>	<p><b>G</b></p>  <p>Ø 4x30 10</p>	<p><b>V</b></p>  <p>5</p>
--	---	--	--

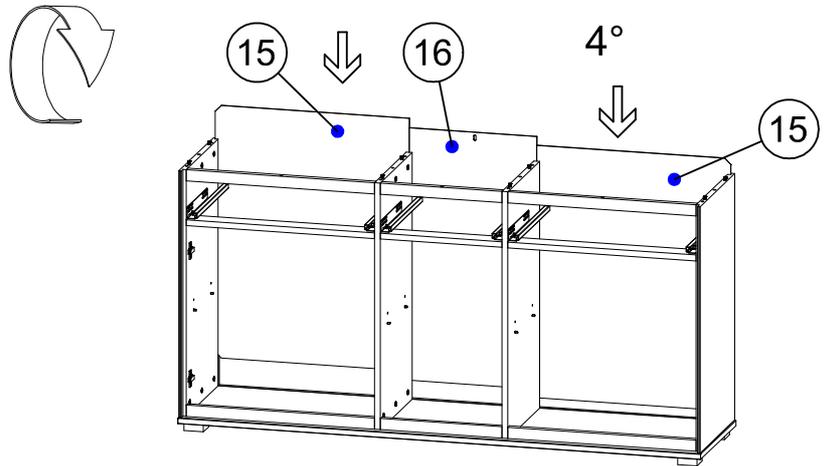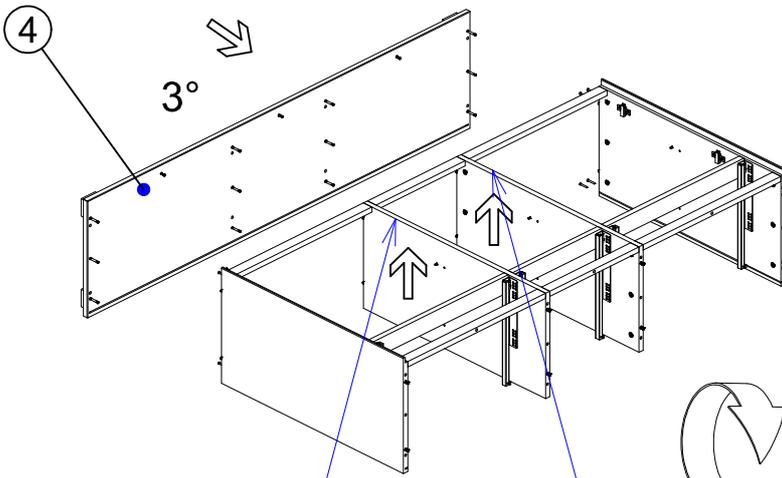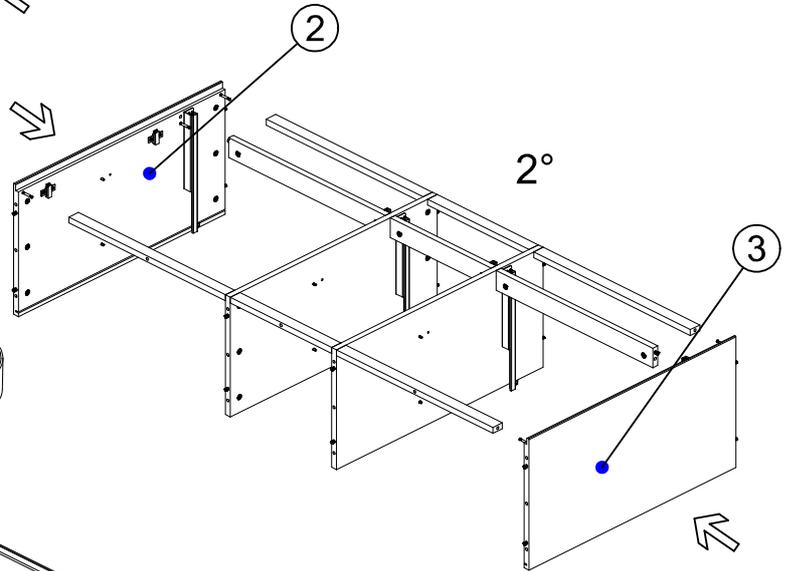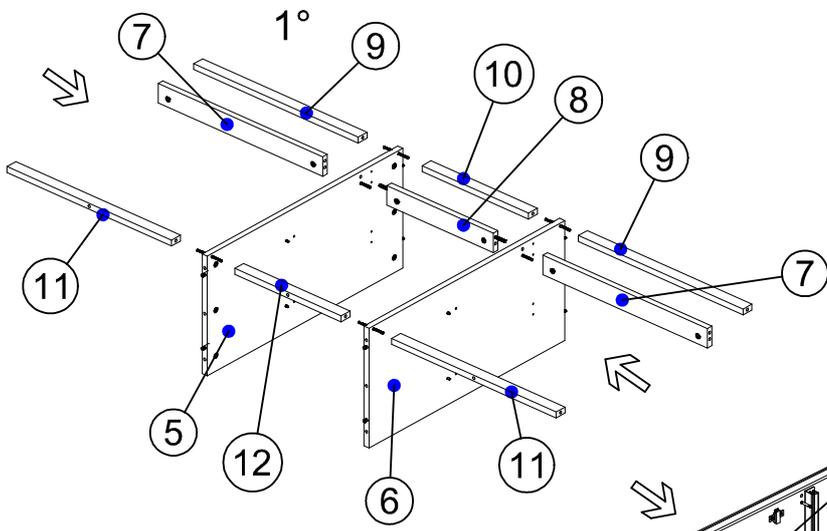

Heben Sie vor dem Zusammenbau des Elements 4 die Elemente 5 und 6 um 2 cm an.

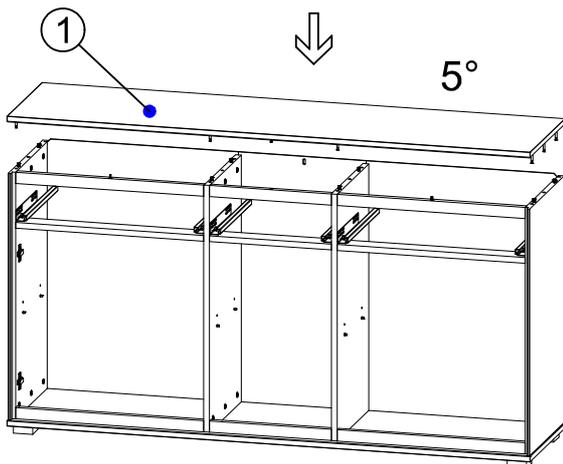

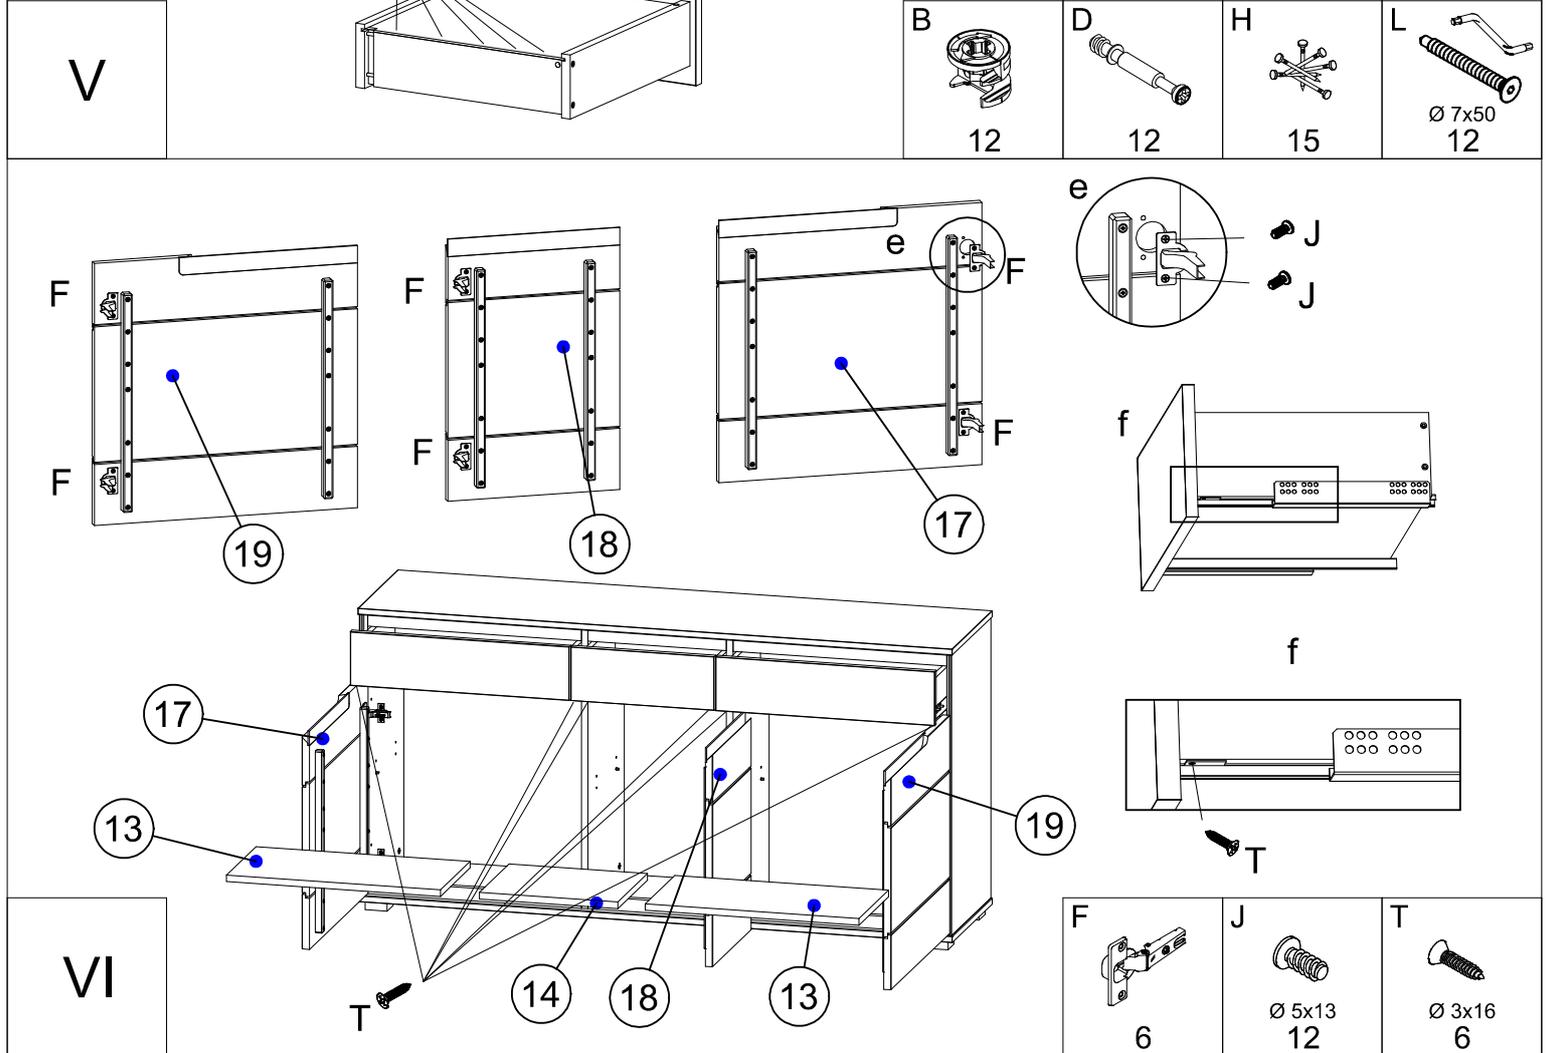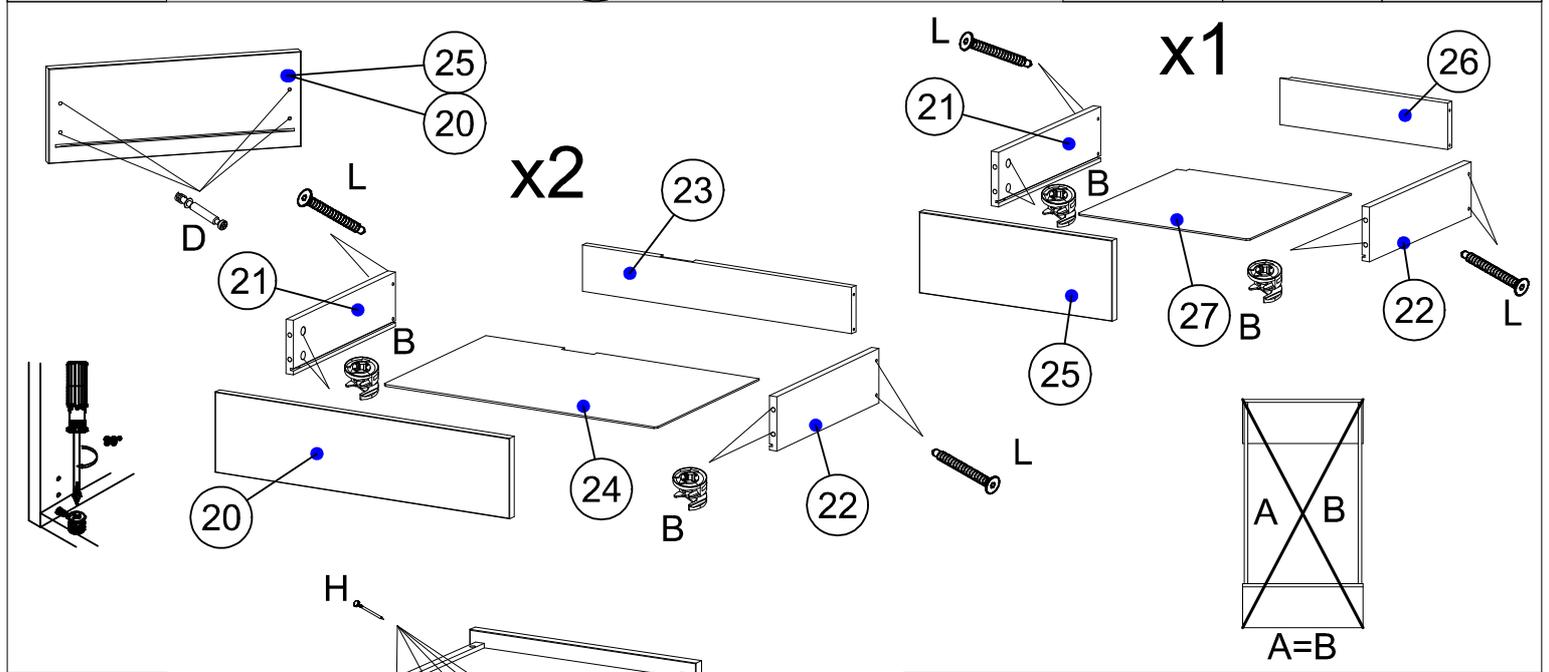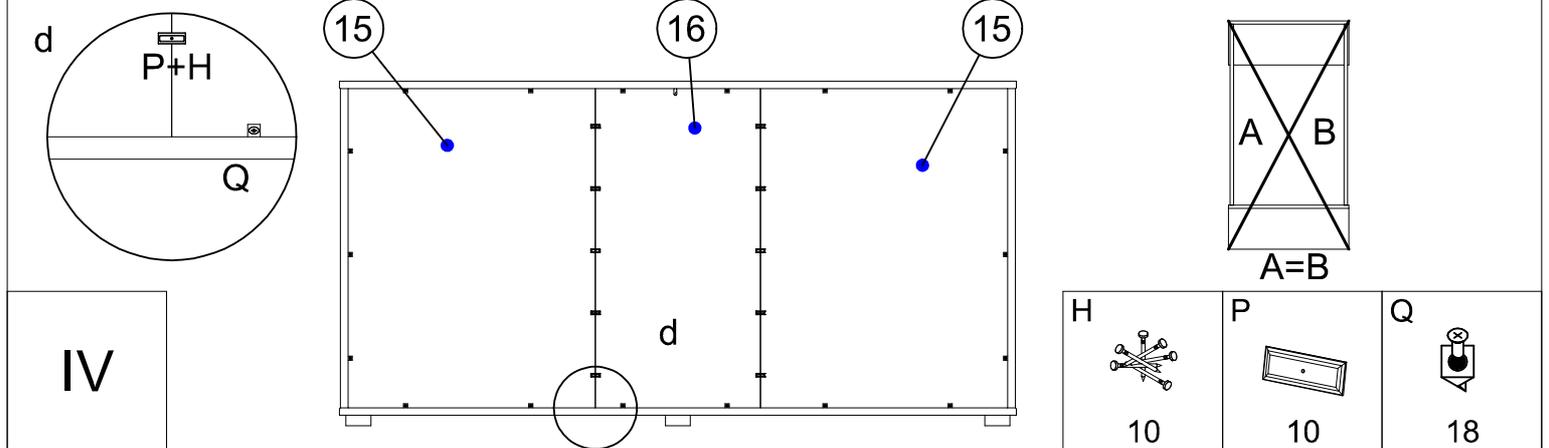

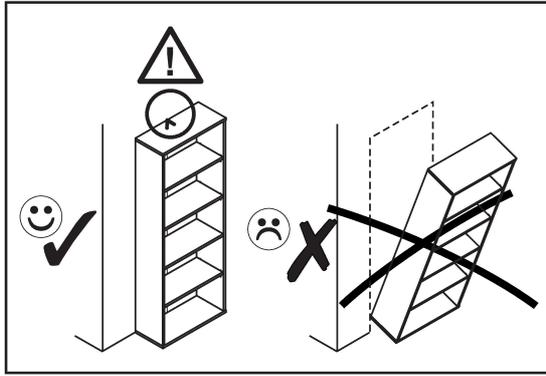

U g

