



(D) Videounterstützte
Montageanleitung

(TR) Video destekli kurulum
talimatları

(RU) инструкция по
монтажу с помощью
видеосигнала

(RO) Instrucțiuni de instalare
acceptate video

(GB) Video-assisted
assembly instructions

(IT) Istruzioni di montaggio
video-assistite

(CZ) Instalační pokyny
podporované videem



(PL) Instrukcje montażu
wspomagane sygnałem
wizyjnym

(FR) Instructions de montage
assistées par vidéo

(NL) Video-ondersteunde
montage-instructies

(HU) Video-támogatott
telepítési utasítások







(SK) Inštalčné pokyny
podporované videom

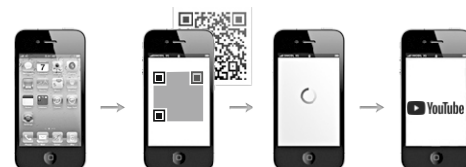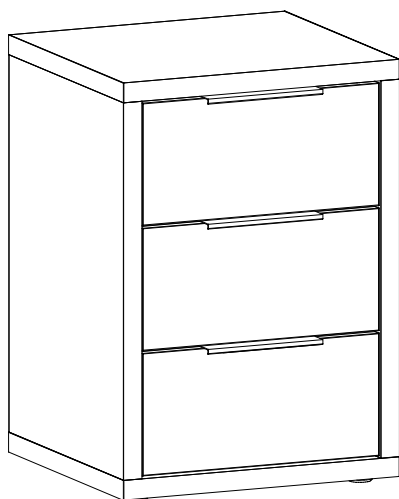

Art.-Nr.: **0801-KO_03** **Kommode**

REPC-Nr.:


**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

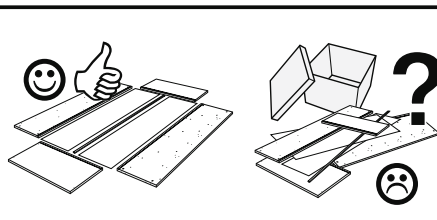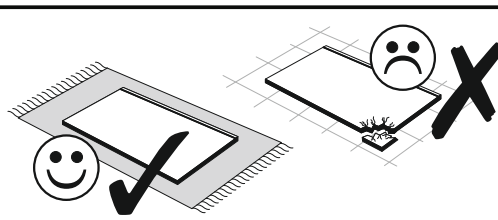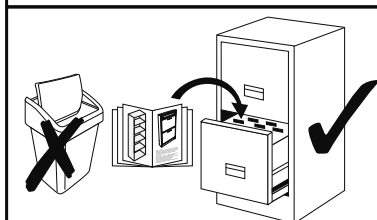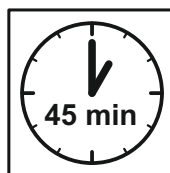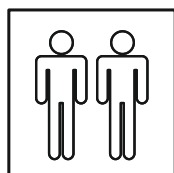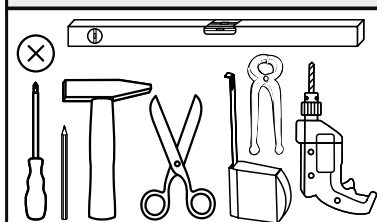


SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00005 Colli 1/2


B01-123		B02-173	
8x	4,0x15	4x	

BT1-00368 Colli 1/2

B01-20		B01-200		B01-30		B01-90	
4x	7,0x70	18x	6,3x13	12x	3x16	4x	3,5x20
B02-10		B02-20		B02-103		B05-20	
16x	ø15x12mm	16x		24x	8x30	12x	


BT1-00369 Colli 1/2

B05-185		B06-424	
4x		3x	200mm




SCAN ME


Colli 1/2




414 x 199



405 x 124




335 x 124

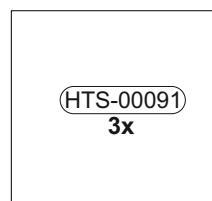


386 x 358


Colli 2/2

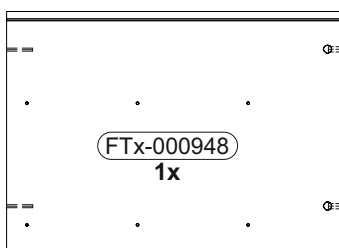


613 x 444

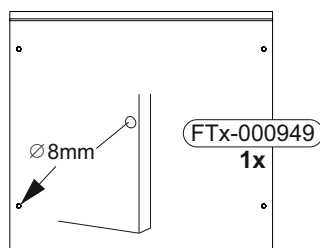


483 x 444

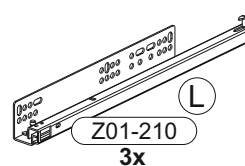


613 x 444

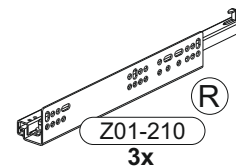


613 x 444

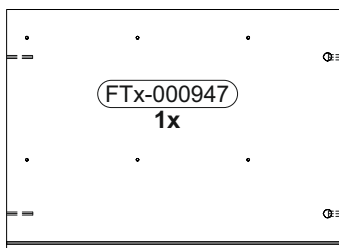










613 x 444











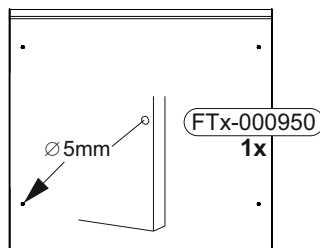


483 x 444

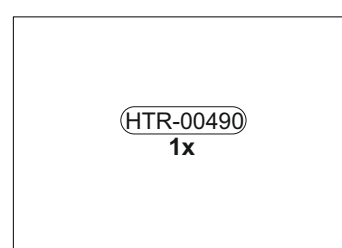


625 x 430

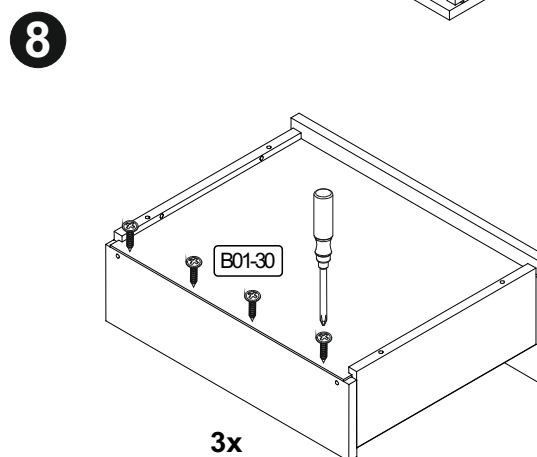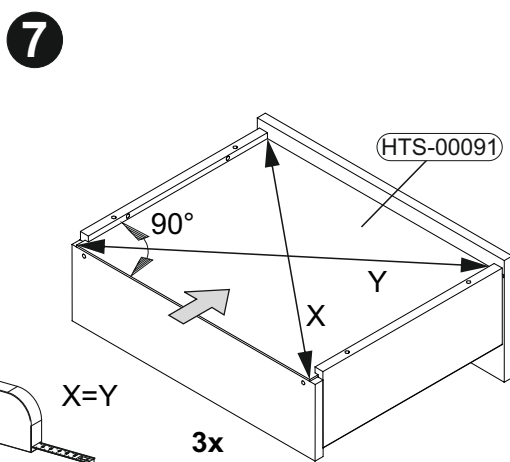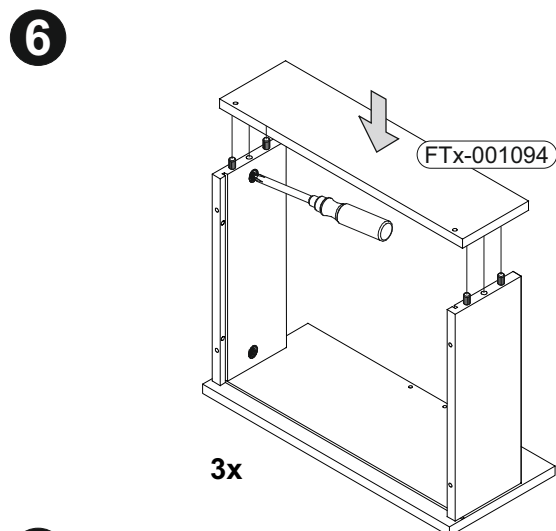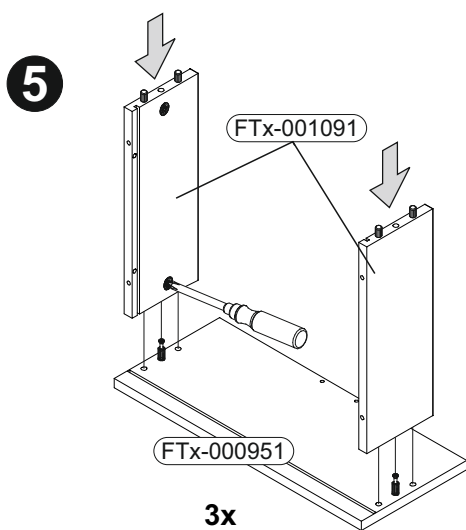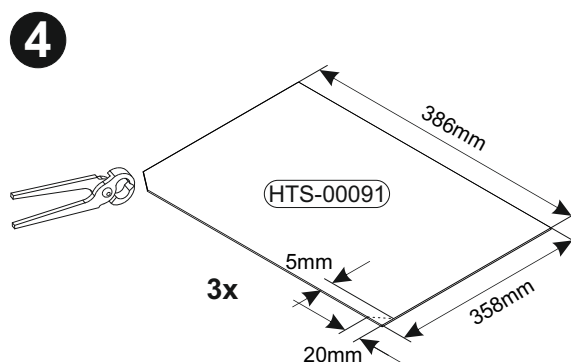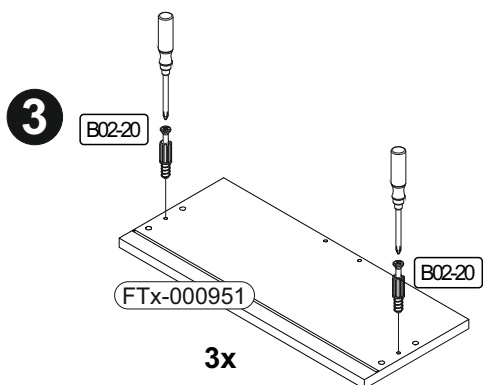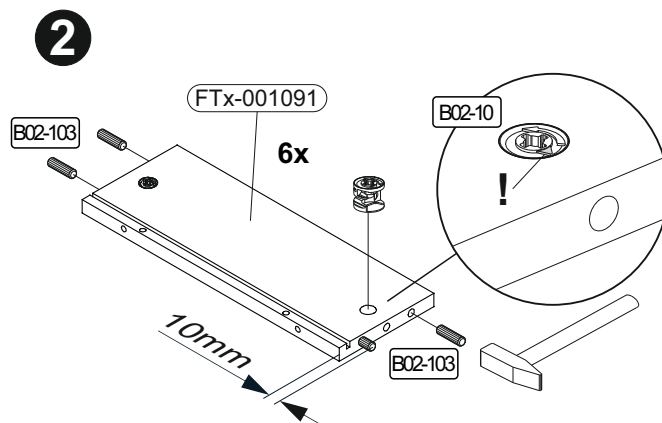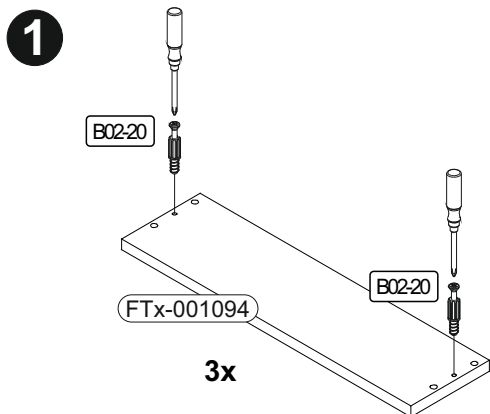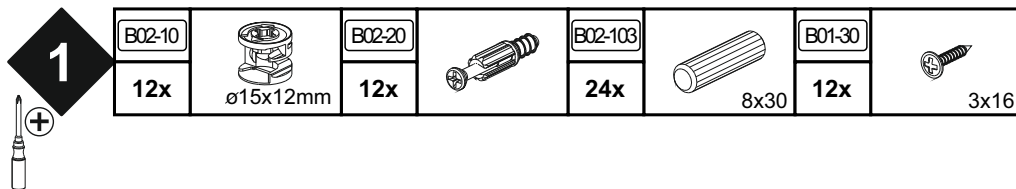


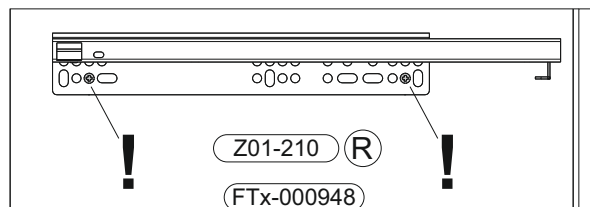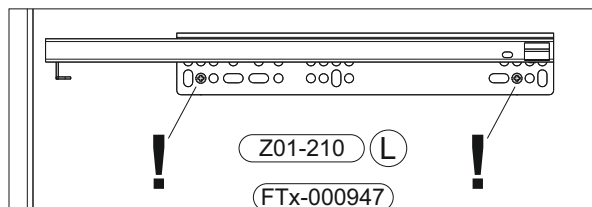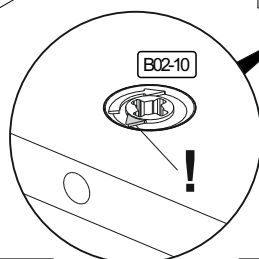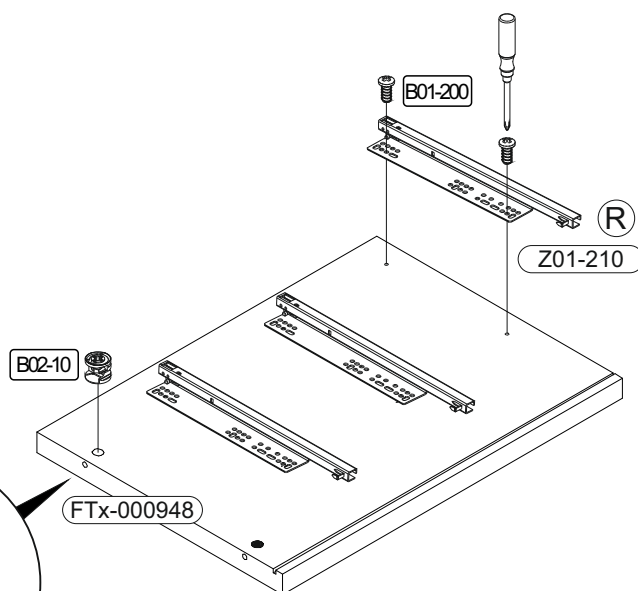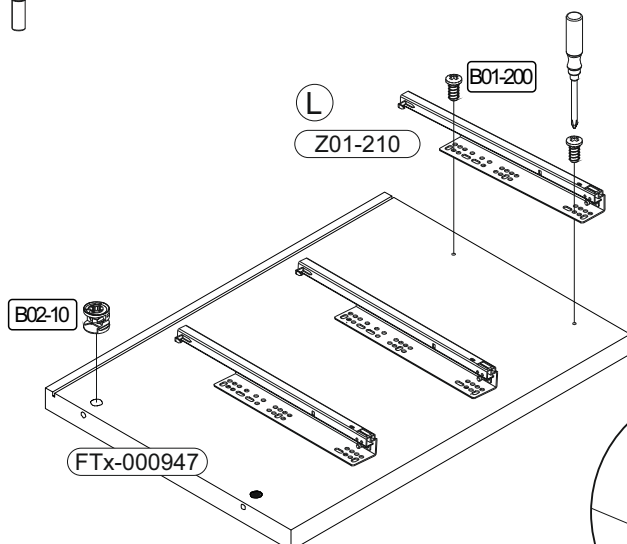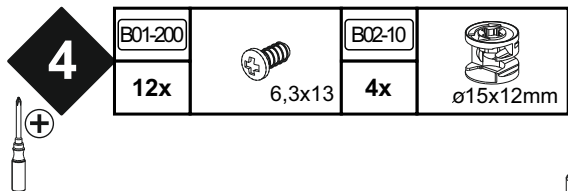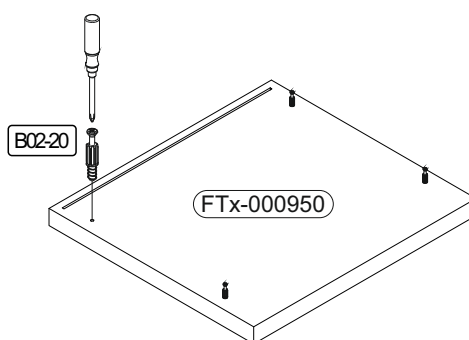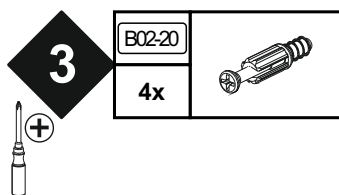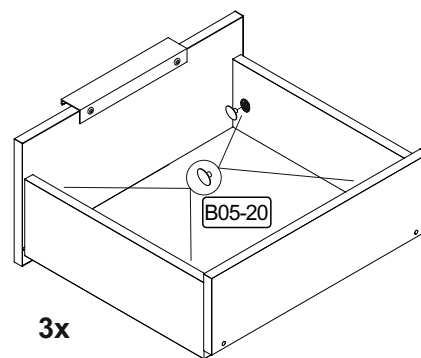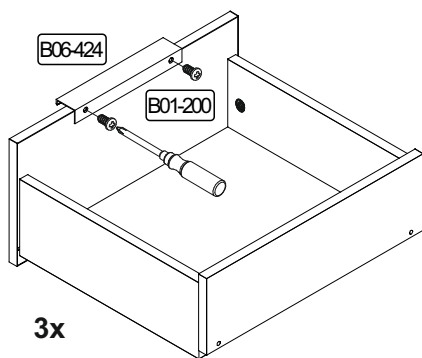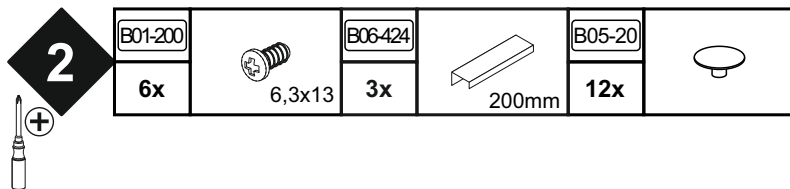


5

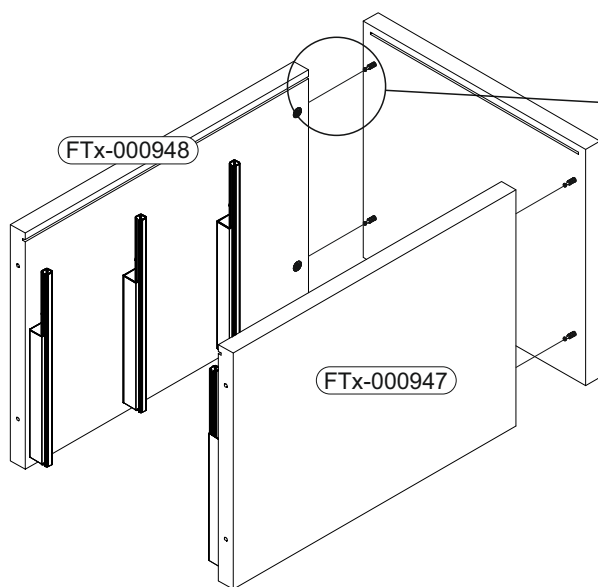

1

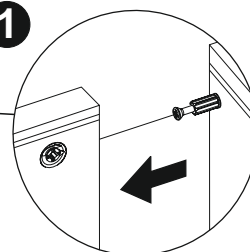

2

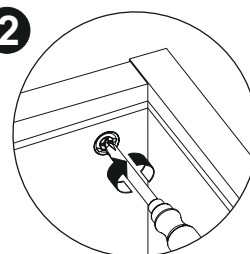


6




B01-20		B05-185		B01-90	
4x	7,0x70	4x		4x	3,5x20




1

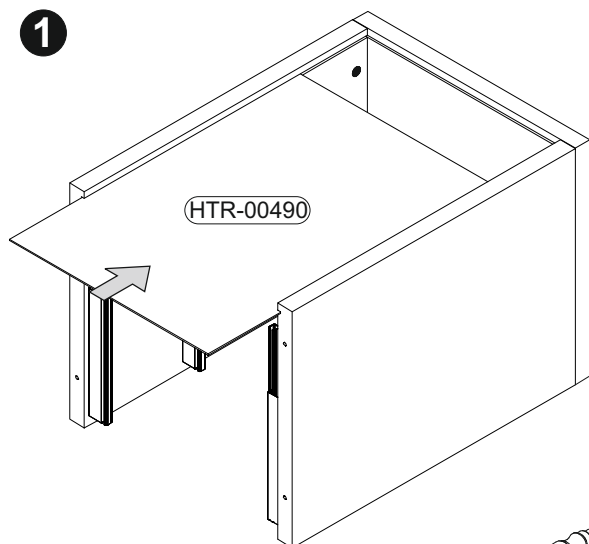

2


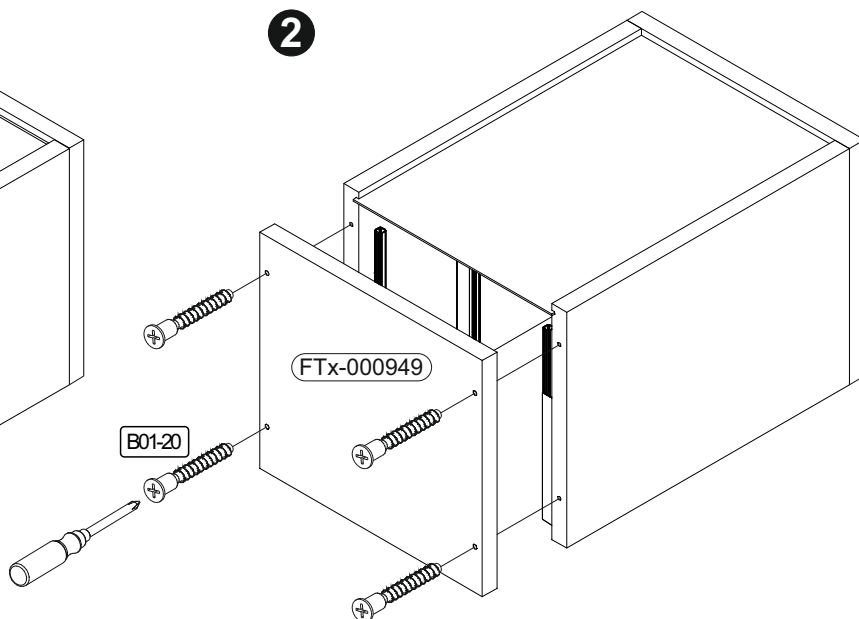


3

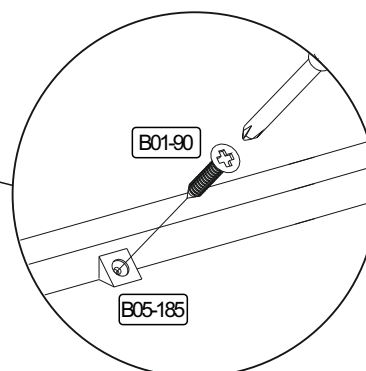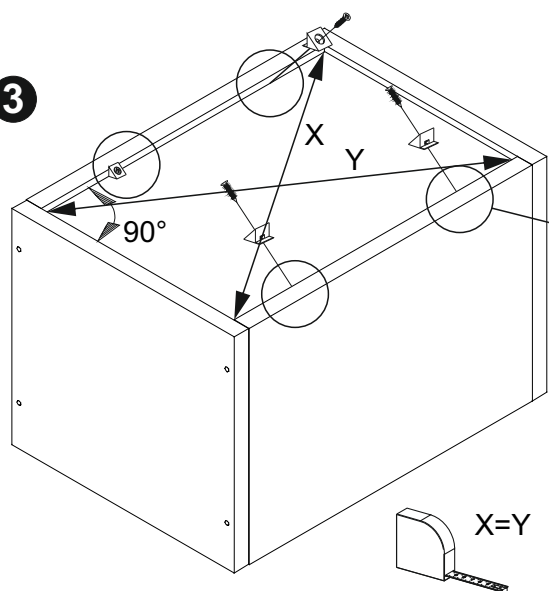




B01-123		B02-173	
8x	4,0x15	4x	


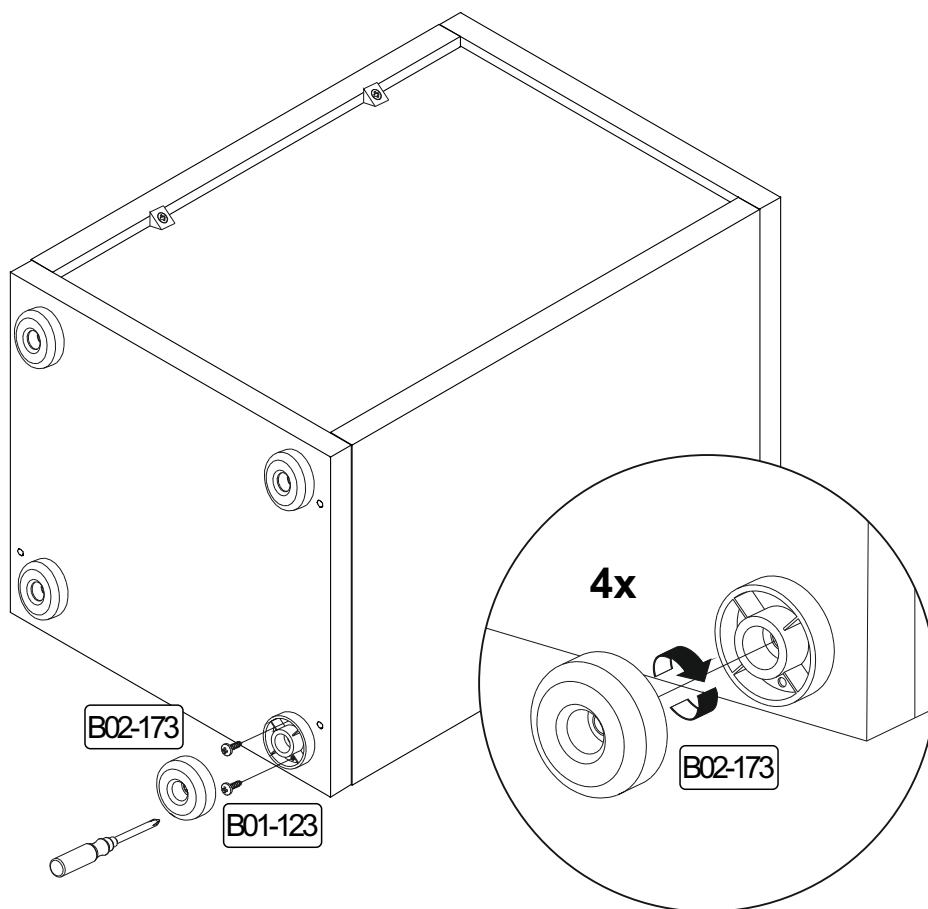
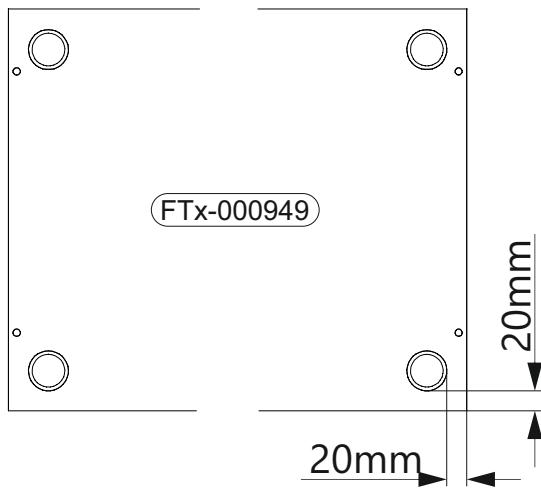






SCAN ME

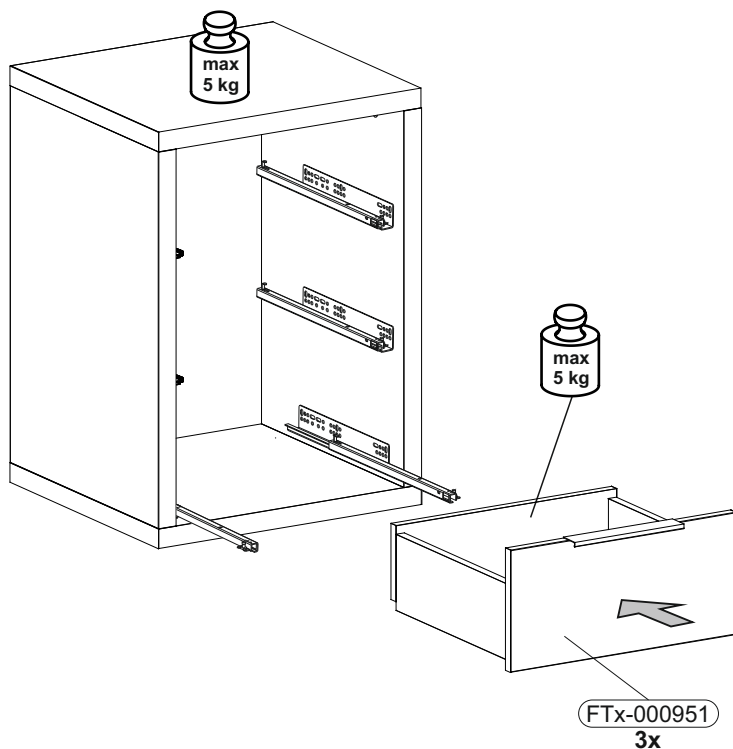

1

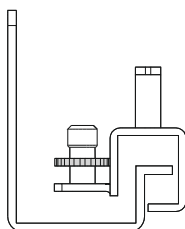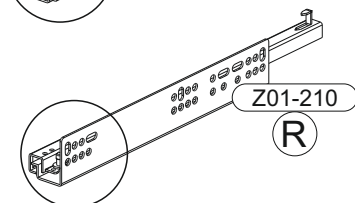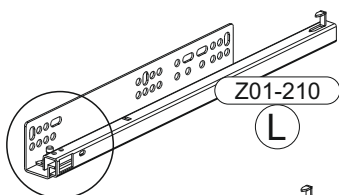


Die Stellräder, die der Höhenverstellung dienen nach ganz unten drehen

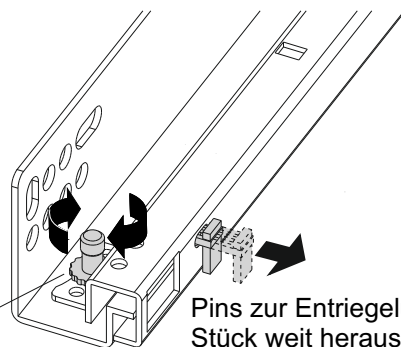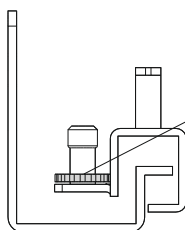


Pins zur Entriegelung ein Stück weit herausziehen

2

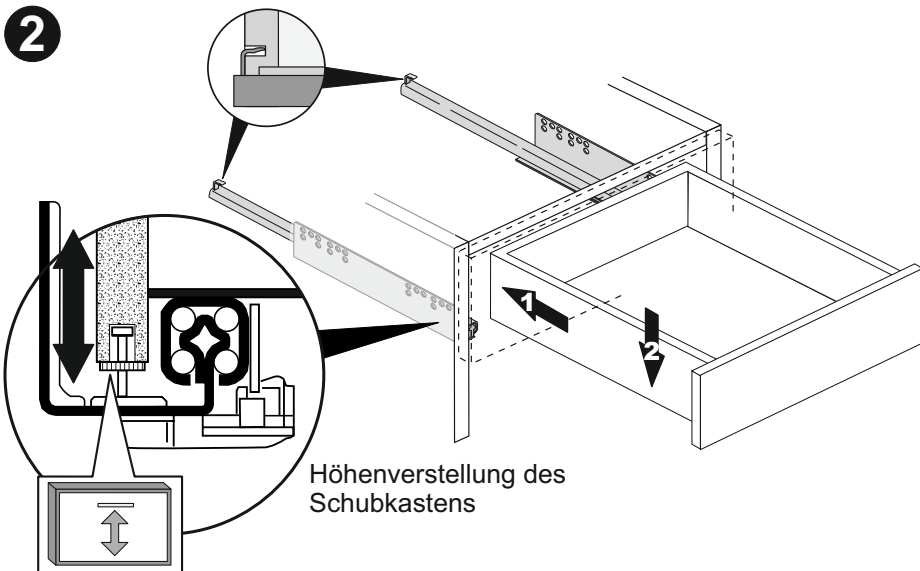

3

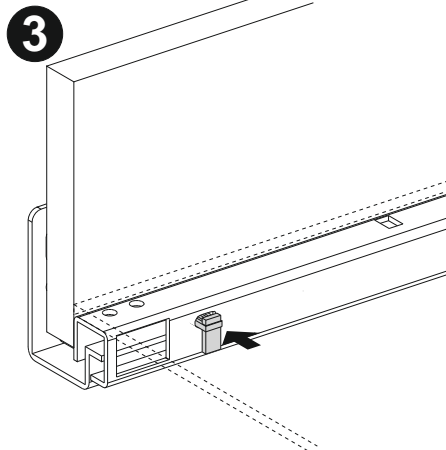

Nach dem Einsetzen und Einstellen der Schubkästen Pins zur Verriegelung eindrücken!