

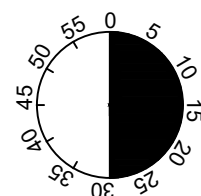
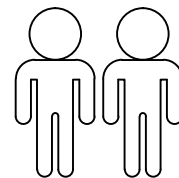



BAREA

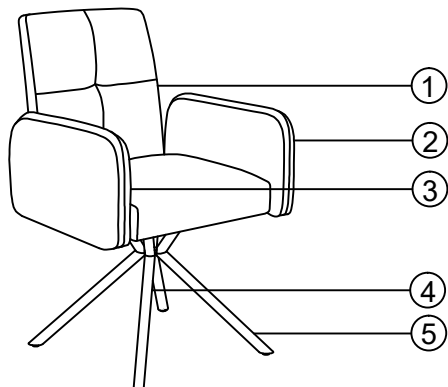

1

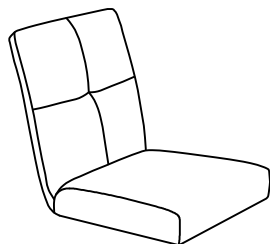


2

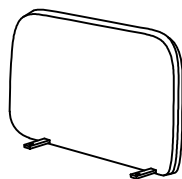


R

3

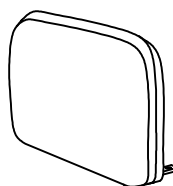


L


4

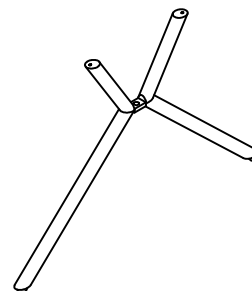

5

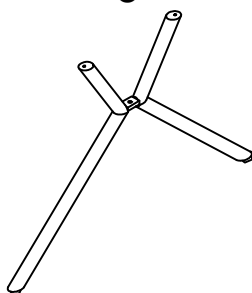


6

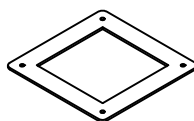


FAP 185x185mm AR

7

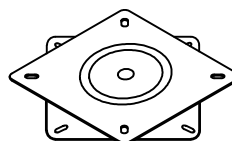

DT 180° AR 195X195mm

1	1x
2	1x
3	1x
4	1x
5	1x
6	1x
7	1x



1/1

A


M6X20



9x

B

M6X30



4x

C

M6



4x

D


Ø18xØ6x1.5



13x

E


4MM




1x


I.


1

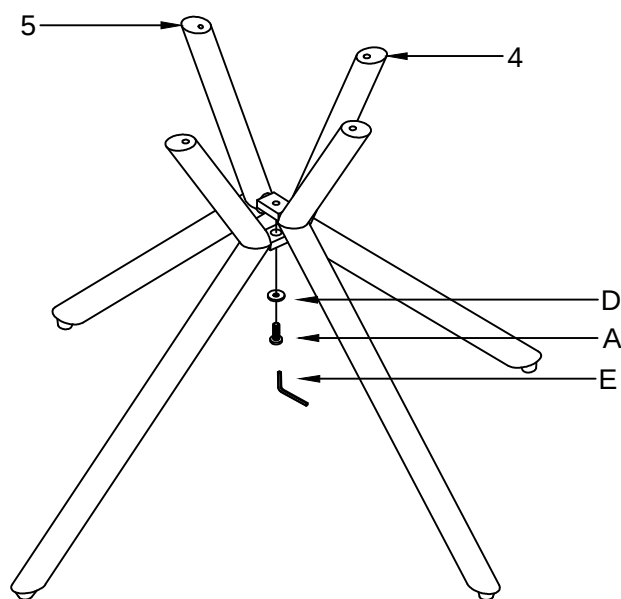

A	M6x20
	 1x
D	Ø18xØ6x1.5
	 1x
E	4MM
	 1x
 75%	


2

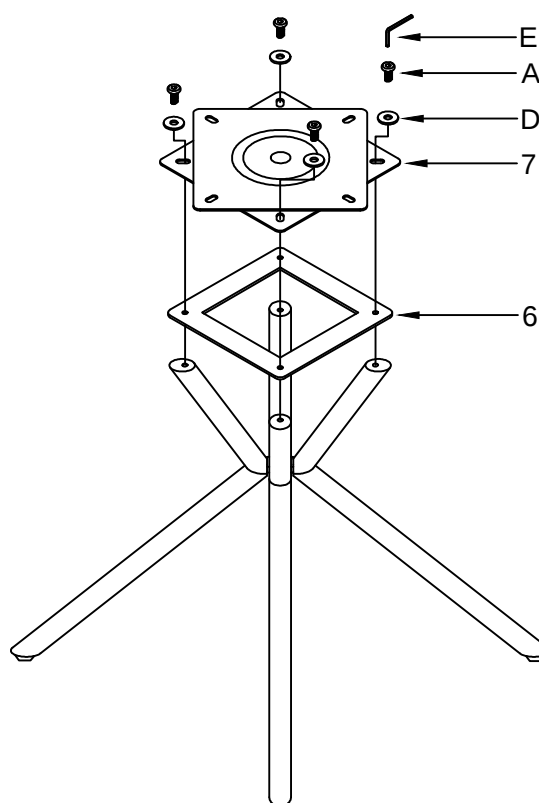


A	M6x20
	 4x
D	Ø18xØ6x1.5
	 4x
E	4MM
	 1x
 100%	


II.

3

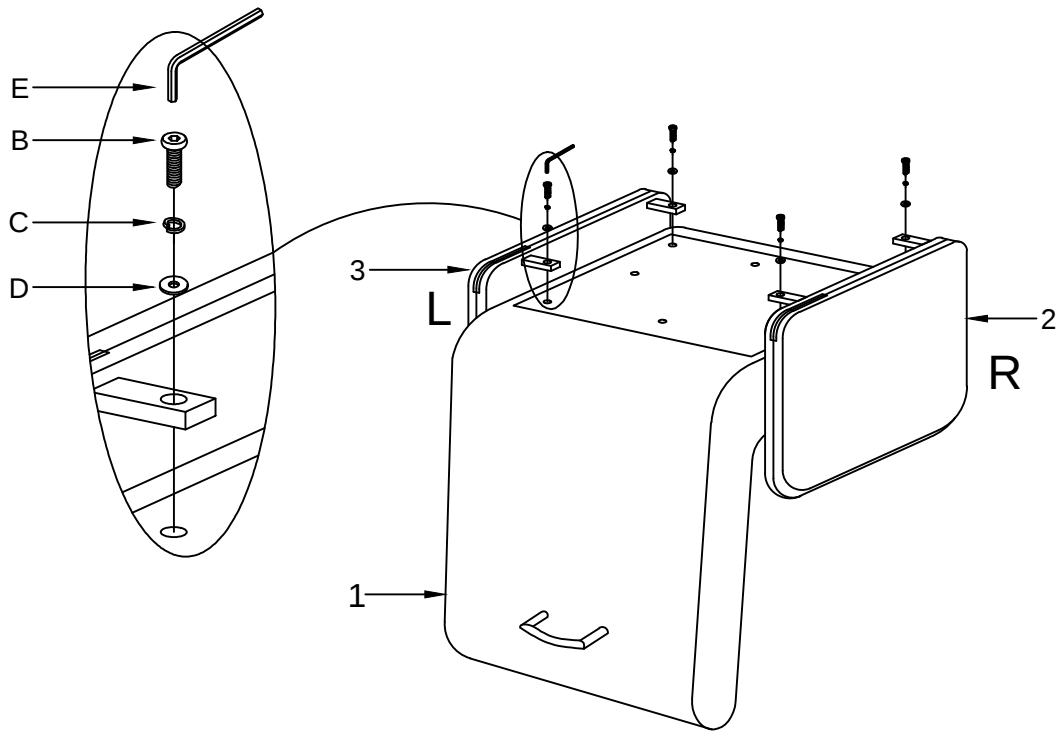


B	M6x30
	4x
C	M6
	4x
D	Ø18xØ6x1.5
	4x
E	4MM
	1x
	

4

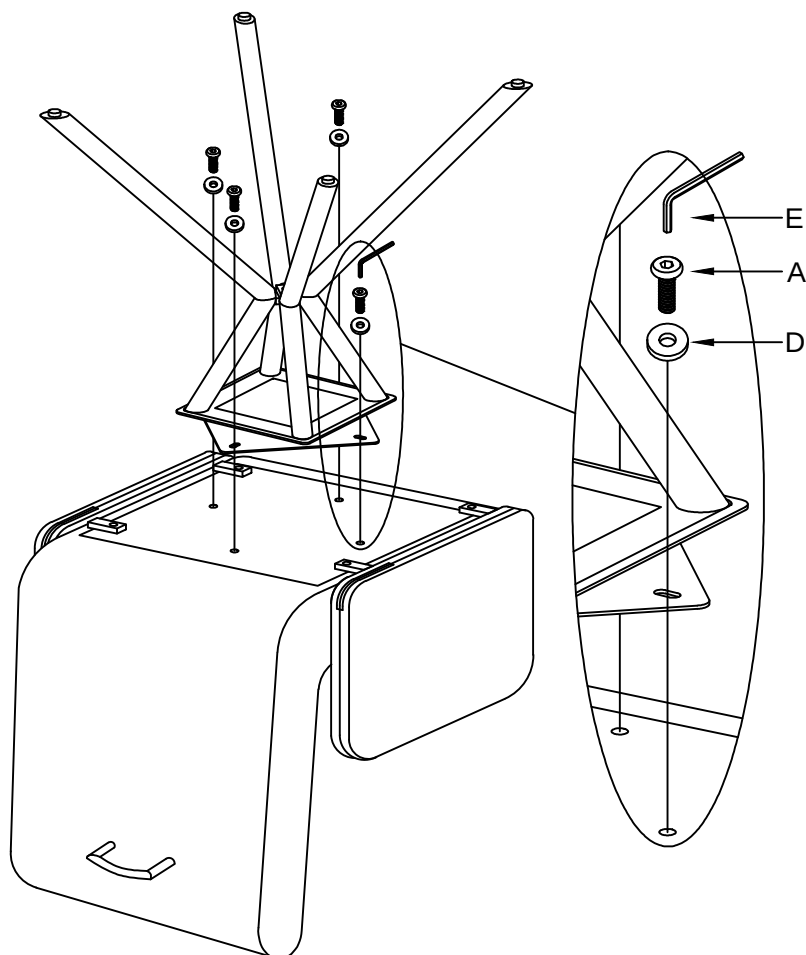

A	M6x20
	4x
D	Ø18xØ6x1.5
	4x
E	4MM
	1x
	

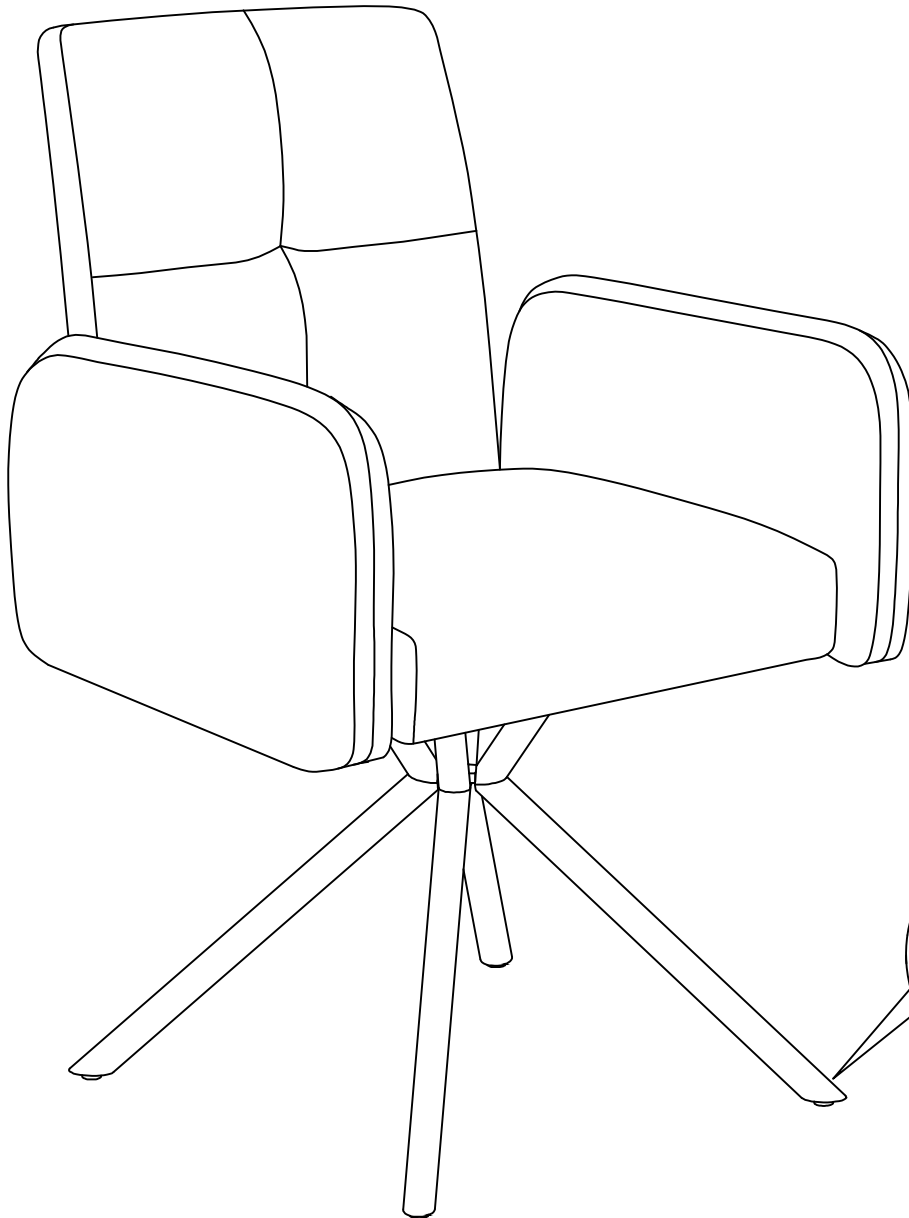

Séparez les éléments avant de trier