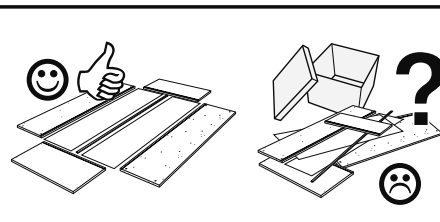
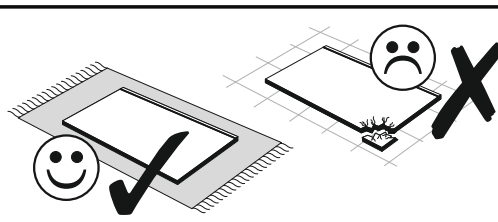
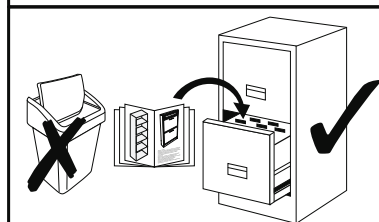
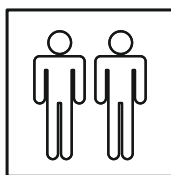
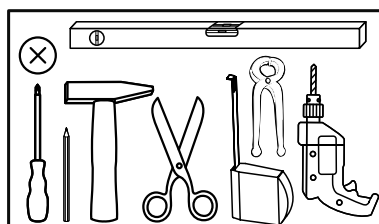
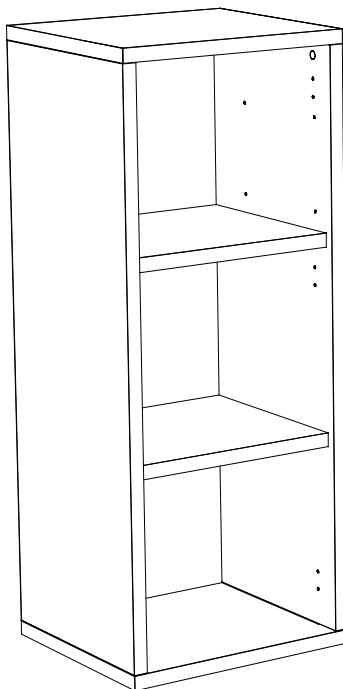




Artikel.-Nr.:

Montageanleitung.-Nr.:


2000-R-44x111**MA1-00566**


Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00664 Colli 1/1


B01-20		B01-30		B01-90		B05-185	
4x	7,0x70	6x	3x16	4x	3,5x20	4x	
B02-10		B02-20		B05-20		B08-80	
12x	ø15x12mm	12x		4x		1x	

BT1-00005 Colli 1/1


B01-123		B02-173	
8x	4,0x15	4x	




Colli 1/1

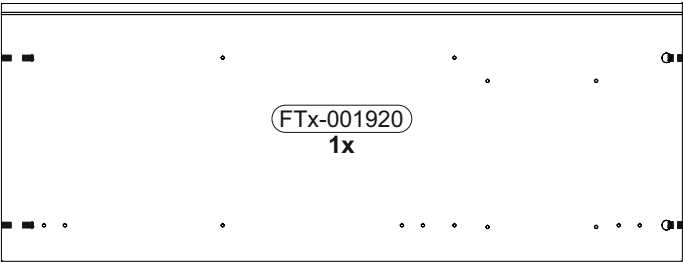


1042x394

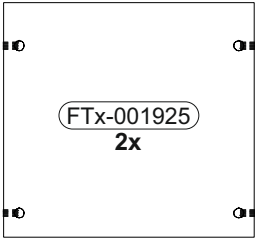


384x359

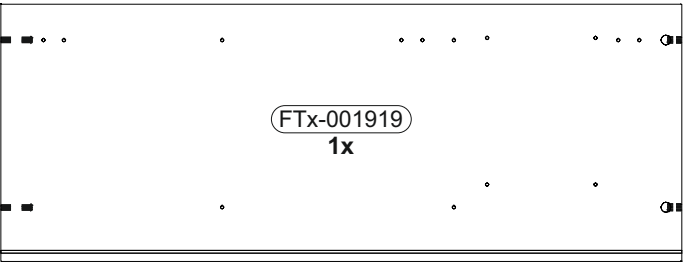


1042x394

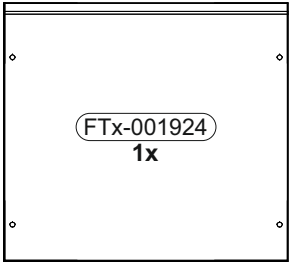





435x395

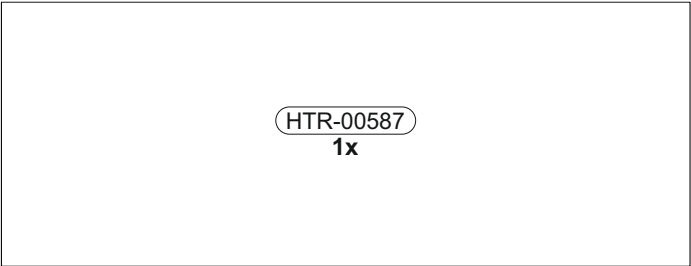



1054x396

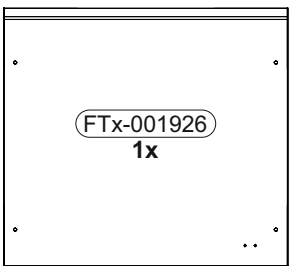


435x395

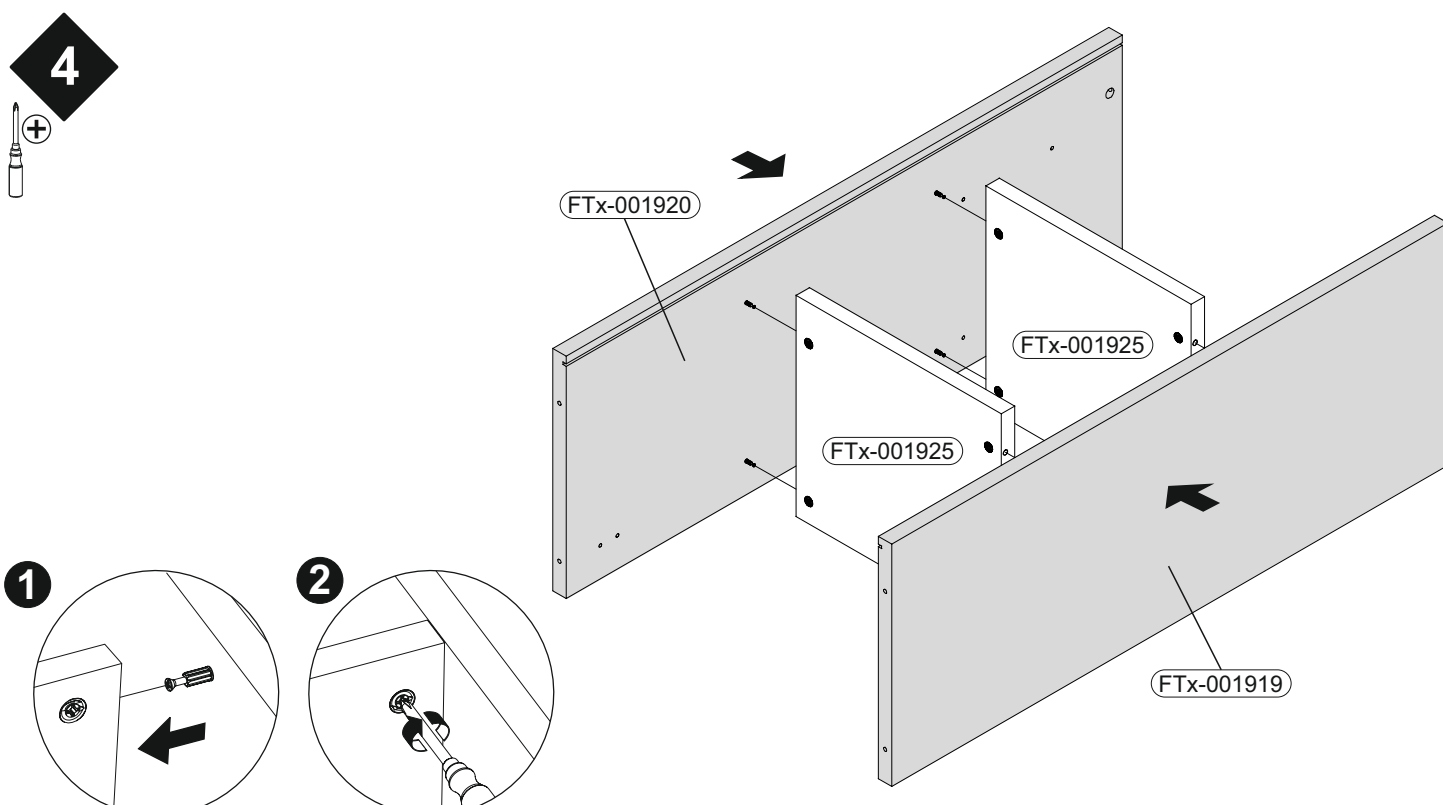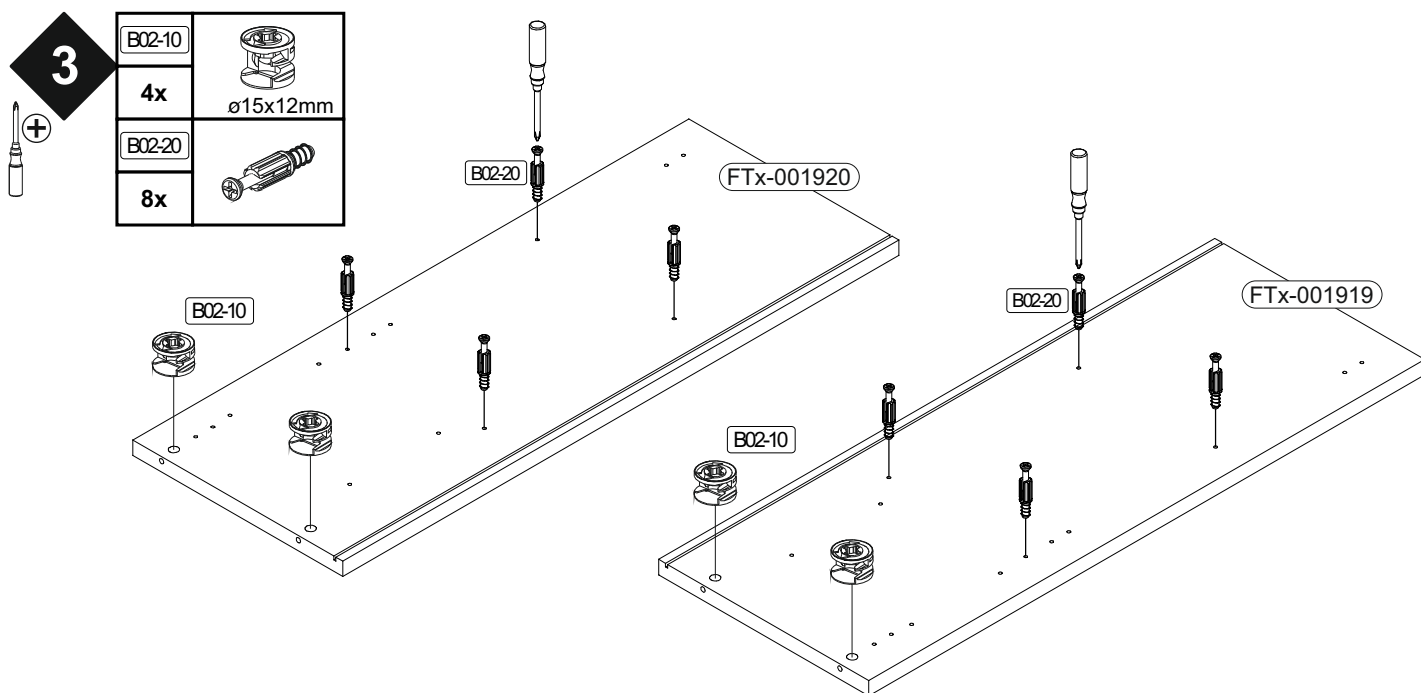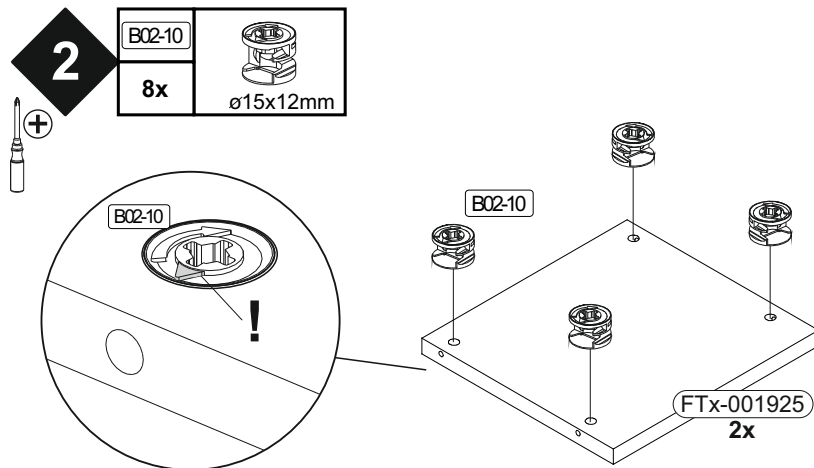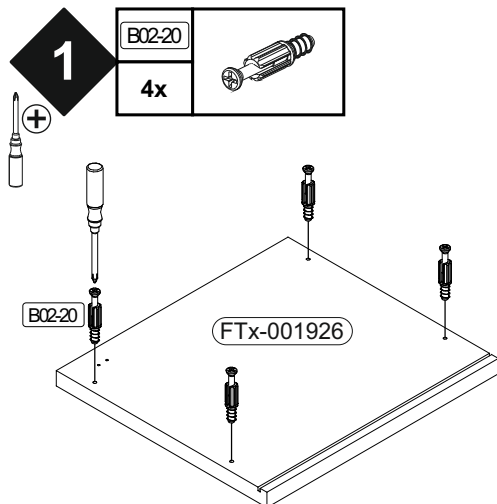


5

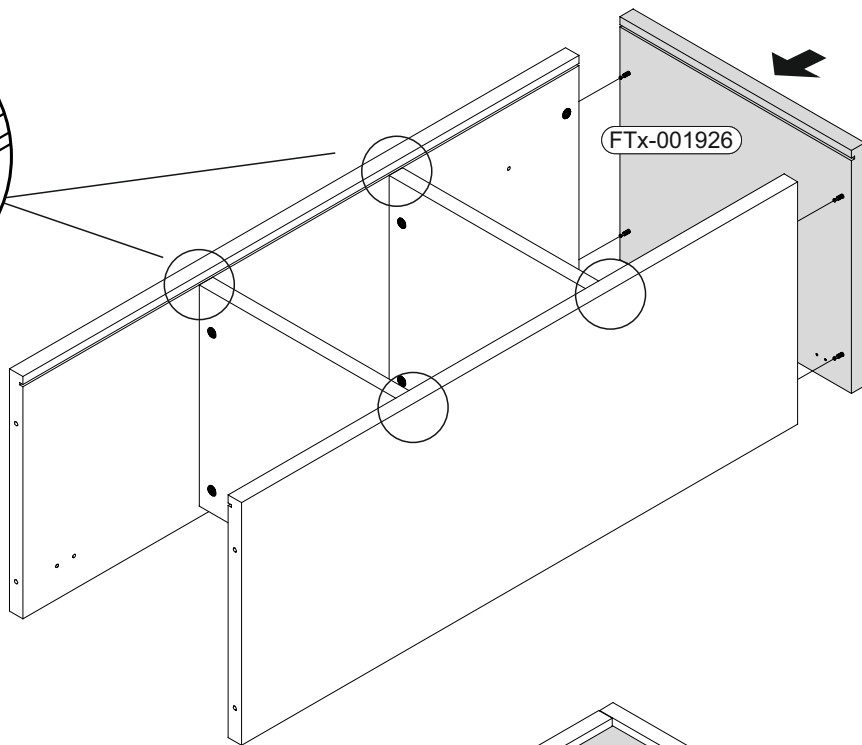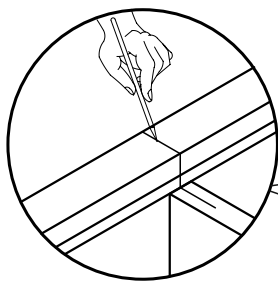

1

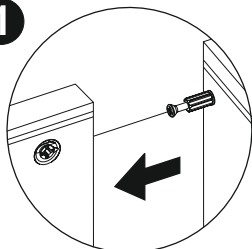



2

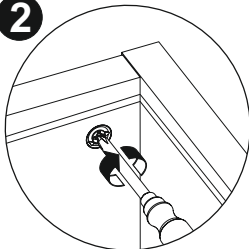

6





B01-20	
4x	7,0x70

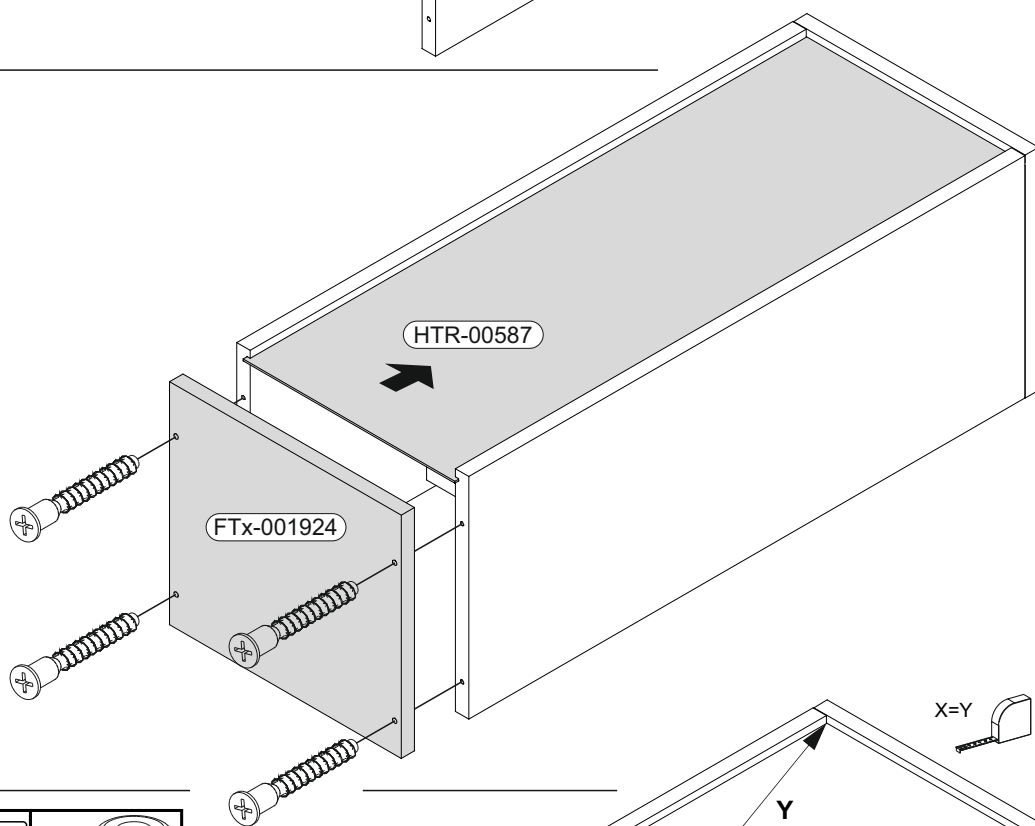




7








B01-123		B02-173	
8x	4,0x15	4x	

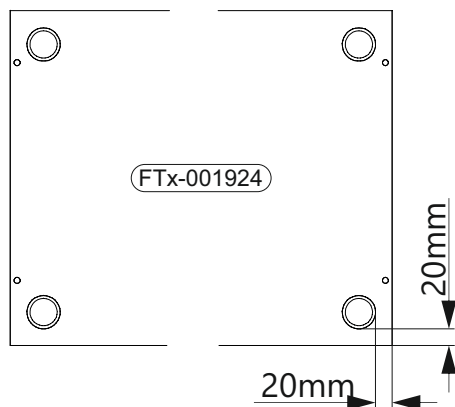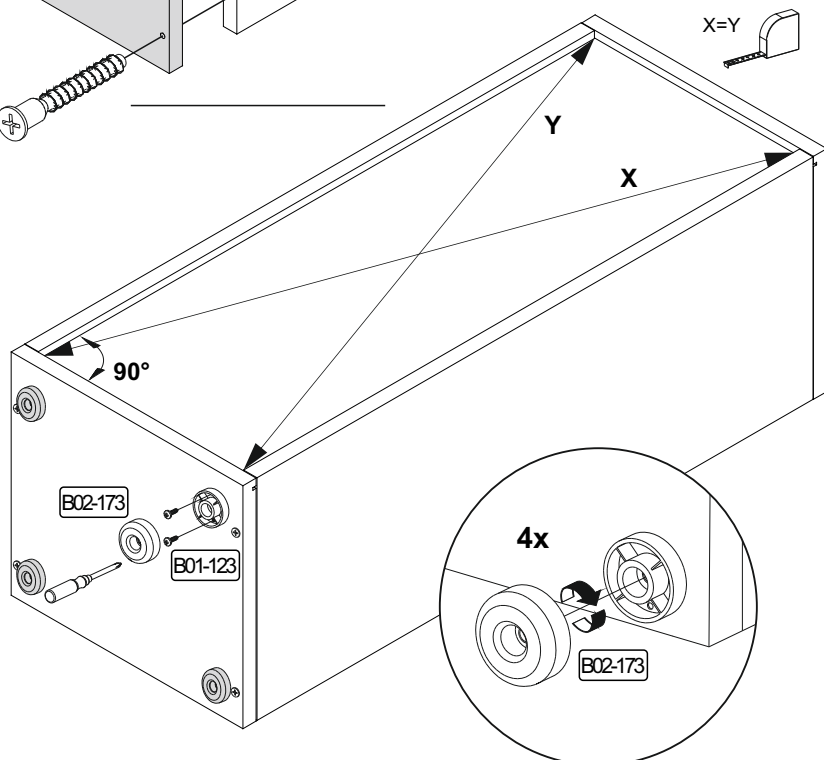

8	B01-30		3x16
	6x		
	B01-90		3,5x20
	4x		
	B05-185		
	4x		

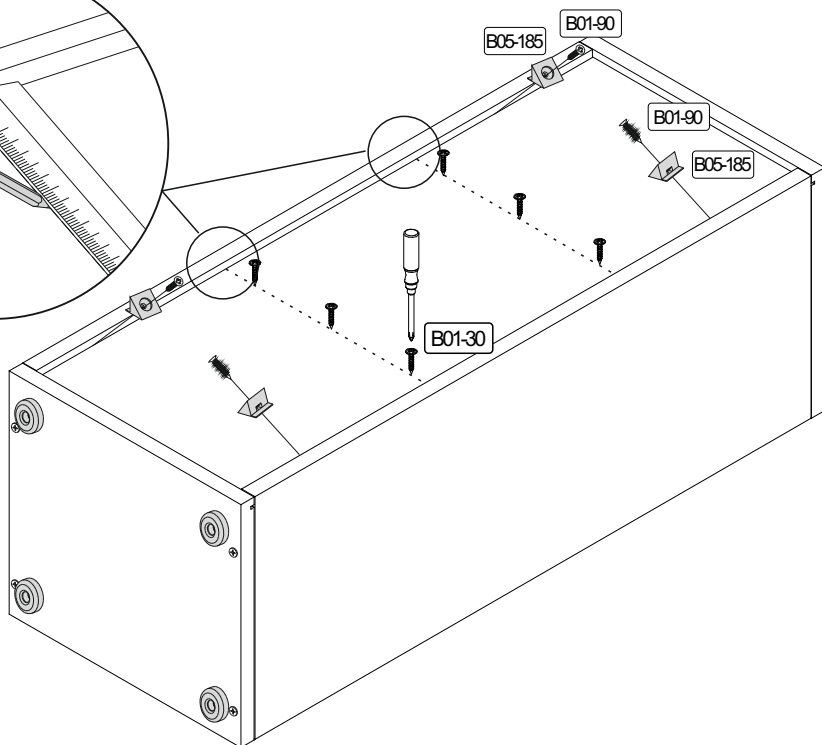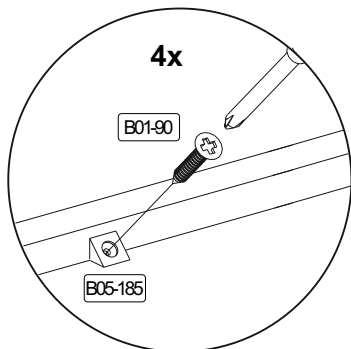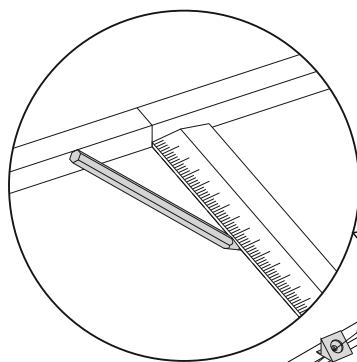

9	B08-80		B05-20	
	1x		4x	

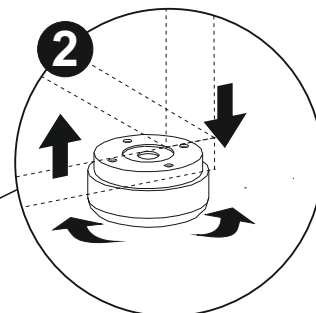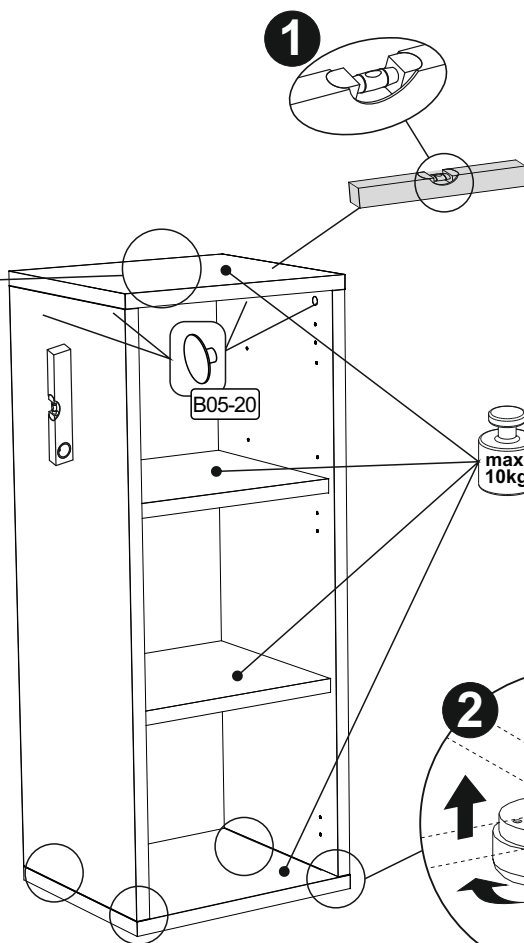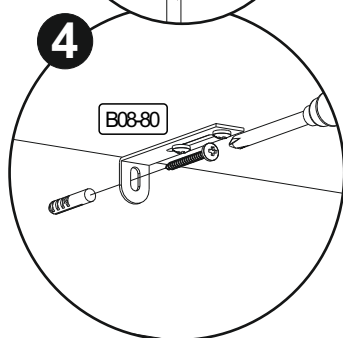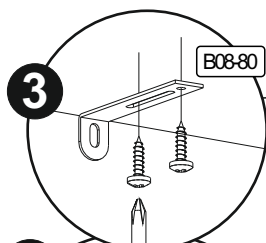

SCAN ME

 Achtung • Attention 	
(D)	Wandbefestigung dient als Kippschutz - unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping - be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!