



TATUM DINING CHAIR



(1) TIGHTEN BOLTS FROM THE SEAT FOR 80%

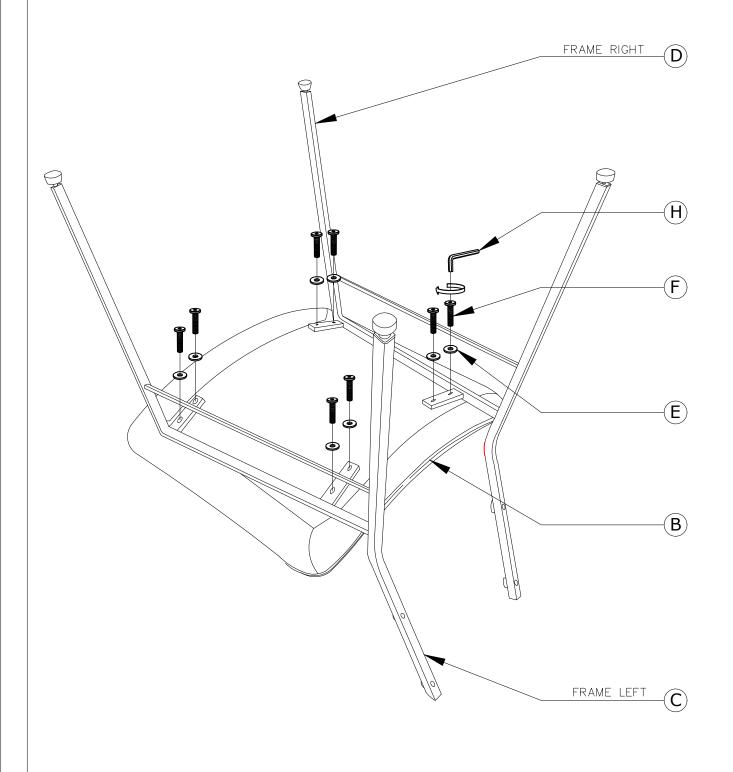

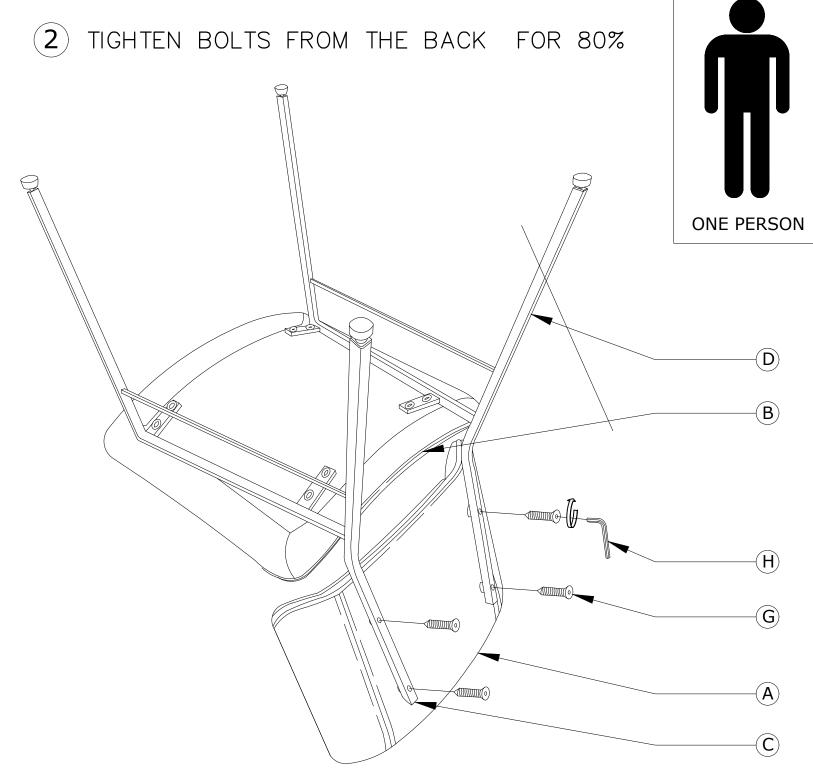


NO:	А	В	С	D	Е	F	G	Н
FITTINGS								
	BACK	SEAT	FRAME LEFT	FRAME RIGHT	O-RING	M6X30MM	M6X55MM	4MM
QTY:	1	1	1	1	8	8	4	1




ONE PERSON



TURN AROUND THE CHAIR AND MAKE IT STABLE ON THE GROUND

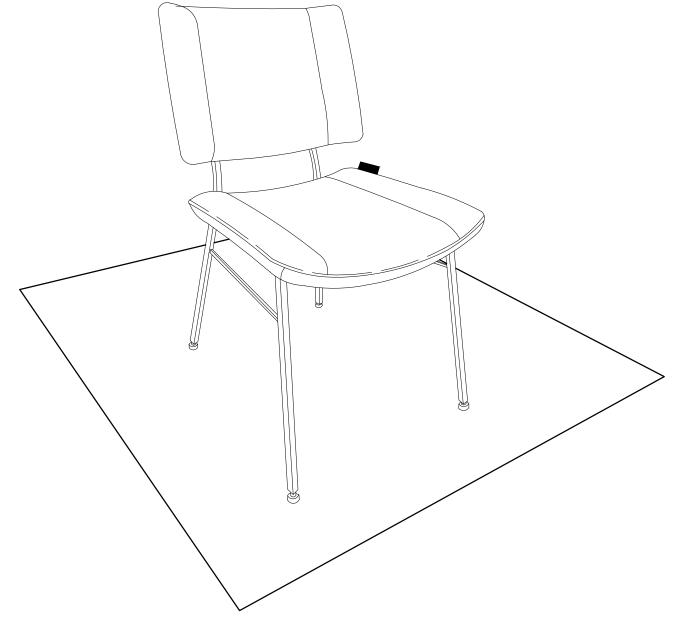

(4) TIGHTEN ALL BOLTS FOR 100%, FINISHED

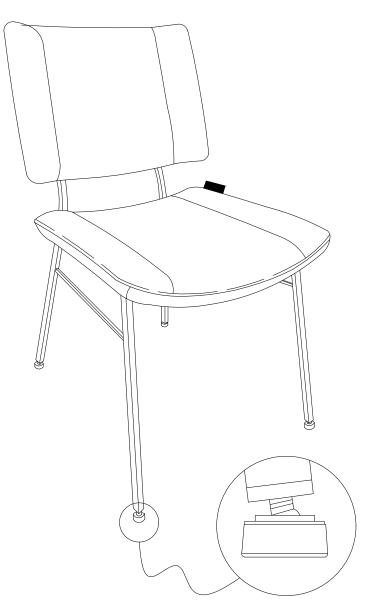

IF THE CHAIR IS NOT STABLE AFTER ASSEMBLING, PLEASE ADJUST THE PLASTIC FEET TO MAKE IT STABLE.



NO:	Α	В	С	D	Е	F	G	Н
FITTINGS:								
	BACK	SEAT	FRAME LEFT	FRAME RIGHT	O-RING	M6X30MM	M6X55MM	4MM
QTY:	1	1	1	1	8	8	4	1